



Soodar User Manual

Release 22.04

Soodar

Jun 10, 2023

CONTENTS:

- 1 Soodar User Guide** **1**
- 1.1 Introduction 1
- 1.2 Basics 2
- 1.3 Tune 48
- 1.4 Protocols 55
- 1.5 NAT 183
- 1.6 Qos 186
- 1.7 Access Control List 189
- 1.8 VRF 194
- 1.9 MPLS 195
- 1.10 Security 196
- 1.11 L2 Features 224

- 2 Indices and tables** **231**

- Bibliography** **233**

- Index** **235**

SODAR USER GUIDE

1.1 Introduction

1.1.1 Overview

Sodar, new generation of high-capacity, enterprise, core routers, is a recent product in network's industry. Using the latest technologies and improvements in network's domain, make it a robust and reliable choice for being employed in network designs. Implementing a Cisco-wise CLI in control plane and providing a wide range of monitoring tools, ease network administrators getting familiar with product and make them more comfortable with it. The data plane, is the beating heart of Sodar. Equipping a fully-optimized software based data plane with Sodar assures high throughput on router.

Sodar can be used in vast different networks, but it is highly optimized to be used as a router in:

- MPLS core networks
- IPv4/6 core networks
- Data centers

The heart of Sodar, is its operator system. SodarOS.

SodarOS

SodarOS is a routing operating system based on linux, that provides a reliable control-plane and a fast, software based data-plane with all state-of-the-art technologies.

To achieve this, SodarOS leverages two known software suites:

- FRR for control-plane
- VPP for data-plane


FRR is a software suite that provides TCP/IP based routing services with routing protocols support such as BGP, RIP, OSPF, IS-IS and more . FRR also supports special BGP Route Reflector and Route Server behavior. In addition to traditional IPv4 routing protocols, FRR also supports IPv6 routing protocols.

VPP is an extensible framework that provides out-of-the-box production quality switch/router functionality. It is a high performance, packet-processing stack that can run on commodity CPUs with a rich feature set.

SodarOS uses an advanced software architecture to provide you with a high quality router. SodarOS has an interactive user interface and supports common client commands.

Architecture

The following figure, shows SoodarOS components and their relationship

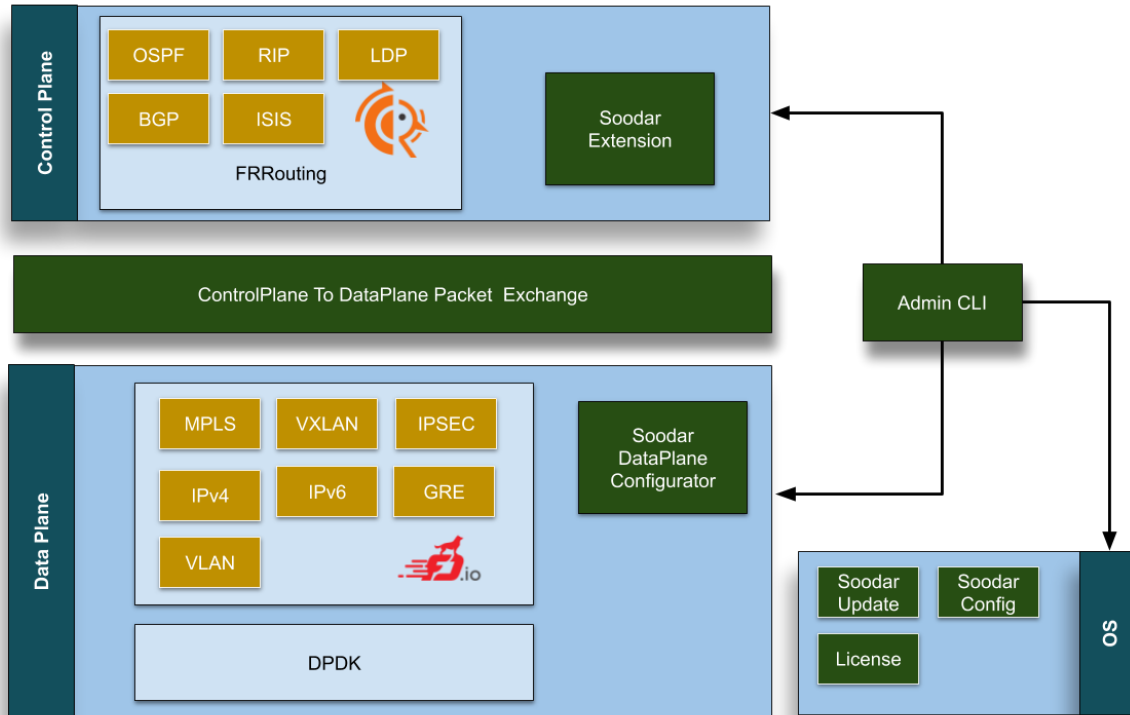

1.2 Basics

1.2.1 Modes and user's configurations

Connect to SoodarOS

There are 3 ways of connecting to router for configuring:

- **Physical connection:**
 1. Direct connection(via monitor and keyboard)
 2. Console connection(RS-232)
- **Remote connection:**
 1. SSH connection

Remote connection

Using well-known *SSH Protocol*, enabled router remote access.

Example : Having a management interface with address 192.168.1.1/24:

```
m@m-pc:~$ ssh admin@192.168.1.1
admin@192.168.1.1's password:
```

Users

Currently, only one *admin* user is available, named *admin*. It is the username that is used with *SSH* connection.

Modes

- **View mode** Admin has access to some **show** commands to view the router's state.
- **Enable mode:** Admin can't change the router's configs. But he can enable *debug* commands and some more privileged commands than *view mode*
- **Config mode:** Full access to the router.

Passwords

SoodarOS is protected by 3 levels of passwords:

1. Access password
2. Enable password
3. Config password

Access password

It's the primary password to log in with the user. Without having the access password, a person can't have any access to the router. An admin with knowing only *access password* is an admin with just *view mode* privilege.

password

Change access password

Enable password

Put an admin in *enable mode*. It is asked when the admin issues the **enable** command.

enable password PASSWORD

Set enable password

no enable password PASSWORD

Disable enable password.

Config password

Is asked when the admin inputs `configure` in the command line to enter *config mode*.

enable config password PASSWORD

Set config password

no enable config password PASSWORD

Disable config password

Reset access password

In case access password is forgotten, connect to soodar via *console* and enter `user password`

user password

Reset access password. enabled when connected through physical access.

Password length

To force users to set strong passwords, admin can set a minimum length for passwords.

security passwords min-length

Apply a minimum password length policy to the system. Default of 8 characters is set as passwords' minimum length.

```
soodar(config)# security password min-length 8
```

no security passwords min-length

Remove all restrictions about password length.

Login Failures

Admin can ask for details of failed logins. These details are:

User name: The user who was tried to log in to(currently just admin) **Medium:** Whether it was through SSH or Console **Address:** In case of the remote login attempt, IP address of the initiator machine. Else it's *0.0.0.0*. **Date:** Attempting date

show login failures

Example:

```
soodar# show login failures
admin  ssh:notty      192.168.1.13   Thu Sep 17 09:18
admin  ssh:notty      192.168.1.13   Thu Sep 17 09:18
admin  ssh:notty      192.168.1.13   Thu Sep 17 09:18
```

Note: Login logs are stored only for 1 month.

Session Management

SoodarOS' admin can protect the router from DoS attacks and prevent network exhaustion by limiting the SSH authentication tries in a period and blocking the abuser's IP. Also, he can see currently established sessions and terminate them.

show users

Show current running sessions. Includes line number, session type(console or SSH), session ID, and IP address of the remote user

clear line (0-530)

Clear a TTY line and make it usable by terminating the session on that line.

Note: Clearing a line causes all sessions with the same session ID as the cleared session to terminate. In a normal situation, each line has its session ID. But if multiple sessions are run on a single SSH connection, they share the same session ID

login block-for TIME attempts ATTEMPT within PERIOD

Set SSH jailing parameters. If someone tries ``ATTEMPT``(a number in 1 to 10 range) unsuccessful login attempts within ``PERIOD``([30-600]) seconds, his IP address will be limited for next ``TIME``([10-7200]) seconds. Default values are 600 seconds of jail time for 5 attempts in 30 seconds.

show login blocked-ips

Show in jail IPs.

login unblock <A.B.C.D|X:X::X:X|all>

Unblock an IP and release it from jail. Admin can unblock all blocked IPs with all as command input.

MOTD

Sometimes system administrator needs to set a message, so every user attempting to log in can see it. This could be done by setting a MOTD banner.

banner motd line LINE

Set motd string from an input.

SSH

Soodar serves as a client for the SSH and as an SSH server. Therefore, key management options are provided to users.

SSH Server

ip ssh pubkey-chain

Enter SSH server authorized keys management node.

username USER

Enter authorized public key management node for a user. Any SSH connection attempt to the user with an authorized public key is accepted.

key LINE ..

Add a public key to the user's authorized keys.

no key HASH

Remove a public key from the user's authorized keys by its hash.

no key (1-65535)

Remove a public key from the user's authorized keys by its index in the keys list.

show ip ssh pubkey-chain [verbose] [USER]

Show current authorized keys database for USER(if USER is not provided, show database of all users). if verbose option is activated, output complete keys instead of keys' hashes.

Example:

```
soodar# show ip ssh pubkey-chain
List is empty
soodar# conf ter
soodar(config)# ip ssh pubkey-chain
soodar(config-ssh-pubkey)# username admin
soodar(config-ssh-pubkey-user)# key ssh-rsa
  → AAAAB3NzaC1yc2EAAAADAQABAAQChX8nvRsv/nmZE8r+ljuVjiwe8riTt+kmSils44/
  → Wr+EFWbncx/E39QugQba+0I21/wn17bHbQitMMnXjINUITzqwTnnYQ
ekwSFjBuZKwKe4i0fYoYH2cqySHiecGJHaRD40Jw/
  → 6+FTDK4c0PdBIg1Vd3hF8H+bCyberpEzaJKwN2WBV4Pp2QQSU4hcIag0CB/5uk2Nb08/Ewa/
  → cVG3uPURzDWA2RRh5SI320clRyYDkmrcPv6zcZ81tFx1t6F12N0/U12n/
  → XQw+5YEL8H1bGEeQVG+p4eHuOBjP4Ta1Pz75F10s/
  → bylGQzTGlSrH4tAz7nj011XdAVAJ4ZuQ35KIwh0sVzEKVwZ9ZRFvOH4P0ijL59f/
  → VRD878v7kVrRSKmkZYUoJH4TBSkGEASGUXGYF+zzTI0RAa3+4j9yFaUMJJ1j10aMq+FshykuX+3DpBKYQ3of3KWNfLHRCGYao7Eh3QOCxUCN5DuAtYhAd/vzF3Dkyan06LnnbCYkg7SFzWE= temp@test
soodar# show ip ssh pubkey-chain
admin:
  1: W7tjsK1S4C+CfmfjQSzjiRQHPnHNmhfjbmMyOE02wU temp@test (ssh-rsa)
soodar# show ip ssh pubkey-chain verbose
admin:
  1: AAAAB3NzaC1yc2EAAAADAQABAAQChX8nvRsv/nmZE8r+ljuVjiwe8riTt+kmSils44/
  → Wr+EFWbncx/E39QugQba+0I21/
  → wn17bHbQitMMnXjINUITzqwTnnYQekwSFjBuZKwKe4i0fYoYH2cqySHiecGJHaRD4
  → 0Jw/6+FTDK4c0PdBIg1Vd3hF8H+bCyberpEzaJKwN2WBV4Pp2QQSU4hcIag0CB/5uk2Nb08/Ewa/
  → cVG3uPURzDWA2RRh5SI320clRyYDkmrcPv6zcZ81tFx1t6F12N0/U12n/
  → XQw+5YEL8H1bGEeQVG+p4eHuOBjP4Ta1P
  → z75F10s/bylGQzTGlSrH4tAz7nj011XdAVAJ4ZuQ35KIwh0sVzEKVwZ9ZRFvOH4P0ijL59f/
  → VRD878v7kVrRSKmkZYUoJH4TBSkGEASGUXGYF+zzTI0RAa3+4j9yFaUMJJ1j10aMq+FshykuX+3DpBKYQ3of3KWNfLHRC
  → Gyao7Eh3QOCxUCN5DuAtYhAd/vzF3Dkyan06LnnbCYkg7SFzWE= temp@test (ssh-rsa)
```

SSH Client**ip ssh client**

Enter SSH client known host management mode.

known-host <A.B.C.D|X:X::X:X|HOST>

Add a server's public key(s) (provided by its IP or hostname) to the known hosts' list of current users.

show ip ssh client known-host <A.B.C.D|X:X::X:X|HOST>

Show public keys(if any) of a server stored in the known hosts' list.

Example:

```

soodar# show ip ssh client known-host 192.168.30.50
soodar# conf ter
soodar(config)# ip ssh client
soodar(conf-ssh-client)# known-host 192.168.30.50 ssh-rsa
↪AAAAB3NzaC1yc2EAAAADAQABAAQGCwOU202nNjGXIN5VT1Q0j7+H9kQQ9FnE0s19aPQb0g/
↪Sw1ryZyuUmApUFFABL7MDNZTKzWd3BfYsOB
sXOsKOHIGTZCPLbS93tvHAYlkeIcYDR9JJJEi4A67nN/
↪zXSoT+Ew78iUADjWH6rQSy4dtg+SChFAj3Z9P7TQpK8zWJDLgA28d+zyYSwNd/
↪MkF+EPmAH7mPoKkg2EGCpr889pR5mcBiXPVq69yUNFUG7U0D2aqDaGbaXk9TcfqCrktVmjGVF8rY91TaLMJBngVaYYsnT+xd
↪jZhWtYdB4W/oFPAWa5YFqDRfu+VJdVnrGqIzr8GWR1P0jAjw0sBcQk= HOST-KEY
soodar# show ip ssh client known-host 192.168.30.50
192.168.30.50 RSA SHA256:bYisVirAvDxXqwbmYIn7IEj6Grdkf6BeTYCJ7LS11s0 HOST-KEY
soodar# ssh test@192.168.30.50
test@192.168.30.50's password:

```

```

soodar# show ip ssh client known-host 192.168.30.39
soodar# ssh test@192.168.30.39
The authenticity of host '192.168.30.39 (192.168.30.39)' can't be established.
RSA key fingerprint is SHA256:1J2gRSCd8Wh0CrcPU8s01ZJdrbff2QrGaJ5zBcZ2S4I.
Are you sure you want to continue connecting (yes/no/[fingerprint])? yes
Warning: Permanently added '192.168.30.39' (RSA) to the list of known hosts.
test@192.168.30.39's password:
soodar# show ip ssh client known-host 192.168.30.39
192.168.30.39 RSA SHA256:1J2gRSCd8Wh0CrcPU8s01ZJdrbff2QrGaJ5zBcZ2S4I

```

1.2.2 Basic Config Commands

hostname HOSTNAME

Set hostname of the router.

domainname DOMAINNAME

Set domainname of the router.

log export removable-storage

Export system logs to connected USB removable storage. System logs contains FRR logs and syslogs

log export ssh HOST USER PATH

Export system logs via SSH to HOST. System logs contains FRR logs and syslogs

log export ssh HOST USER PATH

Export system logs via FTP to HOST. System logs contains FRR logs and syslogs

ip host NAME A.B.C.D

Add an entry to know hosts. The negation of this command cause the entry(if exists) be removed.

ip name-server A.B.C.D

Add or remove a Name server.

show clock [json]

Show current date and time

Example:

```
soodar# show clock
      Local time: Thu 2020-09-24 10:15:37 +0330
      Universal time: Thu 2020-09-24 06:45:37 UTC
      RTC time: Thu 2020-09-24 06:45:37
      Time zone: Asia/Tehran (+0330, +0330)
System clock synchronized: yes
      NTP service: active
      RTC in local TZ: no
soodar(config)# do show clock json
{
  "timezone": "Asia/Tehran",
  "local_rtc": "no",
  "can_ntp": "yes",
  "ntp": "yes",
  "ntp_synchronized": "yes",
  "time_usec": "Thu 2020-09-24 10:15:37 +0330",
  "rtc_time_usec": "Thu 2020-09-24 06:45:37"
}
```

clock timezone TIMEZONE

Set system timezone. TIMEZONE is timezone's long name based on IANA TZDatabase

Example:

show daemons status

Show all daemons status on startup. Indicate whether they are enabled or disabled.

service cputime-stats

Collect CPU usage statistics for individual FRR event handlers and CLI commands. This is enabled by default and can be disabled if the extra overhead causes a noticeable slowdown on your system.

Disabling these statistics will also make the *service cputime-warning (1-4294967295)* limit non-functional.

service cputime-warning (1-4294967295)

Warn if the CPU usage of an event handler or CLI command exceeds the specified limit (in milliseconds.) Such warnings are generally indicative of some routine in FRR mistakenly blocking/hogging the processing loop and should be reported as a FRR bug.

The default limit is 5 seconds (i.e. 5000).

This command has no effect if *service cputime-stats* is disabled.

service walltime-warning (1-4294967295)

Warn if the total wallclock time spent handling an event or executing a CLI command exceeds the specified limit (in milliseconds.) This includes time spent waiting for I/O or other tasks executing and may produce excessive warnings if the system is overloaded. (This may still be useful to provide an immediate sign that FRR is not operating correctly due to externally caused starvation.)

The default limit is 5 seconds as above.

service password-encryption

Encrypt password.

line vty

Enter vty configuration mode.

no banner motd

No motd banner string will be printed.

exec-timeout MINUTE [SECOND]

Set VTY connection timeout value. When only one argument is specified, it is used for the timeout value in minutes. The optional second argument is used for the timeout value in seconds. The default timeout value is 10 minutes. When the timeout value is zero, it means no timeout.

no exec-timeout

Do not perform timeout at all. This command is as same as `exec-timeout 0 0`.

1.2.3 Sample Config File

Below is a sample configuration file .

```
!
hostname soodar
enable password admin
enable config password configadmin
!
log stdout
!
!
```

! and # are comment characters. If the first character of the word is one of the comment characters then from the rest of the line forward will be ignored as a comment.

```
enable password admin!password
```

If a comment character is not the first character of the word, it's a normal character. So in the above example ! will not be regarded as a comment and the password is set to `admin!password`.

Terminal Mode Commands

write terminal

Displays the current configuration to the vty interface.

write file

Write current configuration to configuration file.

write erase [A.B.C.D/M A.B.C.D]

Erase all router configurations and replace the default one. The default configuration is setting IP address of `192.168.1.55/24` on interface `ge0`. Admins are able to provide their default IP address and gateway address(both or none should be provided) to be set on `ge0`

configure [terminal]

Change to configuration mode. This command is the first step to configuration.

terminal colorize

Enable/disable color output for terminal

terminal length (0-0-4294967295)

Set terminal display length to (0-0-4294967295). If length is 0, no display control is performed.

list

List all available commands.

show version

Show the current version of SoodarOS and its host information.

show command history

Show entered commands. The history is kept between sessions and is not cleared until an explicit demand of removing history

clear command history [(0-200)]

Clear history command and(if provided) keep the last N commands in history. If N is not provided or it is 0, all history is erased.

show processes

Show current processes running on the router, their PIDs, statuses, and used memory.

Example:

```
soodar# show processes
  PID      LWP      PPID Status      Size Name
   1         1         0 S      22655 systemd
   2         2         0 S           0 kthreadd
   3         3         2 I           0 rcu_gp
   4         4         2 I           0 rcu_par_gp
   6         6         2 I           0 kworker/0:0H-kblockd
   8         8         2 I           0 mm_percpu_wq
   9         9         2 S           0 ksoftirqd/0
  10        10         2 I           0 rcu_preempt
  11        11         2 S           0 migration/0
  12        12         2 S           0 cpuhp/0
  13        13         2 S           0 cpuhp/1
  14        14         2 S           0 migration/1
  15        15         2 S           0 ksoftirqd/1
  17        17         2 I           0 kworker/1:0H-kblockd
  18        18         2 S           0 kdevtmpfs
  19        19         2 I           0 netns
  20        20         2 S           0 rcu_tasks_kthre
  21        21         2 S           0 kauditd
  23        23         2 I           0 kworker/0:1-events
  24        24         2 S           0 oom_reaper
  25        25         2 I           0 writeback
  26        26         2 S           0 kcompactd0
  27        27         2 S           0 khugepaged
  40        40         2 I           0 cryptd
  59        59         2 I           0 kblockd
  60        60         2 I           0 blkcg_punt_bio
  61        61         2 I           0 tpm_dev_wq
  62        62         2 I           0 ata_sff
  63        63         2 I           0 md
  64        64         2 S           0 watchdogd
  65        65         2 S           0 kswapd0
  67        67         2 I           0 acpi_thermal_pm
  69        69         2 I           0 tpm-vtpm
  70        70         2 I           0 nvme-wq
```

(continues on next page)

(continued from previous page)

71	71	2 I	0	nvme-reset-wq
72	72	2 I	0	nvme-delete-wq
73	73	2 S	0	scsi_eh_0
74	74	2 I	0	scsi_tmf_0
75	75	2 S	0	scsi_eh_1
76	76	2 I	0	scsi_tmf_1
77	77	2 S	0	scsi_eh_2
78	78	2 I	0	scsi_tmf_2
79	79	2 S	0	scsi_eh_3
80	80	2 I	0	scsi_tmf_3
81	81	2 S	0	scsi_eh_4
82	82	2 I	0	scsi_tmf_4
83	83	2 S	0	scsi_eh_5
84	84	2 I	0	scsi_tmf_5
89	89	2 I	0	kworker/u4:6-events_unbound
91	91	2 I	0	kworker/0:1H-kblockd
92	92	2 I	0	kworker/1:2-rcu_gp
93	93	2 I	0	raid5wq
94	94	2 I	0	dm_bufio_cache
95	95	2 I	0	ipv6_addrconf
96	96	2 I	0	kworker/u5:0
101	101	2 S	0	jbd2/sda2-8
102	102	2 I	0	ext4-rsv-conver
103	103	2 I	0	kworker/1:1H-events_highpri
108	108	2 S	0	jbd2/sda4-8
109	109	2 I	0	ext4-rsv-conver
150	150	1 S	3299	systemd-udev
179	179	2 S	0	scsi_eh_6
180	180	2 I	0	scsi_tmf_6
181	181	2 S	0	scsi_eh_7
182	182	2 I	0	scsi_tmf_7
183	183	2 I	0	kworker/1:3-dm_bufio_cache
199	199	1 S	37847	rngd
199	212	1 S	37847	rngd
199	213	1 S	37847	rngd
307	307	1 S	3163	soosys
311	311	1 S	12305	systemd-journal
318	318	1 S	605	atd
320	320	1 S	730	crond
321	321	1 S	1082	dbus-daemon
332	332	1 S	3521	snmpd
334	334	1 S	2793	snmptrapd
335	335	1 S	1091	chronyd
340	340	1 R	21304346	vpp_main
340	359	1 S	21304346	eal-intr-thread
348	348	1 S	1520	systemd-logind
350	350	1 S	592	agetty
351	351	1 S	914	login
352	352	1 S	324366	charon-systemd
352	369	1 S	324366	charon-systemd
352	370	1 S	324366	charon-systemd
352	371	1 S	324366	charon-systemd

(continues on next page)

(continued from previous page)

352	372	1	S	324366	charon-systemd
352	373	1	S	324366	charon-systemd
352	374	1	S	324366	charon-systemd
352	375	1	S	324366	charon-systemd
352	376	1	S	324366	charon-systemd
352	377	1	S	324366	charon-systemd
352	378	1	S	324366	charon-systemd
352	379	1	S	324366	charon-systemd
352	380	1	S	324366	charon-systemd
352	381	1	S	324366	charon-systemd
352	382	1	S	324366	charon-systemd
352	383	1	S	324366	charon-systemd
352	384	1	S	324366	charon-systemd
354	354	1	S	110108	f2b/server
354	361	1	S	110108	f2b/observer
354	364	1	S	110108	f2b/f.sshd
354	365	1	S	110108	f2b/a.sshd
354	6750	1	S	110108	f2b/observer
418	418	1	S	3963	watchfrr
433	433	1	S	106344	zebra
433	434	1	S	106344	RCU sweeper
433	435	1	S	106344	zebra_dplane
433	436	1	S	106344	zebra_opaque
433	440	1	S	106344	zebra_apic
438	438	1	S	2330	staticd
458	458	2	I	0	kworker/u4:0-events_unbound
657	657	1	S	1946	systemd
658	658	657	S	22868	(sd-pam)
663	663	351	R	11757	vttysh
5763	5763	2	I	0	kworker/0:2-mm_percpu_wq
7634	7634	433	R	1092	ps

show processes detailed process-id (0-1000000)

Show details of a PID.

Example:

```
soodar# show processes detailed process-id 433
zebra
Process ID      : 433
Parent process ID : 1
Group ID       : 433
Status        : S
Session ID    : 433
User time     : 31
Kernel time   : 17
Priority      : 19
Virtual bytes  : 435585024
Resident pages : 4598
Resident limit : 18446744073709551615
Minor page faults : 851
Major page faults : 2
```

(continues on next page)

(continued from previous page)

```

Threads           : 5
Allowed CPUs      : 0-1
CPU usage         : 0.0%
Memory usage      : 0.6%

```

show processes memory

Show data-plane's main heap usage, data-plane's stats heap usage, and processes' memory usage.

Example:

```

soodar# show processes memory
Dataplane memory heap:
-----
Thread 0 vpp_main
  base 0x7ffffb692a000, size 1g, locked, unmap-on-destroy, name 'main heap'
  page stats: page-size 4K, total 262144, mapped 24279, not-mapped 237865
  numa 0: 24279 pages, 94.84m bytes
  total: 1023.99M, used: 90.17M, free: 933.83M, trimmable: 933.81M

Dataplane stats heap:
-----
Stats segment
base 0x7ffffb0371000, size 31.99m, locked, name 'stat segment'
total: 31.99M, used: 758.05K, free: 31.26M, trimmable: 30.30M
free chunks 16 free fastbin blks 0
max total allocated 31.99M

System processes memory status:
-----

```

PID	Text	Data	RSS	Total	Name
1	0	90620	7460	22655	systemd
2	0	0	0	0	kthreadd
3	0	0	0	0	rcu_gp
4	0	0	0	0	rcu_par_gp
6	0	0	0	0	kworker/0:0H-kblockd
8	0	0	0	0	mm_percpu_wq
9	0	0	0	0	ksoftirqd/0
10	0	0	0	0	rcu_preempt
11	0	0	0	0	migration/0
12	0	0	0	0	cpuhp/0
13	0	0	0	0	cpuhp/1
14	0	0	0	0	migration/1
15	0	0	0	0	ksoftirqd/1
17	0	0	0	0	kworker/1:0H-kblockd
18	0	0	0	0	kdevtmpfs
19	0	0	0	0	netns
20	0	0	0	0	rcu_tasks_kthre
21	0	0	0	0	kauditd
23	0	0	0	0	kworker/0:1-events
24	0	0	0	0	oom_reaper
25	0	0	0	0	writeback
26	0	0	0	0	kcompactd0

(continues on next page)

(continued from previous page)

27	0	0	0	0	khugepaged
40	0	0	0	0	cryptd
59	0	0	0	0	kblockd
60	0	0	0	0	blkcg_punt_bio
61	0	0	0	0	tpm_dev_wq
62	0	0	0	0	ata_sff
63	0	0	0	0	md
64	0	0	0	0	watchdogd
65	0	0	0	0	kswapd0
67	0	0	0	0	acpi_thermal_pm
69	0	0	0	0	tpm-vtpm
70	0	0	0	0	nvme-wq
71	0	0	0	0	nvme-reset-wq
72	0	0	0	0	nvme-delete-wq
73	0	0	0	0	scsi_eh_0
74	0	0	0	0	scsi_tmf_0
75	0	0	0	0	scsi_eh_1
76	0	0	0	0	scsi_tmf_1
77	0	0	0	0	scsi_eh_2
78	0	0	0	0	scsi_tmf_2
79	0	0	0	0	scsi_eh_3
80	0	0	0	0	scsi_tmf_3
81	0	0	0	0	scsi_eh_4
82	0	0	0	0	scsi_tmf_4
83	0	0	0	0	scsi_eh_5
84	0	0	0	0	scsi_tmf_5
89	0	0	0	0	kworker/u4:6-events_unbound
91	0	0	0	0	kworker/0:1H-kblockd
92	0	0	0	0	kworker/1:2-rcu_gp
93	0	0	0	0	raid5wq
94	0	0	0	0	dm_bufio_cache
95	0	0	0	0	ipv6_addrconf
96	0	0	0	0	kworker/u5:0
101	0	0	0	0	jbd2/sda2-8
102	0	0	0	0	ext4-rsv-conver
103	0	0	0	0	kworker/1:1H-events_highpri
108	0	0	0	0	jbd2/sda4-8
109	0	0	0	0	ext4-rsv-conver
150	0	13196	3960	3299	systemd-udev
179	0	0	0	0	scsi_eh_6
180	0	0	0	0	scsi_tmf_6
181	0	0	0	0	scsi_eh_7
182	0	0	0	0	scsi_tmf_7
183	0	0	0	0	kworker/1:3-events_power_efficient
199	0	151388	1028	37847	rngd
307	0	12652	5172	3163	soosys
311	0	49220	16556	12305	systemd-journal
318	0	2420	1628	605	atd
320	0	2920	1844	730	crond
321	0	4328	3448	1082	dbus-daemon
332	0	14084	11056	3521	snmpd
334	0	11172	6800	2793	snmptrapd

(continues on next page)

(continued from previous page)

335	0	4364	2400	1091	chronyd
340	0	85217384	135968	21304346	vpp_main
348	0	6080	4348	1520	systemd-logind
350	0	2368	1812	592	agetty
351	0	3656	3096	914	login
352	0	1297464	12912	324366	charon-systemd
354	0	440432	21636	110108	f2b/server
418	0	16364	11720	4091	watchfrr
433	0	425376	18492	106344	zebra
438	0	9320	4756	2330	staticd
458	0	0	0	0	kworker/u4:0-events_unbound
657	0	7784	6296	1946	systemd
658	0	91472	2068	22868	(sd-pam)
663	0	48612	43816	12153	vtys
5763	0	0	0	0	kworker/0:2-mm_percpu_wq
8135	84	4283	2472	1092	ps

show hardware {cpu | disk | memory}

Show information about the router's hardware.

Example:

```
n1# show hardware cpu disk memory
CPU information
-----
Architecture      : X86_64
Name               : Intel(R) Celeron(R) CPU J1900 @ 1.99GHz
Physical cores    : 4
Total cores       : 4
Max Frequency     : 2415.70Mhz
Min Frequency     : 1332.80Mhz
Current Frequency : 1876.04Mhz
NUMA Nodes       : 1
Total CPU Usage   : 51.7%
Per Core Information:
Core 0:
  Type           : Physical
  Physical Core: 0
  NUMA Node      : 0
  Usage          : 0.0%
Core 1:
  Type           : Physical
  Physical Core: 1
  NUMA Node      : 0
  Usage          : 100.0%
Core 2:
  Type           : Physical
  Physical Core: 2
  NUMA Node      : 0
  Usage          : 68.8%
Core 3:
  Type           : Physical
```

(continues on next page)

(continued from previous page)

```

Physical Core: 3
NUMA Node    : 0
Usage        : 37.9%

Memory information
-----
Total        : 3.74G
Available    : 1.33G
Used         : 2.21G
Percentage   : 64.6%

NUMA 0 Total   : 3.65G
NUMA 0 Available : 1.31G
NUMA 0 Used     : 2.35G
NUMA 0 Percentage: 64.2%

Partitions and Usage
-----
Device: /dev/root
Mountpoint   : /
File system type: ext4
Total Size   : 3.44G
Used         : 1.11G
Free         : 2.13G
Percentage   : 34.2%
Device: /dev/sda4
Mountpoint   : /data
File system type: ext4
Total Size   : 21.96G
Used         : 38.30M
Free         : 20.79G
Percentage   : 0.2%
Device: /dev/sda1
Mountpoint   : /boot/efi
File system type: vfat
Total Size   : 15.95M
Used         : 856064
Free         : 15.13M
Percentage   : 5.1%

```

show memory control-plane

Show information on how much memory is used by control-plane's processes:

Example:

```

soodar# show memory control-plane
top - 11:26:57 up 2:31, 0 users, load average: 1.64, 0.76, 0.56
Tasks: 13 total, 0 running, 13 sleeping, 0 stopped, 0 zombie
%Cpu(s): 3.7 us, 1.2 sy, 0.1 ni, 91.4 id, 3.1 wa, 0.0 hi, 0.5 si, 0.0 st
KiB Mem : 14322432 total, 5440116 free, 4352300 used, 4530016 buff/cache
KiB Swap: 2097148 total, 2097148 free, 0 used. 9377520 avail Mem

```

(continues on next page)

(continued from previous page)

PID	USER	PR	NI	VIRT	RES	SHR	S	%CPU	%MEM	TIME+	COMMAND
164	frr	20	0	311388	7792	2224	S	0.0	0.1	0:00.00	bgpd
297	frr	20	0	85136	5416	3136	S	0.0	0.0	0:00.00	eigrpd
288	frr	20	0	85556	5960	3436	S	0.0	0.0	0:00.00	isisd
273	frr	20	0	85736	5824	3384	S	0.0	0.0	0:00.00	ldpd
217	frr	20	0	84248	5072	4152	S	0.0	0.0	0:00.00	ldpd
216	frr	20	0	84096	5052	4140	S	0.0	0.0	0:00.00	ldpd
266	frr	20	0	85432	5628	3172	S	0.0	0.0	0:00.00	ospf6d
192	frr	20	0	86036	6456	3740	S	0.0	0.0	0:00.03	ospfd
176	frr	20	0	85124	5684	3416	S	0.0	0.0	0:00.00	ripd
184	frr	20	0	84812	5488	3372	S	0.0	0.0	0:00.00	ripngd
281	frr	20	0	84628	4028	2168	S	0.0	0.0	0:00.00	staticd
100	root	20	0	83924	3676	2432	S	0.0	0.0	0:00.04	watchfrr
154	frr	20	0	2689096	27420	5592	S	0.0	0.2	0:00.02	zebra

show memory control-plane details

Show information on how much memory is used by control-plane's processes in details

Example:

```
soodar# show memory control-plane details
System allocator statistics:
  Total heap allocated: 1584 KiB
  Holding block headers: 0 bytes
  Used small blocks: 0 bytes
  Used ordinary blocks: 1484 KiB
  Free small blocks: 2096 bytes
  Free ordinary blocks: 100 KiB
  Ordinary blocks: 2
  Small blocks: 60
  Holding blocks: 0
(see system documentation for 'mallinfo' for meaning)
--- qmem libfrr ---
Buffer          :          3          24          72
Buffer data     :          1        4120        4120
Host config     :          3 (variably sized)    72
Command Tokens  :        3427          72    247160
Command Token Text :        2555 (variably sized)  83720
Command Token Help :        2555 (variably sized)  61720
Command Argument :          2 (variably sized)    48
Command Argument Name :        641 (variably sized) 15672
[...]
--- qmem Label Manager ---
--- qmem zebra ---
ZEBRA VRF       :          1          912          920
Route Entry     :         11          80          968
Static route    :          1         192          200
RIB destination :          8          48          448
RIB table info  :          4          16           96
Nexthop tracking object :          1         200          200
Zebra Name Space :          1         312          312
--- qmem Table Manager ---
```

Below these statistics, statistics on individual memory allocation types in SoodarOS (so-called *MTYPES*) is printed: * the first column of numbers is the current count of allocations made for

the type (the number decreases when items are freed.)

- the second column is the size of each item. This is only available if allocations on a type are always made with the same size.
- the third column is the total amount of memory allocated for the particular type, including padding applied by malloc. This means that the number may be larger than the first column multiplied by the second. Overhead incurred by malloc's bookkeeping is not included in this, and the column may be missing if system support is not available.

find COMMAND...

This command performs a simple substring search across all defined commands in all modes. As an example, suppose you're in enable mode and can't remember where the command to set router-id is:

```
Soodar# find router-id
(config) router-id A.B.C.D [vrf NAME]
```

show thread cpu control-plane [details [r|w|t|e|x]]

This command displays control-plane run statistics for all the different event types. If no options is specified all different run types are displayed together. Additionally you can ask to look at (r)ead, (w)rite, (t)imer, (e)vent and e(x)ecute thread event types.

Pipe Actions

CLI supports optional modifiers at the end of commands that perform postprocessing on command output or modify the action of commands. These do not show up in the ? or TAB suggestion lists.

... | include REGEX

Filters the output of the preceding command, including only lines which match the POSIX Extended Regular Expression REGEX. Do not put the regex in quotes.

Examples:

```
Soodar# show ip bgp sum json | include remoteAs
  "remoteAs":0,
  "remoteAs":455,
  "remoteAs":99,
```

```
Soodar# show run | include neigh.*[0-9]{2}\.0\.[2-4]\.[0-9]*
neighbor 10.0.2.106 remote-as 99
neighbor 10.0.2.107 remote-as 99
neighbor 10.0.2.108 remote-as 99
neighbor 10.0.2.109 remote-as 99
neighbor 10.0.2.110 remote-as 99
neighbor 10.0.3.111 remote-as 111
```

... | exclude REGEX

Filters the output of the preceding command, including only lines which **don't** match the POSIX Extended Regular Expression REGEX. Do not put the regex in quotes.

... | section REGEX

Filters the output of the preceding command, including only sections which match the POSIX Extended Regular Expression REGEX. Do not put the regex in quotes.

Example:

```
n2# show running-config | section interface\swireguard[1-3]0
interface wireguard10
  bridge-group 100 split-horizon group 0
  wireguard source 200.2.3.2
  wireguard private-key n2key1
  wireguard port 51820
  wireguard peer n3
    public-key D3309A5B6BF9FEC26710852AB0D6F6E5783F9343478933788D6C0BBB204FED4A
    endpoint 200.2.3.3 port 51820
    allowed-ip 200.4.4.4/32
  no shutdown
  ip address 10.200.200.1/32
interface wireguard20
  wireguard source 222.2.3.2
  wireguard private-key n2key2
  wireguard port 51821
  wireguard peer n3
    public-key 3B73F9AFBDC9C7C14C4F1108381F704050137990418C500B1F8465A13EDD637
    allowed-ip 10.0.1.2/32
    allowed-ip 10.0.3.2/32
    allowed-ip 222.4.4.4/32
  no shutdown
  ip address 10.200.200.2/32
interface wireguard30
  wireguard source 222.2.3.2
  wireguard private-key n2key3
  wireguard port 51822
  wireguard peer n3
    public-key 2F12ACA8B029112BA405286239D38CD43210AA713C7D7E73362C28A25AA04439
    allowed-ip 203.4.4.4/32
  no shutdown
  ip address 10.200.200.3/32
```

... | section-exclude REGEX

Filters the output of the preceding command, including only sections which **don't** match the POSIX Extended Regular Expression REGEX. Do not put the regex in quotes.

Example:

```
soodar# show running-config | section-exclude interface
Building configuration...

Current configuration:
!
hostname soodar
no ipv6 forwarding
no zebra nexthop kernel enable
security passwords min-length 8
log syslog errors
```

(continues on next page)

(continued from previous page)

```
log monitor
no banner motd
!
ip name-server 4.2.2.4
ntp server ir.pool.ntp.org iburst burst
!
ip route 0.0.0.0/0 192.168.1.1
line vty
!
end
```

1.2.4 Filtering

FRR provides many very flexible filtering features. Filtering is used for both input and output of the routing information. Once filtering is defined, it can be applied in any direction.

IP Prefix List

ip prefix-list provides the most powerful prefix based filtering mechanism. In addition to *access-list* functionality, *ip prefix-list* has prefix length range specification and sequential number specification. You can add or delete prefix based filters to arbitrary points of prefix-list using sequential number specification.

If no *ip prefix-list* is specified, it acts as permit. If *ip prefix-list* is defined, and no match is found, default deny is applied.

ip prefix-list NAME (permit|deny) PREFIX [le LEN] [ge LEN]

ip prefix-list NAME seq NUMBER (permit|deny) PREFIX [le LEN] [ge LEN]

You can create *ip prefix-list* using above commands.

seq

seq number can be set either automatically or manually. In the case that sequential numbers are set manually, the user may pick any number less than 4294967295. In the case that sequential number are set automatically, the sequential number will increase by a unit of five (5) per list. If a list with no specified sequential number is created after a list with a specified sequential number, the list will automatically pick the next multiple of five (5) as the list number. For example, if a list with number 2 already exists and a new list with no specified number is created, the next list will be numbered 5. If lists 2 and 7 already exist and a new list with no specified number is created, the new list will be numbered 10.

le

Specifies prefix length. The prefix list will be applied if the prefix length is less than or equal to the *le* prefix length.

ge

Specifies prefix length. The prefix list will be applied if the prefix length is greater than or equal to the *ge* prefix length.

Less than or equal to prefix numbers and greater than or equal to prefix numbers can be used together. The order of the *le* and *ge* commands does not matter.

If a prefix list with a different sequential number but with the exact same rules as a previous list is created, an error will result. However, in the case that the sequential number and the rules are exactly similar, no error will result.

If a list with the same sequential number as a previous list is created, the new list will overwrite the old list.

Matching of IP Prefix is performed from the smaller sequential number to the larger. The matching will stop once any rule has been applied.

In the case of no le or ge command, the prefix length must match exactly the length specified in the prefix list.

ip prefix-list description

ip prefix-list NAME description DESC

Descriptions may be added to prefix lists. This command adds a description to the prefix list.

Showing ip prefix-list

show ip prefix-list [json]

Display all IP prefix lists.

If the json option is specified, output is displayed in JSON format.

show ip prefix-list NAME [json]

Show IP prefix list can be used with a prefix list name.

If the json option is specified, output is displayed in JSON format.

show ip prefix-list NAME seq NUM [json]

Show IP prefix list can be used with a prefix list name and sequential number.

If the json option is specified, output is displayed in JSON format.

show ip prefix-list NAME A.B.C.D/M

If the command longer is used, all prefix lists with prefix lengths equal to or longer than the specified length will be displayed. If the command first match is used, the first prefix length match will be displayed.

show ip prefix-list NAME A.B.C.D/M longer

show ip prefix-list NAME A.B.C.D/M first-match

show ip prefix-list summary [json]

show ip prefix-list summary NAME [json]

show ip prefix-list detail [json]

show ip prefix-list detail NAME [json]

debug prefix-list NAME match <A.B.C.D/M|X:X::X:X/M> [address-mode]

Execute the prefix list matching code for the specified list and prefix. Shows which entry matched, if any. (address-mode is used for PIM RP lookups and skips prefix length checks.)

The return value from this command is success only if the prefix-list result is to permit the prefix, so the command can be used in scripting.

Clear counter of ip prefix-list

clear ip prefix-list [NAME [A.B.C.D/M]]

Clears the counters of all IP prefix lists. Clear IP Prefix List can be used with a specified NAME or NAME and prefix.

1.2.5 Route Maps

Route maps provide a means to both filter and/or apply actions to route, hence allowing policy to be applied to routes.

For a route reflector to apply a route-map to reflected routes, be sure to include `bgp route-reflector allow-outbound-policy` in `router bgp` mode.

Route maps are an ordered list of route map entries. Each entry may specify up to four distinct sets of clauses:

Matching Conditions

A route-map entry may, optionally, specify one or more conditions which must be matched if the entry is to be considered further, as governed by the Match Policy. If a route-map entry does not explicitly specify any matching conditions, then it always matches.

Set Actions

A route-map entry may, optionally, specify one or more Set Actions to set or modify attributes of the route.

Matching Policy

This specifies the policy implied if the *Matching Conditions* are met or not met, and which actions of the route-map are to be taken, if any. The two possibilities are:

- *permit*: If the entry matches, then carry out the *Set Actions*. Then finish processing the route-map, permitting the route, unless an *Exit Policy* action indicates otherwise.
- *deny*: If the entry matches, then finish processing the route-map and deny the route (return *deny*).

The *Matching Policy* is specified as part of the command which defines the ordered entry in the route-map. See below.

Call Action

Call to another route-map, after any *Set Actions* have been carried out. If the route-map called returns *deny* then processing of the route-map finishes and the route is denied, regardless of the *Matching Policy* or the *Exit Policy*. If the called route-map returns *permit*, then *Matching Policy* and *Exit Policy* govern further behaviour, as normal.

Exit Policy

An entry may, optionally, specify an alternative *Exit Policy* to take if the entry matched, rather than the normal policy of exiting the route-map and permitting the route. The two possibilities are:

- *next*: Continue on with processing of the route-map entries.
- *goto N*: Jump ahead to the first route-map entry whose order in the route-map is $\geq N$. Jumping to a previous entry is not permitted.

The default action of a route-map, if no entries match, is to deny. I.e. a route-map essentially has as its last entry an empty *deny* entry, which matches all routes. To change this behaviour, one must specify an empty *permit* entry as the last entry in the route-map.

To summarise the above:

	Match	No Match
Permit	action	cont
Deny	deny	cont

action

- Apply *set* statements
- If *call* is present, call given route-map. If that returns a *deny*, finish processing and return *deny*.
- If *Exit Policy* is *next*, goto next route-map entry
- If *Exit Policy* is *goto*, goto first entry whose order in the list is \geq the given order.
- Finish processing the route-map and permit the route.

deny

The route is denied by the route-map (return *deny*).

cont

goto next route-map entry

show route-map [WORD] [json]

Display data about each daemons knowledge of individual route-maps. If WORD is supplied narrow choice to that particular route-map.

If the *json* option is specified, output is displayed in JSON format.

clear route-map counter [WORD]

Clear counters that are being stored about the route-map utilization so that subsequent show commands will indicate since the last clear. If WORD is specified clear just that particular route-map's counters.

Route Map Command**route-map ROUTE-MAP-NAME (permit|deny) ORDER**

Configure the *order*'th entry in *route-map-name* with Match Policy of either *permit* or *deny*.

Route Map Match Command**match ip address ACCESS_LIST**

Matches the specified *access_list*

match ip address prefix-list PREFIX_LIST

Matches the specified *PREFIX_LIST*

match ip address prefix-len 0-32

Matches the specified *prefix-len*. This is a Zebra specific command.

match ipv6 address ACCESS_LIST

Matches the specified *access_list*

match ipv6 address prefix-list PREFIX_LIST

Matches the specified *PREFIX_LIST*

match ipv6 address prefix-len 0-128

Matches the specified *prefix-len*. This is a Zebra specific command.

match ip next-hop address IPV4_ADDR

This is a BGP specific match command. Matches the specified *ipv4_addr*.

match ipv6 next-hop IPV6_ADDR

This is a BGP specific match command. Matches the specified *ipv6_addr*.

match as-path AS_PATH

Matches the specified *as_path*.

match metric METRIC

Matches the specified *metric*.

match tag TAG

Matches the specified tag value associated with the route. This tag value can be in the range of (1-4294967295).

match local-preference METRIC

Matches the specified *local-preference*.

match community COMMUNITY_LIST

Matches the specified *community_list*

match peer IPV4_ADDR

This is a BGP specific match command. Matches the peer ip address if the neighbor was specified in this manner.

match peer IPV6_ADDR

This is a BGP specific match command. Matches the peer ipv6 address if the neighbor was specified in this manner.

match peer INTERFACE_NAME

This is a BGP specific match command. Matches the peer interface name specified if the neighbor was specified in this manner.

match source-protocol PROTOCOL_NAME

This is a ZEBRA specific match command. Matches the originating protocol specified.

match source-instance NUMBER

This is a ZEBRA specific match command. The number is a range from (0-255). Matches the originating protocols instance specified.

Route Map Set Command

set tag TAG

Set a tag on the matched route. This tag value can be from (1-4294967295). Additionally if you have compiled with the `--enable-realms` configure option. Tag values from (1-255) are sent to the Linux kernel as a realm value. Then route policy can be applied. See the `tc` man page.

set ip next-hop IPV4_ADDRESS

Set the BGP nexthop address to the specified IPV4_ADDRESS. For both incoming and outgoing route-maps.

set ip next-hop peer-address

Set the BGP nexthop address to the address of the peer. For an incoming route-map this means the ip address of our peer is used. For an outgoing route-map this means the ip address of our self is used to establish the peering with our neighbor.

set ip next-hop unchanged

Set the route-map as unchanged. Pass the route-map through without changing it's value.

set ipv6 next-hop peer-address

Set the BGP nexthop address to the address of the peer. For an incoming route-map this means the ipv6 address of our peer is used. For an outgoing route-map this means the ip address of our self is used to establish the peering with our neighbor.

set ipv6 next-hop prefer-global

For Incoming and Import Route-maps if we receive a v6 global and v6 LL address for the route, then prefer to use the global address as the nexthop.

set ipv6 next-hop global IPV6_ADDRESS

Set the next-hop to the specified IPV6_ADDRESS for both incoming and outgoing route-maps.

set local-preference LOCAL_PREF

Set the BGP local preference to *local_pref*.

set local-preference +LOCAL_PREF

Add the BGP local preference to an existing *local_pref*.

set local-preference -LOCAL_PREF

Subtract the BGP local preference from an existing *local_pref*.

set distance DISTANCE

Set the Administrative distance to DISTANCE to use for the route. This is only locally significant and will not be dispersed to peers.

set weight WEIGHT

Set the route's weight.

set metric <[+|-](1-4294967295)|rtt|+rtt|-rtt>

Set the BGP attribute MED to a specific value. Use +/- to add or subtract the specified value to/from the MED. Use *rtt* to set the MED to the round trip time or *+rtt/-rtt* to add/subtract the round trip time to/from the MED.

set as-path prepend AS_PATH

Set the BGP AS path to prepend.

set as-path exclude AS-NUMBER...

Drop AS-NUMBER from the BGP AS path.

set community COMMUNITY

Set the BGP community attribute.

set ipv6 next-hop local IPV6_ADDRESS

Set the BGP-4+ link local IPv6 nexthop address.

set origin ORIGIN <egp|igp|incomplete>

Set BGP route origin.

set table (1-4294967295)

Set the BGP table to a given table identifier

set sr-te color (1-4294967295)

Set the color of a SR-TE Policy to be applied to a learned route. The SR-TE Policy is uniquely determined by the color and the BGP nexthop.

Route Map Call Command

call NAME

Call route-map *name*. If it returns deny, deny the route and finish processing the route-map.

Route Map Exit Action Command

on-match next

continue

Proceed on to the next entry in the route-map.

on-match goto N

continue N

Proceed processing the route-map at the first entry whose order is $\geq N$

Route Map Optimization Command

route-map ROUTE-MAP-NAME optimization

Enable route-map processing optimization for *route-map-name*. The optimization is enabled by default. Instead of sequentially passing through all the route-map indexes until a match is found, the search for the best-match index will be based on a look-up in a prefix-tree. A per-route-map prefix-tree will be constructed for this purpose. The prefix-tree will compose of all the prefixes in all the prefix-lists that are included in the match rule of all the sequences of a route-map.

Route Map Examples

A simple example of a route-map:

```
route-map test permit 10
match ip address 10
set local-preference 200
```

This means that if a route matches ip access-list number 10 it's local-preference value is set to 200.

See *Miscellaneous Configuration Examples* for examples of more sophisticated usage of route-maps, including of the call action.

1.2.6 System

System Logging

SoodarOS uses `systemd-journald` as the central logging solution.

debug service snmp

Enable logging for SNMP service. All SNMP logs appear in journald.

debug service mender

Enable logging for mender update service. All mender logs appear in journald.

debug service ntpd

Enable logging for NTP service. All NTP logs appear in journald.

debug service dhcp4

Enable logging for DHCP4 server service. All logs appear in journald.

debug dplane fib

Enable data plane(VPP) FIB logs.

debug dplane ipsec

Enable data plane(VPP) IPsec logs.

log rotate max-file-size SIZE

set SIZE as the limit of how sizeable individual journal files may grow at most. When a limit is reached, it rotates to the next journal file.

log rotate max-files (1-1000)

control how many individual journal files to keep at most. Default is 100.

log rotate max-use <SIZE|PERCENTAGE>

Control how much disk space the journal may use up at most. The SIZE is capped at 4G. After reaching the limit, it starts removing elder journal files.

log rotate max-file-life (1-1000)

The maximum time(in days) to store entries in a single journal file before rotating to the next one.

log rotate max-retention (1-1000)

The maximum time(in days) to store journal entries. This controls whether journal files containing entries older than the specified period are deleted.

log file [LEVEL]

If you want to enable log into a file, please enter the command as in this example:

```
log file informational
```

If the optional second argument specifying the logging level is not present, the default logging level (typically debugging, but can be changed using the deprecated `log trap` command) is used. The `no` form of the command disables logging to a file.

log syslog [LEVEL]

Enable logging output to syslog. If the optional second argument specifying the logging level is not present, the default logging level (typically debugging, but can be changed using the deprecated `log trap` command) is used. The `no` form of the command disables logging to syslog. Default log level for syslog is set to `error` level.

log syslog [A.B.C.D|HOST] tcp [tls [skip-host-verify]] [port (100-65535)]

Define a remote host to send syslogs. Make sure that `log syslog` is enabled to make this command work. The default port is 514. Users can enable TLS connection. By adding `skip-host-verify` option, the remote hostname is not checked against provided certificate CN/SAN.

Example:

```
soodar(config)# ip host logServer 1.1.1.1
soodar(config)# log syslog logServer tcp tls
```

log syslog HOST loki [skip-host-verify] [port (100-65535)]

Define a remote host to send syslogs. Make sure that `log syslog` is enabled to make this command work. The default port is 3000. By adding the `skip-host-verify` option, the remote hostname is not checked against the provided certificate CN/SAN in the HTTPS connection.

Note: Loki connection uses `http` or `https` protocols to communicate. User **must** provide the `http` or `https` in address.

Note: Port is a different option. User **must not** provide a port in an address like `http://temp.ir:3100`. It's wrong!

Example:

```
soodar(config)# log syslog https://192.168.1.1 loki skip-host-verify port.↵  
↵3100
```

log monitor [LEVEL]

Enable logging output to terminal shell. By default, monitor logging is enabled at the informational level, but this command can be used to change the monitor logging level. If the optional second argument specifying the logging level is not present, the default logging level (typically informational) is used. The `no` form of the command disables logging to terminal monitors.

log facility [FACILITY]

This command changes the facility used in syslog messages. The default facility is `daemon`. The `no` form of the command resets the facility to the default `daemon` facility.

log record-priority

To include the severity in all messages logged to a file. Use the `log record-priority` global configuration command. To disable this option, use the `no` form of the command. By default, the severity level is not included in logged messages.

log timestamp precision [(0-6)]

This command sets the precision of log message timestamps to the given number of digits after the decimal point. Currently, the value must be 0 to 6 (i.e., the maximum precision is microseconds). To restore the default behavior (1-second accuracy), use the `no` form of the command, or set the precision explicitly to 0.

```
log timestamp precision 3
```

In this example, the precision is set to provide timestamps with millisecond accuracy.

log commands

This command enables the logging of all commands typed by a user to all enabled log destinations.

show log all [follow]

Show all journals logs. If the `follow` mode is enabled, it follows the updates.

show log mender [follow]

Show mender update service logs. If the `follow` mode is enabled, it follows the updates.

show log ssh [follow]

Show SSH service logs. If the `follow` mode is enabled, it follows the updates.

show log soolog [follow]

Show Soodar service logs. We are using *vector* for logging. If the `follow` mode is enabled, it follows the updates.

show log snmpd [follow]

Show SNMP service logs. If the `follow` mode is enabled, it follows the updates.

show log ntpd [follow]

Show NTP service logs. If the `follow` mode is enabled, it follows the updates.

show log vpp [follow]

Show VPP service(data plane) logs. If the `follow` mode is enabled, it follows the updates.

show log frr [follow]

Show FRR service(control plane) logs. If the `follow` mode is enabled, it follows the updates.

show log ipsec [follow]

Show IPSec service logs. If the `follow` mode is enabled, it follows the updates.

show log kernel [follow]

Show kernel and boot logs. If the `follow` mode is enabled, it follows the updates.

clear log [syslog]

Clear all generated logs. Using the `syslog` keyword makes the journald logs vacuumed; otherwise, the log file is truncated.

System update

SoodarOS uses mender as its system update solution. It supports both online and offline updates, and in case of failure, it can roll back to the previous version

Online update

Update system from a server. It is disabled by default. When an online update is enabled, the system automatically checks the server for available updates and install if any is present.

Configuration

system update enable

Enable/Disable online update

system update server-url WORD

Set update server's URL

Note: Update server address, should be a URL, and an IP address can't be set

system update update-poll-interval (5-2147483647)

Check for update interval in seconds

system update inventory-poll-interval (5-2147483647)

Send system inventory in intervals. Unit is in seconds

Example:

```
soodar(config)# system update enable
soodar(config)# system update server-url https://update.soodar.ir
soodar(config)# system update update-poll-interval 300
soodar(config)# system update inventory-poll-interval 400
```

Offline update

Update system from removable storage. The procedure to offline update is simple. One need to:

1. Install an update
2. Reboot
3. Commit the update(to make it persistent) or rollback the update(in case of failure. Reboot without a commit to rollback)

Note: To use offline update, the online update should be disabled

Configuration

system update offline list

List available updates on removable storage

Example:

```
n1(config)# system update offline list
 1  rls-20
 2  rls-21
 3  rls-21.1
```

system update offline install ARTIFACT

Install update from removable storage. ARTIFACT is the relative path of update file from removable storage root, without `.mender` postfix

system update offline commit

Commit latest installed update.

Warning: During the system's booting, no removable storage should be plugged into the router device, or the boot fails.

System backup and restore

The router is equipped with a set of backup/restore tools. User can choose to create snapshot from *running-config*, *startup-config* and *PKI Private keys*. but backups can only be restored to *startup-config* and *PKI Private keys*. Each snapshot is saved with a unique user-provided tag. The same tag is used to restore the snapshot. The snapshots could be stored in two ways:

1. To remote host and via SFTP
2. To local storage

Note: For keeping integrity, all snapshots are encrypted and should not be tampered.

Warning: Backing up private keys to a remote host is ill-advised and should be avoided but if it's needed, consider further safety measures for remote snapshots and their accessibilities.

copy <startup-config|running-config|pki> <sftp:|system:>

Create a snapshot from current startup-config and save it to a remote host. the *sftp:* URI could contain username, password and address of remote computer with the snapshot tag, and the *system:* URI contains snapshot tag. If URI is provided, all fields are shown to user for confirmation; else user is asked for required information.

Note: *sftp* URI is: *sftp:[user]:[password]@[host]:[tag]*.

Note: *system* URI is: *system:[tag]*.

Examples:

```
soodar# ! copy startup-config with full URI
soodar# copy startup-config sftp:john:1234@test:backup1
Address or name of remote host [test]?
Remote host user [john]?
Remote host password [*****]?
Destination tag [backup1]?
soodar# ! copy startup-config without providing password in URI
soodar# copy startup-config sftp:john@192.168.1.2:backup2
Address or name of remote host [192.168.1.2]?
Remote host user [john]?
Remote host password [admin]?
Destination tag [backup2]?
soodar# ! copy startup-config with providing only tag name
soodar# copy startup-config sftp:backup3
Address or name of remote host [192.168.1.1]?
Remote host user [admin]?
Remote host password [admin]?
Destination tag [backup3]?
soodar# ! copy startup-config without providing anything
soodar# copy startup-config sftp:
Address or name of remote host [192.168.1.1]?
Remote host user [admin]?
Remote host password [admin]?
Destination tag [router-config]?
soodar# ! copy to system storage
soodar# copy running-config system:
Destination tag [router-config]? backup4
```

copy <sftp:|system:> <startup-config|pki>

Restore a snapshot from provided source.

Note: restored snapshot takes effect after rebooting system.

```
soodar# copy system: startup-config
Tag to restore [router-config]? backup4
```

show archive snapshots [sftp:|system:]

List available snapshots in source.

```
soodar# show archive snapshots system:
```

Tag	Host	Time	Type
r1	soodar	Wed Jun 15 14:07:45 2022	Config
keybackup1	soodar	Fri Jun 24 14:13:22 2022	PKI
backup4	soodar	Sun Jul 3 14:50:37 2022	Config

show archive config <sftp:|system:>

Show snapshot contents. only config snapshots can be shown.

```
soodar# show archive config system:
Destination tag [router-config]? r1

r1
==
hostname soodar
no ipv6 forwarding
no zebra nexthop kernel enable
security passwords min-length 8
log syslog errors
log monitor
no banner motd
!
no ntp
!
interface ge1
no ip address
!
interface ge2
no ip address
!
interface ge3
no ip address
!
interface lo
no ip address
!
interface ge0
no shutdown
ip address 192.168.1.55/24
exit
!
end
```

show archive config differences <startup-config|running-config|sftp:|system:> <startup-config|running-c

Compare snapshots and print the differences.

```
soodar# show archive config differences running-config system:r1
Destination tag [r1]?

running-config                                r1
=====                                         ==
hostname soodar                               hostname soodar
no ipv6 forwarding                            no ipv6 forwarding
no zebra nexthop kernel enable                no zebra nexthop_
->kernel enable                                security passwords_
security passwords min-length 8               security passwords_
->min-length 8                                log syslog errors
log syslog errors                             log syslog errors
log monitor                                   log monitor
no banner motd                                no banner motd
!                                              !
no ntp                                         no ntp
!                                              !
interface ge1                                  interface ge1
  no ip address                                no ip address
!                                              !
                                              > interface ge2
                                              > no ip address
                                              > !
interface ge3                                  interface ge3
  no ip address                                no ip address
!                                              !
interface lo                                    interface lo
  no ip address                                no ip address
!                                              !
interface ge0                                  interface ge0
  no shutdown                                  no shutdown
  ip address 192.168.1.55/24                    ip address 192.168.
->1.55/24
exit                                           <
!                                              <
interface ge2                                  <
  no shutdown                                  <
  ip address 1.1.1.1/24                         <
exit                                           exit
!                                              !
end                                             end
```

delete <system:|sftp:>

Delete snapshot from provided source

```
soodar# delete sftp:
Address or name of remote host [192.168.1.1]? 192.168.1.2
Remote host user [admin]? john
Remote host password [admin]?
Destination tag [router-config]? backup3
```

Prometheus Monitoring

SoodarOS supports both SNMP and Prometheus for monitoring purposes. Users can enable Prometheus monitoring by running *soomon* service on the router. After running and enabling *soomon* service, the router can provide metrics on port 9200.

system service enable soomon

Start *soomon* service to provide Prometheus monitoring.

Note: Currently, *soomon* only works on port 9200. This behavior could change in the future.

System Services

Services are running in the background for accomplishing tasks. These services include:

- NTP: Network Time Protocol service.
- Mender: System update service.
- Soolog: Remote and local syslog service.
- SNMPD: SNMP Services
- VPP: Router service. Restarting this service is like restarting the router.
- soomon: Soodar Prometheus monitoring service.

show system service status SERVICE

Show service status based on the output of `systemd`

system service restart SERVICE

Restart a service. If service is not running, starts the service.

Note: An explicitly disabled service can not be restarted(for example, when a user has set `no ntp` command, one can not restart the NTP service).

System Security

The admin can set the maximum TCP SYN limit to protect the system from SYN flood attacks.

tcp syn-flood limit (1-4294967295)

Set TCP SYN limit. The default limit is 256.

URPF (Unicast Reverse-Path Forwarding) is a technique to help prevent IP Address spoofing by restricting the incoming packet's source address to those that the router has a route to. Failed packets are discarded.

URPF has two modes of operation:

- Strict: Every ingress packet's source is looked up in the FIB; if there's a route to source address but the incoming interface is not the output interface of the path, the packet check fails.
- Loose: Every ingress packet's source is looked up in the FIB; if there's no route to source address by any interface, the packet is discarded.

ip verify unicast source reachable-via [rx | any]

Enable URPF on an interface. `rx` keyword set URPF in strict mode. The default mode is `any` (loose mode).

1.2.7 SNMP

SNMP is a widely implemented feature for collecting network information from the router and/or host. FRR itself does not support SNMP agent (server daemon) functionality but is able to connect to an SNMP agent using the AgentX protocol (RFC 2741) and make the routing protocol MIBs available through it.

agentx

Start SNMP Daemon and AgentX on the system

no agentx

Stop SNMP Daemon and AgentX on the system

SNMP Users

To access the SNMP MIBs, one or more users should be available. Currently, only SNMPv3 is supported.

snmp-server user USER auth <md5|sha> PASSWORD [priv des56 PRIV]

Create a user named USER with authNoPriv security level and as ROUser. The user provides the authentication protocol and password. If *priv* is provided, a user named USER with authPriv security level as a ROUser is created.

Note: Password length can't be lesser than 8 characters.

Example:

```
soodar(config)# snmp-server user normal-user auth sha 12345678
soodar(config)# snmp-server user priv-user auth sha 12345678 priv des56 87654321
```

1.2.8 NTP

Network Time Protocol (NTP) is a well-known, widely used protocol to synchronize the time of the device over the internet. Using *chrony*, SoodarOS can be an NTP client supporting Version 3 and Version 4 of the NTP protocol

Setting up NTP

Setting up an NTP client is just as simple as providing one(or more) NTP servers and giving needed options.

ntp server SERVER [OPTIONS]

Specifies an NTP server that can be used as a time source. Available options are:

- **burst:**
With this option, the client will shorten the interval between up to four requests to 2 seconds or less when it cannot get a good measurement from the server.
- **iburst:**
With this option, the interval between the first four requests sent to the server will be 2 seconds or less instead of the interval specified by the `minpoll` option.
- **key (1-65535):**
The key option specifies which key (with an ID in the range 1 through 65535) should client use to authenticate requests sent to the server and verify its responses. The server must have the same key for this number configured, otherwise no relationship between the computers will be possible.

- **maxpoll (-6-24):**
This option specifies the maximum interval between requests sent to the server as a power of 2 in seconds. For example, maxpoll 9 indicates that the polling interval should stay at or below 9 (512 seconds). The default is 10 (1024 seconds), the minimum is -6 (1/64th of a second), and the maximum is 24 (6 months).
- **minpoll (-6-24):**
This option specifies the minimum interval between requests sent to the server as a power of 2 in seconds. For example, minpoll 5 would mean that the polling interval should not drop below 32 seconds. The default is 6 (64 seconds), the minimum is -6 (1/64th of a second), and the maximum is 24 (6 months). Note that intervals shorter than 6 (64 seconds) should generally not be used with public servers on the Internet, because it might be considered abuse. A sub-second interval will be enabled only when the server is reachable and the round-trip delay is shorter than 10 milliseconds, i.e. the server should be in a local network.
- **prefer:**
Prefer this source over sources without the prefer option.
- **version (3-4):**
This option sets the NTP version of packets sent to the server. The default version is 4.

Example:

```
soodar(config)# ntp server ir.pool.ntp.org burst iburst version
```

Setting up NTP Authentication

The NTP protocol supports a message authentication code (MAC) to prevent computers from having their system time upset by the rogue packets being sent to them. The MAC is generated as a password function specified in the `ntp key-authentication` list.

Add a New Key

Each key is made of an `id`, a `hash` function and the `key` value, so users need to provide these three to create a new key.

ntp authentication-key (1-65535) sha1 WORD

Add a new key to the list of authentication keys. Users can choose a key-id in (1-65535) range, SHA1 as its hash function and WORD as the key itself.

Remove a key

To remove a key, knowing `key-id` is the only necessity.

no ntp authentication-key (1-65535)

Remove a key from the keys database. The key-id should be provided.

Enabling and Disabling NTP Authentication

The NTP authentication mechanism only takes effect after it's been explicitly enabled. Without it, all connections to servers that are configured to use authentication would switch to simple unauthenticated mode. Vice versa, one can disable all NTP authentications by simply disabling them.

ntp authentication

Enable/Disable NTP authentication mode.

Showing NTP status

You can see information about current time sources that the client is accessing by issuing `show ntp sources` command

show ntp sources [json]

Print current server information.

Example:

```
soodar# show ntp sources
```

```

.-- Source mode  '^' = server, '=' = peer, '#' = local clock.
/  .- Source state '*' = current best, '+' = combined, '-' = not combined,
| /                'x' = may be in error, '~' = too variable, '?' = unusable.
||
||                .- xxxx [ yyyy ] +/- zzzz
||      Reachability register (octal) --.      | xxxx = adjusted offset,
||      Log2(Polling interval) --.          | yyyy = measured offset,
||                \ |                       | zzzz = estimated error.
||                \| |
MS Name/IP address          Stratum Poll Reach LastRx Last sample
=====
^* 77.104.70.70              3   8   347   249  +1050us[+1527us] +/- 103ms

```

Also a json output is available:

```

soodar(config)# do show ntp sources json
{
  "servers": [
    {
      "mode": "^",
      "state": "*",
      "address": "194.225.50.25",
      "stratum": "3",
      "polling_interval": "6",
      "reachability_register": "17",
      "last_rx": "6",
      "adjusted_offset": "0.000333353",
      "measured_offset": "-0.001453500",
      "estimated_error": "0.094937660"
    }
  ]
}

```

Also, you can see information about the drift rate and offset estimation process for each of the sources currently being examined by the client.

show ntp sources stats

Print offset estimation for sources.

Example:

```
soodar# show ntp sources stats
      .- Number of sample points in measurement set.
      /      .- Number of residual runs with same sign.
      |      /      .- Length of measurement set (time).
      |      /      .- Est. clock freq error (ppm).
      |      /      .- Est. error in freq.
      |      /      .- Est. offset.
      |      /      On the .-
      |      /      samples. \
Name/IP Address      NP  NR  Span  Frequency  Freq Skew  Offset  Std Dev
=====
77.104.70.70        24  17  39m   +0.038     3.994  +9768ns  3015us
```

Manual clock

If you have no or restricted internet connection, you can disable NTP and set the date manually.

no ntp

Disable NTP service and remove all its configurations(servers)

Note: NTP service is enabled by default. You should explicitly disable it. To reenale it, just set up NTP and add a server

clock set TIME (1-12) (1-31) (2000-4192)

Set clock. TIME is current time in hh:mm:ss format.

1.2.9 IPv6 Support

SoodarOS fully supports IPv6 routing. As described so far, SoodarOS supports RIPng, OSPFv3, and BGP-4+. You can give IPv6 addresses to an interface and configure static IPv6 routing information. SoodarOS IPv6 also provides automatic address configuration via a feature called `address auto configuration`. To do it, the router must send router advertisement messages to the all nodes that exist on the network.

Previous versions of SoodarOS could be built without IPv6 support. This is no longer possible.

Enable IPv6

To use IPv6 features, first it's needed to be enabled on interface. There are 2 ways to enable IPv6 on an interface: #. Issue `ipv6 enable` command #. Add an IPv6 address

`ipv6 enable`

Enable IPv6 on the interface

Warning: Note that IPv6 can't be enabled on virtual interfaces(like *tunnels* and *loopbacks*).

Note: Although tunnels can't have IPv6 addresses, but they can be passed through IPv6 network(source and destination can be IPv6).

Router Advertisement

`show ipv6 nd ra-interfaces [vrf <VRFNAME|all>]`

Show configured route advertisement interfaces. VRF subcommand only applicable for netns-based vrfs.

`ipv6 nd suppress-ra`

Don't send router advertisement messages. The no form of this command enables sending RA messages.

`ipv6 nd prefix ipv6prefix [valid-lifetime] [preferred-lifetime] [off-link] [no-autoconfig] [router-address]`

Configuring the IPv6 prefix to include in router advertisements. Several prefix specific optional parameters and flags may follow:

- **valid-lifetime:** the length of time in seconds during what the prefix is valid for the purpose of on-link determination. Value *infinite* represents infinity (i.e. a value of all one bits (0xffffffff)). Range: (0-4294967295) Default: 2592000
- **preferred-lifetime:** the length of time in seconds during what addresses generated from the prefix remain preferred. Value *infinite* represents infinity. Range: (0-4294967295) Default: 604800
- **off-link:** indicates that advertisement makes no statement about on-link or off-link properties of the prefix. Default: not set, i.e. this prefix can be used for on-link determination.
- **no-autoconfig:** indicates to hosts on the local link that the specified prefix cannot be used for IPv6 autoconfiguration.
Default: not set, i.e. prefix can be used for autoconfiguration.
- **router-address:** indicates to hosts on the local link that the specified prefix contains a complete IP address by setting R flag.
Default: not set, i.e. hosts do not assume a complete IP address is placed.

`ipv6 nd ra-interval [(1-1800)]`

The maximum time allowed between sending unsolicited multicast router advertisements from the interface, in seconds. Default: 600

`ipv6 nd ra-interval [msec (70-1800000)]`

The maximum time allowed between sending unsolicited multicast router advertisements from the interface, in milliseconds. Default: 600000

ipv6 nd ra-fast-retrans

RFC4861 states that consecutive RA packets should be sent no more frequently than three seconds apart. FRR by default allows faster transmissions of RA packets in order to speed convergence and neighbor establishment, particularly for unnumbered peering. By turning off `ipv6 nd ra-fast-retrans`, the implementation is compliant with the RFC at the cost of slower convergence and neighbor establishment. Default: enabled

ipv6 nd ra-retrans-interval [(0-4294967295)]

The value to be placed in the retrans timer field of router advertisements sent from the interface, in msec. Indicates the interval between router advertisement retransmissions. Setting the value to zero indicates that the value is unspecified by this router. Must be between zero or 4294967295 msec. Default: 0

ipv6 nd ra-hop-limit [(0-255)]

The value to be placed in the hop count field of router advertisements sent from the interface, in hops. Indicates the maximum diameter of the network. Setting the value to zero indicates that the value is unspecified by this router. Must be between zero or 255 hops. Default: 64

ipv6 nd ra-lifetime [(0-9000)]

The value to be placed in the Router Lifetime field of router advertisements sent from the interface, in seconds. Indicates the usefulness of the router as a default router on this interface. Setting the value to zero indicates that the router should not be considered a default router on this interface. Must be either zero or between value specified with `ipv6 nd ra-interval` (or default) and 9000 seconds. Default: 1800

ipv6 nd reachable-time [(1-3600000)]

The value to be placed in the Reachable Time field in the Router Advertisement messages sent by the router, in milliseconds. The configured time enables the router to detect unavailable neighbors. The value zero means unspecified (by this router). Default: 0

ipv6 nd managed-config-flag

Set/unset flag in IPv6 router advertisements which indicates to hosts that they should use managed (stateful) protocol for addresses autoconfiguration in addition to any addresses autoconfigured using stateless address autoconfiguration. Default: not set

ipv6 nd other-config-flag

Set/unset flag in IPv6 router advertisements which indicates to hosts that they should use administered (stateful) protocol to obtain autoconfiguration information other than addresses. Default: not set

ipv6 nd home-agent-config-flag

Set/unset flag in IPv6 router advertisements which indicates to hosts that the router acts as a Home Agent and includes a Home Agent Option. Default: not set

ipv6 nd home-agent-preference [(0-65535)]

The value to be placed in Home Agent Option, when Home Agent config flag is set, which indicates to hosts Home Agent preference. The default value of 0 stands for the lowest preference possible. Default: 0

ipv6 nd home-agent-lifetime [(0-65520)]

The value to be placed in Home Agent Option, when Home Agent config flag is set, which indicates to hosts Home Agent Lifetime. The default value of 0 means to place the current Router Lifetime value.

Default: 0

ipv6 nd adv-interval-option

Include an Advertisement Interval option which indicates to hosts the maximum time, in milliseconds, between successive unsolicited Router Advertisements. Default: not set

ipv6 nd router-preference [(high|medium|low)]

Set default router preference in IPv6 router advertisements per RFC4191. Default: medium

ipv6 nd mtu [(1-65535)]

Include an MTU (type 5) option in each RA packet to assist the attached hosts in proper interface configuration. The announced value is not verified to be consistent with router interface MTU.

Default: don't advertise any MTU option.

ipv6 nd rdns ipv6address [lifetime]

Recursive DNS server address to advertise using the RDNSS (type 25) option described in RFC8106. Can be specified more than once to advertise multiple addresses. Note that hosts may choose to limit the number of RDNSS addresses to track.

Optional parameter:

- **lifetime**: the maximum time in seconds over which the specified address may be used for domain name resolution. Value **infinite** represents infinity (i.e. a value of all one bits (0xffffffff)). A value of 0 indicates that the address must no longer be used. Range: (0-4294967295) Default: 3 * ra-interval

Default: do not emit RDNSS option

ipv6 nd dnssl domain-name-suffix [lifetime]

Advertise DNS search list using the DNSSL (type 31) option described in RFC8106. Specify more than once to advertise multiple domain name suffixes. Host implementations may limit the number of honored search list entries.

Optional parameter:

- **lifetime**: the maximum time in seconds over which the specified domain suffix may be used in the course of name resolution. Value **infinite** represents infinity (i.e. a value of all one bits (0xffffffff)). A value of 0 indicates that the name suffix must no longer be used. Range: (0-4294967295) Default: 3 * ra-interval

Default: do not emit DNSSL option

Router Advertisement Configuration Example

A small example:

```
interface ge0
  ipv6 enable
  no ipv6 nd suppress-ra
  ipv6 nd prefix 2001:1::/64
```

See also:

- [RFC 2462](#) (IPv6 Stateless Address Autoconfiguration)
- [RFC 4861](#) (Neighbor Discovery for IP Version 6 (IPv6))
- [RFC 6275](#) (Mobility Support in IPv6)
- [RFC 4191](#) (Default Router Preferences and More-Specific Routes)
- [RFC 8106](#) (IPv6 Router Advertisement Options for DNS Configuration)

1.2.10 IPFIX

Internet Protocol Flow Information Export (IPFIX) is an IETF protocol and the name of the IETF working group defining the protocol. It was created based on the need for a common, universal standard of export for Internet Protocol flow information from routers, probes and other devices that are used by mediation systems, accounting/billing systems and network management systems to facilitate services such as measurement, accounting, and billing. The IPFIX standard defines how IP flow information is formatted and transferred from an exporter to a collector.

IPFIX flow exporter

IPFIX exporter information is configured and saved as `flow exporter`.

Commands

`flow exporter`

Enter flow exporter configuration mode

`destination A.B.C.D`

Set IPFIX flow collector IPv4 address

`source A.B.C.D`

Set IPFIX flow packets source. This address should be valid on the router.

`transport udp (1-65535)`

Define destination port

IPFIX flow monitor

IPFIX flow definitions

Commands

`flow monitor`

Enter flow monitor configuration mode

`cache timeout active (1-604800)`

Set active flow cache timeout in seconds

`cache timeout inactive (1-604800)`

Set inactive flow cache timeout in seconds

`record netflow <ipv4|ipv6> prefix-port`

Start recording flows information containing 5-tuple of source address, destination address, protocol, source port, and destination port.

`no record netflow <ipv4|ipv6> prefix-port`

stop recording flows information

`ip flow monitor output`

Apply flow monitor on an interface output

`no ip flow monitor output`

Remove flow monitor on an interface output

Logging

Debugging logs can be set in case of need.

[no] debug ipfix event

log data plane installation processes and results

Setup IPFIX

To setup IPFIX, one needs to do three things:

1. Define flow exporter
2. Define flow monitor
3. Apply monitor on 1 or more interfaces to collect data

Example configuration

```
soodar(config)# interface ge3
soodar(config-if)# ip address 192.168.1.10/24
soodar(config-if)# flow exporter
soodar(config-flow-exporter)# destination 192.168.1.20
soodar(config-flow-exporter)# source 192.168.1.10
soodar(config-flow-exporter)# transport udp 15200
soodar(config-flow-exporter)# flow monitor
soodar(config-flow-monitor)# cache timeout active 1800
soodar(config-flow-monitor)# cache timeout inactive 15
soodar(config-flow-monitor)# record netflow ipv4 prefix-port
soodar(config-flow-monitor)# interface ge0
soodar(config-if)# ip flow monitor output
```

1.2.11 DHCP

From [RFC 2131](#):

The DHCP (Dynamic Host Configuration Protocol) provides a framework for passing configuration information to hosts on a TCP/IP network.

DHCP utilizes a server/client model to deliver the protocol. DHCP servers allocate network addresses to clients and provide them with network configurations.

DHCP Client

SoodarOS uses DHCPD as a DHCP client to automatically assign IP address to interfaces.

DHCP Client Configuration

ip dhcp client hostname HOSTNAME

Send provided hostname as client's hostname to server. The default value is the system's hostname.

ip dhcp client request router

Request(deny in case of negating) router option from server.

ip dhcp client request dns-nameserver

Request(deny in case of negating) DNS option from server.

DHCP Server

SoodarOS uses [Kea DHCP](#) as a backend to provide DHCP server functionalities. These functionalities include:

- Add IP pools and define subnet and IP ranges to allocate to hosts
- Provide clients DNS server addresses
- Provide clients gateway address
- Provide clients NTP server addresses
- Set leasing time for each pool
- Show/Clear bindings

Configuring Pool

ip dhcp pool DHCP4POOL

Create a new DHCP4 pool. Each pool has a subnet. This subnet determines which pool should be used for incoming requests by matching the pool's subnet with the ingress interface subnet. The negated form removes a pool from pools.

```
soodar(config)# ip dhcp pool p1
soodar(dhcp-config)#
```

network A.B.C.D/M

Set pool's subnet address.

```
soodar(config)# ip dhcp pool p1
soodar(dhcp-config)# network 192.168.1.0/24
```

included-address A.B.C.D A.B.C.D

Define a range of addresses that could be used for allocating to clients from the subnet. Each pool can have multiple ``included-address`` commands.

```
soodar(config)# ip dhcp pool p1
soodar(dhcp-config)# included-address 192.168.1.100 192.168.1.120
soodar(dhcp-config)# included-address 192.168.1.140 192.168.1.165
```

dns-server A.B.C.D ...

Configure DNS server address(es) that is fed to clients. Users can provide all addresses in one command or issue multiple commands.

Note: Up to 8 DNS servers can be set. It is not allowed to set more than 8 servers.

Example:

Following lines set 1.1.1.1, 4.2.2.4 and 8.8.8.8 as DNS servers:

```
soodar(config)# ip dhcp pool p1
soodar(dhcp-config)# dns-server 4.2.2.4 1.1.1.1
soodar(dhcp-config)# dns-server 8.8.8.8
```

default-router A.B.C.D ...

Set gateway address(es) for presenting to clients. Users can provide all addresses in one command or issue multiple commands.

Note: Up to 8 gateway can be set. It is not allowed to set more than 8 addresses.

```
soodar(config)# ip dhcp pool p1
soodar(dhcp-config)# default-router 192.168.1.1
```

ntp-server NTP ...

Configure NTP server address(es) that is fed to clients. Users can provide all addresses in one command or issue multiple commands.

Note: Up to 8 NTP servers can be set. It is not allowed to set more than 8 servers.

```
soodar(config)# ip dhcp pool p1
soodar(dhcp-config)# ntp-server ir.pool.ntp.org
```

domain-name NAME

Specifies the domain name for clients

```
soodar(config)# ip dhcp pool p1
soodar(dhcp-config)# domain-name example.org
```

lease <(0-365) (0-23) (0-59)|infinite>

Set DHCP lease time in days, hours, and minutes or infinite to disable lease time. The default lease time is 24 hours (1 day). Negating resets lease time to the default value.

```
soodar(config)# ip dhcp pool p1
soodar(dhcp-config)# ! set lease time to 30 days
soodar(dhcp-config)# lease 30 0 0
```

Configure interfaces

ip dhcp server

Enable DHCP serving on the interface. Negation disables DHCP serving.

```
soodar(config-if)# ip dhcp server
```

ip address dhcp

Enable DHCP client on the interface. Negation disables DHCP client.

Pool status and management

show ip dhcp pool

Show general information about a pool(s)

```
soodar# show ip dhcp pool p1

Pool p1 :
Total addresses: 47
Leased addresses:      1
Declined addresses:    0
2 ranges are currently in the pool :
Range's low      Range's high
192.168.1.100   192.168.1.120
192.168.1.140   192.168.1.165
```

show ip dhcp binding [<DHCP4POOL|A.B.C.D>]

Show information about current bindings.

```
soodar# show ip dhcp binding
IP Address      Client hostname  Client HW address  Lease expiration
↔Pool  Type      State
1.1.1.100      n4              00:00:00:aa:00:01  Wed Nov  3 11:20:06 2021  p2
↔   Automatic  Leased
```

clear ip dhcp binding <*|A.B.C.D>

Removes a binding from the lease database. If * is the input argument, clears all bindings

1.2.12 License

SoodarOS uses a license manager to allow users to choose their plans and use the trial version flexibly. To change the licensing, one needs to create a license request and send it to the corporation for signing. Once the signed certificate is imported, its effect is immediate.

Default license

When SoodarOS lacks a license file, it continues to work. But restrictions are applied. These restrictions are:

- Drop supporting ethernet faster than Gigabit ethernet.
- Support a maximum of 8 hardware interfaces.
- Limit VPLS interfaces count to 5.
- Limit VXLAN interfaces count to 4.
- Limit protected tunnels to 2 tunnels.
- Support up to 10 Access-list.
- Limit access-list entries to 10 per ACL.
- Support up to 2 Policy map.
- NAT44 IP pool is limited to 32 IPs.
- NAT44 static entries are limited to 32 entries.
- Limit VRFs to 2 VRFs(not counting default VRF).
- Limit routes per VRF to 64.

License request

To import a license, an enrollment is needed. SoodarOS makes a license request on user demand and displays it on the screen to achieve this. The displayed request should be sent for signing.

license generate license-request [terminal]

Generate license requests and display them on screen.

Import license

Importing a signed license is by copy-pasting the license on the screen.

license import license terminal

Import a signed license.

Check license

To verify the license, `license check` command is used. If there are errors, they are printed on the screen.

license check

Check installed license.

Show license

Checking current limits(and used quotas) is done via `show license` command.

show license

Show current license limits.

Note: A negative value for a resource limit means that the resource is unlimited.

Example :

```
n1# show license
      Name      Limit  Used
-----
Hardware Interfaces      8     3
Hardware Interfaces Type  1     -
      VPLS Interfaces    5     0
      VXLAN Interfaces   4     0
Protected Tunnels       2     1
      QoS Policy         2     0
      NAT44 Pool IPs    32     0
NAT44 Static Entries    32     0
      VRF                2     0
      VRF default routes 64     2
      ACL                10     0

BGP Support: Available
MPLS Support: Available
VRF Support: Available
MP-GRE Support: Not available
EIGRP Support: Not available
IPv6 Support: Not available
```

1.3 Tune

1.3.1 System Tune

SoodarOS consist of services working together. These services can be categorized into three classes:

- Data-plane Services
- Control-plane Services
- Management Services

Data-plane Services

Data-plane services are responsible for forwarding, routing, and filtering incoming packets.

Members

VPP

VPP (Vector Packet Processing) is a fast, scalable layer 2-4 multi-platform network stack.

Control-plane Services

All services related to signaling and routing protocols are in this class.

Members

FRRouting

FRRouting (FRR) is a free and open-source Internet routing protocol suite.

Strongswan

IPSec/IKEv2 implementation

Management Services

Services responsible for connecting from outside to SoodarOS.

Members

OpenSSH

OpenSSH is a suite of secure networking utilities based on the SSH (Secure SHell) protocol.

Tweaks

Depending on each use case's needs, admins can tweak services and their resources. These tweaks are defined as Tuning profiles.

Common tweaks

For all above three categories of services, the following parameters can be set:

- CPU cores: Admin can specify CPU cores that the service is allowed to utilize. This core pinning is done in two ways:
 - Exclusive: The core is only assigned to this service and is not used in OS Scheduler.
 - Shared: The core lists in OS Scheduler and other processes can use them.

Note: For data-plane services, CPU core assigning is done differently. refer to *Data-plane tweaks*

- CPU weight: In case of shared CPUs, The available CPU time is split up among all services relative to their CPU time weight. A higher weight means more CPU time, a lower weight means less. The allowed range is 1 to 10000. Defaults to 100 for all processes.
- Maximum memory: Specify the absolute limit on memory usage of the executed processes in this class.

Data-plane tweaks

VPP as a sophisticated and high-performance network has lots of customizable options.

Data-plane CPU configuration

VPP needs at least one main thread and more optional worker threads. Each of These threads is pinned to a CPU core. The default configuration uses core 0 as the main thread(in shared mode) and no workers. Admin can set main thread/ worker threads, CPU exclusiveness, and service CPU weight.

Data-plane Memory configuration

VPP uses its memory management system, so in the beginning, it ``mmap``s needed memories from OS heap.

- Main heap: VPP's main memory. Used to store ACL rules, IP Routes,... . Defaults to 1GB.
- Stat heap: Memory assigned to storing stats(like packets count). Defaults to 32MB.

Admin can change these values when needed.

Data-plane buffer configuration

VPP uses per NUMA pre-allocated buffers to process incoming packets. It's advised not to change default values, but admins can change the number of buffers and buffer size.

Data-plane poll sleep

VPP's main loop poll always fetches new packets and uses 100% CPU. An admin can add a fixed sleep between the main loop poll to lower the power usage, CPU usage, and heat production in small devices.

Warning: Enabling poll sleep can cause performance degradation.
--

Interface order configuration

Network interfaces are sorted by their PCI address. For example, a router with 4 network interfaces and their respective addresses is mapped like:

Table 1: Interfaces' list(original)

PCI Address	Order	Interface Name	MAC Address
00:04.0	0	ge0	0c:61:0c:83:00:00
00:05.0	1	ge1	0c:61:0c:83:00:01
00:06.0	2	ge2	0c:61:0c:83:00:02
00:07.0	3	ge3	0c:61:0c:83:00:03

Under some circumstances, admins may be willing to change this order. SoodarOS Tuning Profiles supports static interface order based on MAC address. Interfaces without a static order use the explained order. For instance, in the above example admin sets the order of MAC address `0c:61:0c:83:00:00` as 2. The resulting interface list is:

Table 2: Interfaces' list(reordered)

PCI Address	Order	Interface Name	MAC Address
00:04.0	2	ge2	0c:61:0c:83:00:00
00:05.0	0	ge0	0c:61:0c:83:00:01
00:06.0	1	ge1	0c:61:0c:83:00:02
00:07.0	3	ge3	0c:61:0c:83:00:03

CLI Commands

Adding/ Removing tuning profile

system tune profile TPROF

Create and Enter Tuning Profile configuration

no system tune profile TPROF

Removes a Tuning profile.

Note: Removing current profile does **not** apply default configuration to the system.

```
soodar(config)# system tune profile max-perf
soodar(tune-profile)#
```

Configuring Data-plane

data-plane

Enter Data-plane configuration node.

Configuring Data-plane CPU

cpu main [exclusive] (1-256)

Assign entered CPU core as VPP main thread core. If **exclusive** keyword is used, isolate the CPU core from the OS scheduler.

no cpu main [[exclusive] (1-256)]

Change current assigned CPU to the main thread to default(Shared CPU 0).

cpu worker [exclusive] (1-256)...

Add a list of CPU cores to be used as VPP worker threads. If **exclusive** keyword is used, isolate CPU cores from the OS scheduler.

no cpu worker [[exclusive] (1-256)]

Remove a list of CPU cores from VPP worker threads. If command is used without any input, remove all VPP worker threads.

cpu weight (1-10000)

Set the service CPU time weight. Useful when CPU cores are shared between the OS scheduler and the service.

no cpu weight [(1-10000)]

Change the service CPU time weight to the default value of 100.

```
soodar(config)# system tune profile max-perf
soodar(tune-profile)# data-plane
soodar(tune-dp-cfg)# cpu main exclusive 1
soodar(tune-dp-cfg)# cpu worker exclusive 2 3 4 5
soodar(tune-dp-cfg)# cpu worker 6 7
```

Configuring Data-plane Memory

memory max SIZE

Limit the service maximum available memory to SIZE value. SIZE can be in bytes, human-readable format, or a percentage of the system's total memory.

memory heap main SIZE

Set the VPP main heap size to SIZE value.

no memory heap main [SIZE]

Reset the VPP main heap size to the default value of 1GB.

memory heap stats SIZE

Set the VPP stats heap size to SIZE value.

no memory heap stats [SIZE]

Reset the VPP stats heap size to the default value of 32MB.

```
soodar(config)# system tune profile max-perf
soodar(tune-profile)# data-plane
soodar(tune-dp-cfg)# memory heap main 2G
soodar(tune-dp-cfg)# memory heap stats 64M
soodar(tune-dp-cfg)# memory max 4G
```


Configuring Data-plane Buffers

memory packet-buffer size (2048-65536)

Set the packet buffer's data segment size.

no memory packet-buffer size [(2048-65536)]

Reset the packet buffer's data segment size to the default value of 2048.

memory packet-buffer count (16384-1049776)

Set the data-plane packet buffers' count.

no memory packet-buffer count [(16384-1049776)]

Reset the data-plane packet buffers' count to the default value of 16384

Warning: Changing buffer values can affect performance, and default values are the optimized values for most use cases.

Configuring Data-plane Poll Sleep

poll sleep (0-10000)

Set fixed sleep between VPP's main loop polls. The sleep is in microseconds.

no poll sleep [(0-10000)]

Disable fixed sleep between VPP's main loop polls.

```
soodar(config)# system tune profile max-perf
soodar(tune-profile)# data-plane
soodar(tune-dp-cfg)# poll sleep 100
```

Configuring Control-plane

control-plane

Enter Control-plane configuration node.

Configuring Control-plane CPU

cpu [exclusive] (1-256)...

Add a list of CPU cores for threads of this class's services. If **exclusive** keyword is used, isolate CPU cores from the OS scheduler.

no cpu worker [[exclusive] (1-256)]

Remove a list of CPU cores from services of this class. If the command is used without any input, remove all CPUs.

cpu weight (1-10000)

Set the service CPU time weight. Useful when CPU cores are shared between the OS scheduler and the service.

no cpu weight [(1-10000)]

Change the service CPU time weight to the default value of 100.

```
soodar(config)# system tune profile max-perf
soodar(tune-profile)# control-plane
soodar(tune-cp-cfg)# cpu exclusive 8
soodar(tune-cp-cfg)# cpu 9 10
soodar(tune-cp-cfg)# cpu weight 1000
```

Configuring Control-plane Memory

memory max SIZE

Limit the service maximum available memory to SIZE value. SIZE can be in bytes, human-readable format, or a percentage of the system's total memory.

```
soodar(config)# system tune profile max-perf
soodar(tune-profile)# control-plane
soodar(tune-cp-cfg)# memory max 16G
```

Configuring Management Plane

management-plane

Enter Management-plane configuration node.

Configuring Management-plane CPU

cpu [exclusive] (1-256)...

Add a list of CPU cores for threads of this class's services. If **exclusive** keyword is used, isolate CPU cores from the OS scheduler.

no cpu worker [[exclusive] (1-256)]

Remove a list of CPU cores from services of this class. If the command is used without any input, remove all CPUs.

cpu weight (1-10000)

Set the service CPU time weight. Useful when CPU cores are shared between the OS scheduler and the service.

no cpu weight [(1-10000)]

Change the service CPU time weight to the default value of 100.

```
soodar(config)# system tune profile max-perf
soodar(tune-profile)# control-plane
soodar(tune-mgmt-cfg)# cpu exclusive 11
```

Configuring management-plane Memory

memory max SIZE

Limit the service maximum available memory to SIZE value. SIZE can be in bytes, human-readable format, or a percentage of the system's total memory.

no memory max [SIZE]

Remove the service memory usage limit.

```
soodar(config)# system tune profile max-perf
soodar(tune-profile)# control-plane
soodar(tune-mgmt-cfg)# memory max 1G
```

Applying tuning profile

After creating a tuning profile, one can apply this profile to SoodarOS by using the following commands.

system tune apply PROFILE

Apply PROFILE to SoodarOS. To changes take effect, a machine restart is needed.

system tune apply default

Apply default profile to SoodarOS. To changes take effect, a machine restart is needed.

Tips

- CPU 0 is always used by the SoodarOS kernel. Try to assign services to other cores.
- It is best to use exclusive CPU cores for data-plane's threads(main or workers).
- One or 2 cores should be enough for control-plane and management-plane services, even they can be shared with the system kernel.
- Memory usage usually is not a concern, and limiting the memory usage could be skipped.
- Put all cores of your router to use!

1.4 Protocols

1.4.1 Bidirectional Forwarding Detection

BFD (Bidirectional Forwarding Detection) stands for Bidirectional Forwarding Detection and it is described and extended by the following RFCs:

- [RFC 5880](#)
- [RFC 5881](#)
- [RFC 5883](#)

BFDd Commands

bfd

Opens the BFD daemon configuration node.

peer <A.B.C.D|X:X::X:X> [{multihop|local-address <A.B.C.D|X:X::X:X>|interface IFNAME|vrf NAME}]

Creates and configures a new BFD peer to listen and talk to.

multihop tells the BFD daemon that we should expect packets with TTL less than 254 (because it will take more than one hop) and to listen on the multihop port (4784). When using multi-hop mode *echo-mode* will not work (see [RFC 5883](#) section 3).

local-address provides a local address that we should bind our peer listener to and the address we should use to send the packets. This option is mandatory for IPv6.

interface selects which interface we should use.

vrf selects which domain we want to use.

profile WORD

Creates a peer profile that can be configured in multiple peers.

Deleting the profile will cause all peers using it to reset to the default values.

show bfd [vrf NAME] peers [json]

Show all configured BFD peers information and current status.

show bfd [vrf NAME] peer <WORD|<A.B.C.D|X:X::X:X> [{multihop|local-address <A.B.C.D|X:X::X:X>|interface IFNAME}]> [json]

Show status for a specific BFD peer.

show bfd [vrf NAME] peers brief [json]

Show all configured BFD peers information and current status in brief.

show bfd distributed

Show the BFD data plane (distributed BFD) statistics.

Peer / Profile Configuration

BFD peers and profiles share the same BFD session configuration commands.

detect-multiplier (2-255)

Configures the detection multiplier to determine packet loss. The remote transmission interval will be multiplied by this value to determine the connection loss detection timer. The default value is 3.

Example: when the local system has *detect-multiplier 3* and the remote system has *transmission interval 300*, the local system will detect failures only after 900 milliseconds without receiving packets.

receive-interval (10-60000)

Configures the minimum interval that this system is capable of receiving control packets. The default value is 300 milliseconds.

transmit-interval (10-60000)

The minimum transmission interval (less jitter) that this system wants to use to send BFD control packets. Defaults to 300ms.

echo receive-interval <disabled|(10-60000)>

Configures the minimum interval that this system is capable of receiving echo packets. Disabled means that this system doesn't want to receive echo packets. The default value is 50 milliseconds.

echo transmit-interval (10-60000)

The minimum transmission interval (less jitter) that this system wants to use to send BFD echo packets. Defaults to 50ms.

[no] echo-mode

Enables or disables the echo transmission mode. This mode is disabled by default. If you are not using distributed BFD then echo mode works only when the peer is also FRR.

It is recommended that the transmission interval of control packets to be increased after enabling echo-mode to reduce bandwidth usage. For example: *transmit-interval 2000*.

Echo mode is not supported on multi-hop setups (see [RFC 5883](#) section 3).

[no] shutdown

Enables or disables the peer. When the peer is disabled an 'administrative down' message is sent to the remote peer.

[no] passive-mode

Mark session as passive: a passive session will not attempt to start the connection and will wait for control packets from peer before it begins replying.

This feature is useful when you have a router that acts as the central node of a star network and you want to avoid sending BFD control packets you don't need to.

The default is active-mode (or no `passive-mode`).

[no] minimum-ttl (1-254)

For multi hop sessions only: configure the minimum expected TTL for an incoming BFD control packet.

This feature serves the purpose of tightening the packet validation requirements to avoid receiving BFD control packets from other sessions.

The default value is 254 (which means we only expect one hop between this system and the peer).

BFD Peer Specific Commands**label WORD**

Labels a peer with the provided word. This word can be referenced later on other daemons to refer to a specific peer.

profile BFDPROF

Configure peer to use the profile configurations.

Notes:

- Profile configurations can be overridden on a peer basis by specifying new parameters in peer configuration node.
- Non existing profiles can be configured and they will only be applied once they start to exist.
- If the profile gets updated the new configuration will be applied to all peers with the profile without interruptions.

BGP BFD Configuration

The following commands are available inside the BGP configuration node.

neighbor <A.B.C.D|X:X::X:X|WORD> bfd

Listen for BFD events registered on the same target as this BGP neighbor. When BFD peer goes down it immediately asks BGP to shutdown the connection with its neighbor and, when it goes back up, notify BGP to try to connect to it.

neighbor <A.B.C.D|X:X::X:X|WORD> bfd check-control-plane-failure

Allow to write CBIT independence in BFD outgoing packets. Also allow to read both C-BIT value of BFD and lookup BGP peer status. This command is useful when a BFD down event is caught, while the BGP peer requested that local BGP keeps the remote BGP entries as staled if such issue is detected. This is the case when graceful restart is enabled, and it is wished to ignore the BD event while waiting for the remote router to restart.

Disabling this disables presence of CBIT independence in BFD outgoing packets and pays attention to BFD down notifications. This is the default.

neighbor <A.B.C.D|X:X::X:X|WORD> bfd profile BFDPROF

Same as command **neighbor <A.B.C.D|X:X::X:X|WORD> bfd**, but applies the BFD profile to the sessions it creates or that already exist.

IS-IS BFD Configuration

The following commands are available inside the interface configuration node.

isis bfd

Listen for BFD events on peers created on the interface. Every time a new neighbor is found a BFD peer is created to monitor the link status for fast convergence.

Note that there will be just one BFD session per interface. In case both IPv4 and IPv6 support are configured then just a IPv6 based session is created.

isis bfd profile BFDPROF

Use a BFD profile BFDPROF as provided in the BFD configuration.

OSPF BFD Configuration

The following commands are available inside the interface configuration node.

ip ospf bfd

Listen for BFD events on peers created on the interface. Every time a new neighbor is found a BFD peer is created to monitor the link status for fast convergence.

ip ospf bfd profile BFDPROF

Same as command **ip ospf bfd**, but applies the BFD profile to the sessions it creates or that already exist.

OSPF6 BFD Configuration

The following commands are available inside the interface configuration node.

ipv6 ospf6 bfd [profile BFDPROF]

Listen for BFD events on peers created on the interface. Every time a new neighbor is found a BFD peer is created to monitor the link status for fast convergence.

Optionally uses the BFD profile BFDPROF in the created sessions under that interface.

PIM BFD Configuration

The following commands are available inside the interface configuration node.

ip pim bfd [profile BFDPROF]

Listen for BFD events on peers created on the interface. Every time a new neighbor is found a BFD peer is created to monitor the link status for fast convergence.

Optionally uses the BFD profile BFDPROF in the created sessions under that interface.

Configuration

Before applying bfd rules to integrated daemons (like BGPd), we must create the corresponding peers inside the bfd configuration node.

Here is an example of BFD configuration:

```
bfd
peer 192.168.0.1
  label home-peer
  no shutdown
!
!
router bgp 65530
neighbor 192.168.0.1 remote-as 65531
neighbor 192.168.0.1 bfd
neighbor 192.168.0.2 remote-as 65530
neighbor 192.168.0.2 bfd
neighbor 192.168.0.3 remote-as 65532
neighbor 192.168.0.3 bfd
!
```

Peers can be identified by its address (use `multihop` when you need to specify a multi hop peer) or can be specified manually by a label.

Here are the available peer configurations:

```
bfd
! Configure a fast profile
profile fast
  receive-interval 150
  transmit-interval 150
!
```

(continues on next page)

(continued from previous page)

```
! Configure peer with fast profile
peer 192.168.0.6
  profile fast
  no shutdown
!

! Configure peer with fast profile and override receive speed.
peer 192.168.0.7
  profile fast
  receive-interval 500
  no shutdown
!

! configure a peer on an specific interface
peer 192.168.0.1 interface ge0
  no shutdown
!

! configure a multihop peer
peer 192.168.0.2 multihop local-address 192.168.0.3
  shutdown
!

! configure a peer in a different vrf
peer 192.168.0.3 vrf foo
  shutdown
!

! configure a peer with every option possible
peer 192.168.0.4
  label peer-label
  detect-multiplier 50
  receive-interval 60000
  transmit-interval 3000
  shutdown
!

! configure a peer on an interface from a separate vrf
peer 192.168.0.5 interface ge1 vrf vrf2
  no shutdown
!

! remove a peer
no peer 192.168.0.3 vrf foo
```


Status

You can inspect the current BFD peer status with the following commands:

```
soodar# show bfd peers
BFD Peers:
  peer 192.168.0.1
    ID: 1
    Remote ID: 1
    Status: up
    Uptime: 1 minute(s), 51 second(s)
    Diagnostics: ok
    Remote diagnostics: ok
    Peer Type: dynamic
    Local timers:
      Detect-multiplier: 3
      Receive interval: 300ms
      Transmission interval: 300ms
      Echo receive interval: 50ms
      Echo transmission interval: disabled
    Remote timers:
      Detect-multiplier: 3
      Receive interval: 300ms
      Transmission interval: 300ms
      Echo receive interval: 50ms

  peer 192.168.1.1
    label: router3-peer
    ID: 2
    Remote ID: 2
    Status: up
    Uptime: 1 minute(s), 53 second(s)
    Diagnostics: ok
    Remote diagnostics: ok
    Peer Type: configured
    Local timers:
      Detect-multiplier: 3
      Receive interval: 300ms
      Transmission interval: 300ms
      Echo receive interval: 50ms
      Echo transmission interval: disabled
    Remote timers:
      Detect-multiplier: 3
      Receive interval: 300ms
      Transmission interval: 300ms
      Echo receive interval: 50ms

soodar# show bfd peer 192.168.1.1
BFD Peer:
  peer 192.168.1.1
    label: router3-peer
    ID: 2
    Remote ID: 2
```

(continues on next page)

(continued from previous page)

```

Status: up
Uptime: 3 minute(s), 4 second(s)
Diagnostics: ok
Remote diagnostics: ok
Peer Type: dynamic
Local timers:
    Detect-multiplier: 3
    Receive interval: 300ms
    Transmission interval: 300ms
    Echo receive interval: 50ms
    Echo transmission interval: disabled
Remote timers:
    Detect-multiplier: 3
    Receive interval: 300ms
    Transmission interval: 300ms
    Echo receive interval: 50ms

soodar# show bfd peer 192.168.0.1 json
{"multihop":false,"peer":"192.168.0.1","id":1,"remote-id":1,"status":"up","uptime":161,
↪ "diagnostic":"ok","remote-diagnostic":"ok","receive-interval":300,"transmit-interval
↪ ":300,"echo-receive-interval":50,"echo-transmit-interval":0,"detect-multiplier":3,
↪ "remote-receive-interval":300,"remote-transmit-interval":300,"remote-echo-receive-
↪ interval":50,"remote-detect-multiplier":3,"peer-type":"dynamic"}

```

You can inspect the current BFD peer status in brief with the following commands:

```

soodar# show bfd peers brief
Session count: 1
SessionId  LocalAddress      PeerAddress      Status
=====  =====
1          192.168.0.1       192.168.0.2     up

```

You can also inspect peer session counters with the following commands:

```

soodar# show bfd peers counters
BFD Peers:
  peer 192.168.2.1 interface ge2
    Control packet input: 28 packets
    Control packet output: 28 packets
    Echo packet input: 0 packets
    Echo packet output: 0 packets
    Session up events: 1
    Session down events: 0
    Zebra notifications: 2

  peer 192.168.0.1
    Control packet input: 54 packets
    Control packet output: 103 packets
    Echo packet input: 965 packets
    Echo packet output: 966 packets
    Session up events: 1
    Session down events: 0

```

(continues on next page)

(continued from previous page)

```

Zebra notifications: 4

soodar# show bfd peer 192.168.0.1 counters
peer 192.168.0.1
  Control packet input: 126 packets
  Control packet output: 247 packets
  Echo packet input: 2409 packets
  Echo packet output: 2410 packets
  Session up events: 1
  Session down events: 0
  Zebra notifications: 4

soodar# show bfd peer 192.168.0.1 counters json
{"multihop":false,"peer":"192.168.0.1","control-packet-input":348,"control-packet-output
↪":685,"echo-packet-input":6815,"echo-packet-output":6816,"session-up":1,"session-down
↪":0,"zebra-notifications":4}

```

You can also clear packet counters per session with the following commands, only the packet counters will be reset:

```

soodar# clear bfd peers counters

soodar# show bfd peers counters
BFD Peers:
  peer 192.168.2.1 interface ge2
    Control packet input: 0 packets
    Control packet output: 0 packets
    Echo packet input: 0 packets
    Echo packet output: 0 packets
    Session up events: 1
    Session down events: 0
    Zebra notifications: 2

  peer 192.168.0.1
    Control packet input: 0 packets
    Control packet output: 0 packets
    Echo packet input: 0 packets
    Echo packet output: 0 packets
    Session up events: 1
    Session down events: 0
    Zebra notifications: 4

```

Debugging

By default only informational, warning and errors messages are going to be displayed. If you want to get debug messages and other diagnostics then make sure you have *debugging* level enabled:

```

config
log syslog debugging

```

You may also fine tune the debug messages by selecting one or more of the debug levels:

debug bfd network

Toggle network events: show messages about socket failures and unexpected BFD messages that may not belong to registered peers.

debug bfd peer

Toggle peer event log messages: show messages about peer creation/removal and state changes.

debug bfd zebra

Toggle zebra message events: show messages about interfaces, local addresses, VRF and daemon peer registrations.

1.4.2 BGP

BGP stands for Border Gateway Protocol. The latest BGP version is 4. BGP-4 is one of the Exterior Gateway Protocols and the de facto standard interdomain routing protocol. BGP-4 is described in [RFC 1771](#) and updated by [RFC 4271](#). [RFC 2858](#) adds multiprotocol support to BGP-4.

Basic Concepts

Autonomous Systems

From [RFC 1930](#):

An AS is a connected group of one or more IP prefixes run by one or more network operators which has a SINGLE and CLEARLY DEFINED routing policy.

Each AS has an identifying number associated with it called an ASN (Autonomous System Number). This is a two octet value ranging in value from 1 to 65535. The AS numbers 64512 through 65535 are defined as private AS numbers. Private AS numbers must not be advertised on the global Internet.

The ASN is one of the essential elements of BGP. BGP is a distance vector routing protocol, and the AS-Path framework provides distance vector metric and loop detection to BGP.

See also:

[RFC 1930](#)

Address Families

Multiprotocol extensions enable BGP to carry routing information for multiple network layer protocols. BGP supports an Address Family Identifier (AFI) for IPv4 and IPv6. Support is also provided for multiple sets of per-AFI information via the BGP Subsequent Address Family Identifier (SAFI). FRR supports SAFIs for unicast information, labeled information ([RFC 3107](#) and [RFC 8277](#)), and Layer 3 VPN information ([RFC 4364](#) and [RFC 4659](#)).

Route Selection

The route selection process used by FRR's BGP implementation uses the following decision criterion, starting at the top of the list and going towards the bottom until one of the factors can be used.

1. **Weight check**

Prefer higher local weight routes to lower routes.

2. **Local preference check**

Prefer higher local preference routes to lower.

3. **Local route check**

Prefer local routes (statics, aggregates, redistributed) to received routes.

4. **AS path length check**

Prefer shortest hop-count AS_PATHs.

5. **Origin check**

Prefer the lowest origin type route. That is, prefer IGP origin routes to EGP, to Incomplete routes.

6. **MED check**

Where routes with a MED were received from the same AS, prefer the route with the lowest MED. *Multi-Exit Discriminator*.

7. **External check**

Prefer the route received from an external, eBGP peer over routes received from other types of peers.

8. **IGP cost check**

Prefer the route with the lower IGP cost.

9. **Multi-path check**

If multi-pathing is enabled, then check whether the routes not yet distinguished in preference may be considered equal. If `bgp bestpath as-path multipath-relax` is set, all such routes are considered equal, otherwise routes received via iBGP with identical AS_PATHs or routes received from eBGP neighbours in the same AS are considered equal.

10. **Already-selected external check**

Where both routes were received from eBGP peers, then prefer the route which is already selected. Note that this check is not applied if `bgp bestpath compare-routerid` is configured. This check can prevent some cases of oscillation.

11. **Router-ID check**

Prefer the route with the lowest *router-ID*. If the route has an *ORIGINATOR_ID* attribute, through iBGP reflection, then that router ID is used, otherwise the *router-ID* of the peer the route was received from is used.

12. **Cluster-List length check**

The route with the shortest cluster-list length is used. The cluster-list reflects the iBGP reflection path the route has taken.

13. **Peer address**

Prefer the route received from the peer with the higher transport layer address, as a last-resort tie-breaker.

Capability Negotiation

When adding IPv6 routing information exchange feature to BGP. There were some proposals. IETF (Internet Engineering Task Force) IDR (Inter Domain Routing) adopted a proposal called Multiprotocol Extension for BGP. The specification is described in [RFC 2283](#). The protocol does not define new protocols. It defines new attributes to existing BGP. When it is used exchanging IPv6 routing information it is called BGP-4+. When it is used for exchanging multicast routing information it is called MBGP.

bgpd supports Multiprotocol Extension for BGP. So if a remote peer supports the protocol, *bgpd* can exchange IPv6 and/or multicast routing information.

Traditional BGP did not have the feature to detect a remote peer's capabilities, e.g. whether it can handle prefix types other than IPv4 unicast routes. This was a big problem using Multiprotocol Extension for BGP in an operational network. [RFC 2842](#) adopted a feature called Capability Negotiation. *bgpd* use this Capability Negotiation to detect the remote peer's capabilities. If a peer is only configured as an IPv4 unicast neighbor, *bgpd* does not send these Capability Negotiation packets (at least not unless other optional BGP features require capability negotiation).

By default, FRR will bring up peering with minimal common capability for the both sides. For example, if the local router has unicast and multicast capabilities and the remote router only has unicast capability the local router will establish the connection with unicast only capability. When there are no common capabilities, FRR sends Unsupported Capability error and then resets the connection.

BGP Router Configuration

ASN and Router ID

First of all you must configure BGP router with the `router bgp ASN` command. The AS number is an identifier for the autonomous system. The BGP protocol uses the AS number for detecting whether the BGP connection is internal or external.

router bgp ASN

Enable a BGP protocol process with the specified ASN. After this statement you can input any *BGP Commands*.

bgp router-id A.B.C.D

This command specifies the router-ID. If *bgpd* connects to *zebra* it gets interface and address information. In that case default router ID value is selected as the largest IP Address of the interfaces. When *router zebra* is not enabled *bgpd* can't get interface information so *router-id* is set to 0.0.0.0. So please set router-id by hand.

Multiple Autonomous Systems

FRR's BGP implementation is capable of running multiple autonomous systems at once. Each configured AS corresponds to a *zebra-vrf*. In the past, to get the same functionality the network administrator had to run a new *bgpd* process; using VRFs allows multiple autonomous systems to be handled in a single process.

When using multiple autonomous systems, all router config blocks after the first one must specify a VRF to be the target of BGP's route selection. This VRF must be unique within respect to all other VRFs being used for the same purpose, i.e. two different autonomous systems cannot use the same VRF. However, the same AS can be used with different VRFs.

Note: The separated nature of VRFs makes it possible to peer a single *bgpd* process to itself, on one machine. Note that this can be done fully within BGP without a corresponding VRF in the kernel or Zebra, which enables some practical use cases such as *route reflectors* and route servers.

Configuration of additional autonomous systems, or of a router that targets a specific VRF, is accomplished with the following command:

router bgp ASN vrf VRFNAME

VRFNAME is matched against VRFs configured in the kernel. When vrf VRFNAME is not specified, the BGP protocol process belongs to the default VRF.

An example configuration with multiple autonomous systems might look like this:

```
router bgp 1
neighbor 10.0.0.1 remote-as 20
neighbor 10.0.0.2 remote-as 30
!
router bgp 2 vrf blue
neighbor 10.0.0.3 remote-as 40
neighbor 10.0.0.4 remote-as 50
!
router bgp 3 vrf red
neighbor 10.0.0.5 remote-as 60
neighbor 10.0.0.6 remote-as 70
...
```

See also:

VRF Route Leaking

See also:

zebra-vrf

Views

In addition to supporting multiple autonomous systems, FRR's BGP implementation also supports *views*.

BGP views are almost the same as normal BGP processes, except that routes selected by BGP are not installed into the kernel routing table. Each BGP view provides an independent set of routing information which is only distributed via BGP. Multiple views can be supported, and BGP view information is always independent from other routing protocols and Zebra/kernel routes. BGP views use the core instance (i.e., default VRF) for communication with peers.

router bgp AS-NUMBER view NAME

Make a new BGP view. You can use an arbitrary word for the NAME. Routes selected by the view are not installed into the kernel routing table.

With this command, you can setup Route Server like below.

```
!
router bgp 1 view 1
neighbor 10.0.0.1 remote-as 2
neighbor 10.0.0.2 remote-as 3
!
router bgp 2 view 2
neighbor 10.0.0.3 remote-as 4
neighbor 10.0.0.4 remote-as 5
```

show [ip] bgp view NAME

Display the routing table of BGP view NAME.

Route Selection

bgp bestpath as-path confed

This command specifies that the length of confederation path sets and sequences should be taken into account during the BGP best path decision process.

bgp bestpath as-path multipath-relax

This command specifies that BGP decision process should consider paths of equal AS_PATH length candidates for multipath computation. Without the knob, the entire AS_PATH must match for multipath computation.

bgp bestpath compare-routerid

Ensure that when comparing routes where both are equal on most metrics, including local-pref, AS_PATH length, IGP cost, MED, that the tie is broken based on router-ID.

If this option is enabled, then the already-selected check, where already selected eBGP routes are preferred, is skipped.

If a route has an *ORIGINATOR_ID* attribute because it has been reflected, that *ORIGINATOR_ID* will be used. Otherwise, the router-ID of the peer the route was received from will be used.

The advantage of this is that the route-selection (at this point) will be more deterministic. The disadvantage is that a few or even one lowest-ID router may attract all traffic to otherwise-equal paths because of this check. It may increase the possibility of MED or IGP oscillation, unless other measures were taken to avoid these. The exact behaviour will be sensitive to the iBGP and reflection topology.

bgp bestpath peer-type multipath-relax

This command specifies that BGP decision process should consider paths from all peers for multipath computation. If this option is enabled, paths learned from any of eBGP, iBGP, or confederation neighbors will be multipath if they are otherwise considered equal cost.

maximum-paths (1-128)

Sets the maximum-paths value used for ecmp calculations for this bgp instance in EBGP. The maximum value listed, 128, can be limited by the ecmp cli for bgp or if the daemon was compiled with a lower ecmp value. This value can also be set in ipv4/ipv6 unicast/labeled unicast to only affect those particular afi/safi's.

maximum-paths ibgp (1-128) [equal-cluster-length]

Sets the maximum-paths value used for ecmp calculations for this bgp instance in IBGP. The maximum value listed, 128, can be limited by the ecmp cli for bgp or if the daemon was compiled with a lower ecmp value. This value can also be set in ipv4/ipv6 unicast/labeled unicast to only affect those particular afi/safi's.

Administrative Distance Metrics

distance bgp (1-255) (1-255) (1-255)

This command changes distance value of BGP. The arguments are the distance values for external routes, internal routes and local routes respectively.

distance (1-255) A.B.C.D/M

distance (1-255) A.B.C.D/M WORD

Sets the administrative distance for a particular route.

Require policy on EBGP

bgp ebgp-requires-policy

This command requires incoming and outgoing filters to be applied for eBGP sessions as part of RFC-8212 compliance. Without the incoming filter, no routes will be accepted. Without the outgoing filter, no routes will be announced.

This is enabled by default.

When you enable/disable this option you **MUST** clear the session.

When the incoming or outgoing filter is missing you will see “(Policy)” sign under `show bgp summary`:

```
exit1# show bgp summary

IPv4 Unicast Summary (VRF default):
BGP router identifier 10.10.10.1, local AS number 65001 vrf-id 0
BGP table version 4
RIB entries 7, using 1344 bytes of memory
Peers 2, using 43 KiB of memory

Neighbor      V      AS  MsgRcvd  MsgSent  TblVer  InQ  OutQ  Up/Down  State/
->PfxRcd  PfxSnt Desc
192.168.0.2   4      65002      8        10       0    0    0 00:03:09  _
->      5 (Policy) N/A
fe80:1::2222  4      65002      9        11       0    0    0 00:03:09  _
->(Policy) (Policy) N/A
```

Additionally a `show bgp neighbor` command would indicate in the *For address family*: block that:

```
exit1# show bgp neighbor
...
For address family: IPv4 Unicast
Update group 1, subgroup 1
Packet Queue length 0
Inbound soft reconfiguration allowed
Community attribute sent to this neighbor(all)
Inbound updates discarded due to missing policy
Outbound updates discarded due to missing policy
0 accepted prefixes
```

Reject routes with AS_SET or AS_CONFED_SET types

bgp reject-as-sets

This command enables rejection of incoming and outgoing routes having AS_SET or AS_CONFED_SET type.

Suppress duplicate updates

bgp suppress-duplicates

For example, BGP routers can generate multiple identical announcements with empty community attributes if stripped at egress. This is an undesired behavior. Suppress duplicate updates if the route actually not changed. Default: enabled.

Disable checking if nexthop is connected on EBGP sessions

bgp disable-ebgp-connected-route-check

This command is used to disable the connection verification process for EBGP peering sessions that are reachable by a single hop but are configured on a loopback interface or otherwise configured with a non-directly connected IP address.

Route Flap Dampening

bgp dampening (1-45) (1-20000) (1-20000) (1-255)

This command enables BGP route-flap dampening and specifies dampening parameters.

half-life

Half-life time for the penalty

reuse-threshold

Value to start reusing a route

suppress-threshold

Value to start suppressing a route

max-suppress

Maximum duration to suppress a stable route

The route-flap damping algorithm is compatible with [RFC 2439](#). The use of this command is not recommended nowadays.

At the moment, route-flap dampening is not working per VRF and is working only for IPv4 unicast and multicast.

See also:

<https://www.ripe.net/publications/docs/ripe-378>

Multi-Exit Discriminator

The BGP MED (Multi-Exit Discriminator) attribute has properties which can cause subtle convergence problems in BGP. These properties and problems have proven to be hard to understand, at least historically, and may still not be widely understood. The following attempts to collect together and present what is known about MED, to help operators and FRR users in designing and configuring their networks.

The BGP MED attribute is intended to allow one AS to indicate its preferences for its ingress points to another AS. The MED attribute will not be propagated on to another AS by the receiving AS - it is 'non-transitive' in the BGP sense.

E.g., if AS X and AS Y have 2 different BGP peering points, then AS X might set a MED of 100 on routes advertised at one and a MED of 200 at the other. When AS Y selects between otherwise equal routes to or via AS X, AS Y should prefer to take the path via the lower MED peering of 100 with AS X. Setting the MED allows an AS to influence the routing taken to it within another, neighbouring AS.

In this use of MED it is not really meaningful to compare the MED value on routes where the next AS on the paths differs. E.g., if AS Y also had a route for some destination via AS Z in addition to the routes from AS X, and AS Z had also set a MED, it wouldn't make sense for AS Y to compare AS Z's MED values to those of AS X. The MED values have been set by different administrators, with different frames of reference.

The default behaviour of BGP therefore is to not compare MED values across routes received from different neighbouring ASes. In FRR this is done by comparing the neighbouring, left-most AS in the received AS_PATHs of the routes and only comparing MED if those are the same.

Unfortunately, this behaviour of MED, of sometimes being compared across routes and sometimes not, depending on the properties of those other routes, means MED can cause the order of preference over all the routes to be undefined. That is, given routes A, B, and C, if A is preferred to B, and B is preferred to C, then a well-defined order should mean the preference is transitive (in the sense of orders¹) and that A would be preferred to C.

However, when MED is involved this need not be the case. With MED it is possible that C is actually preferred over A. So A is preferred to B, B is preferred to C, but C is preferred to A. This can be true even where BGP defines a deterministic 'most preferred' route out of the full set of A,B,C. With MED, for any given set of routes there may be a deterministically preferred route, but there need not be any way to arrange them into any order of preference. With unmodified MED, the order of preference of routes literally becomes undefined.

That MED can induce non-transitive preferences over routes can cause issues. Firstly, it may be perceived to cause routing table churn locally at speakers; secondly, and more seriously, it may cause routing instability in iBGP topologies, where sets of speakers continually oscillate between different paths.

The first issue arises from how speakers often implement routing decisions. Though BGP defines a selection process that will deterministically select the same route as best at any given speaker, even with MED, that process requires evaluating all routes together. For performance and ease of implementation reasons, many implementations evaluate route preferences in a pair-wise fashion instead. Given there is no well-defined order when MED is involved, the best route that will be chosen becomes subject to implementation details, such as the order the routes are stored in. That may be (locally) non-deterministic, e.g.: it may be the order the routes were received in.

This indeterminism may be considered undesirable, though it need not cause problems. It may mean additional routing churn is perceived, as sometimes more updates may be produced than at other times in reaction to some event .

This first issue can be fixed with a more deterministic route selection that ensures routes are ordered by the neighbouring AS during selection. *bgp deterministic-med*. This may reduce the number of updates as routes are received, and may in some cases reduce routing churn. Though, it could equally deterministically produce the largest possible set of updates in response to the most common sequence of received updates.

¹ For some set of objects to have an order, there *must* be some binary ordering relation that is defined for *every* combination of those objects, and that relation *must* be transitive. I.e., if the relation operator is <, and if $a < b$ and $b < c$ then that relation must carry over and it *must* be that $a < c$ for the objects to have an order. The ordering relation may allow for equality, i.e. $a < b$ and $b < a$ may both be true and imply that a and b are equal in the order and not distinguished by it, in which case the set has a partial order. Otherwise, if there is an order, all the objects have a distinct place in the order and the set has a total order)

A deterministic order of evaluation tends to imply an additional overhead of sorting over any set of n routes to a destination. The implementation of deterministic MED in FRR scales significantly worse than most sorting algorithms at present, with the number of paths to a given destination. That number is often low enough to not cause any issues, but where there are many paths, the deterministic comparison may quickly become increasingly expensive in terms of CPU.

Deterministic local evaluation can *not* fix the second, more major, issue of MED however. Which is that the non-transitive preference of routes MED can cause may lead to routing instability or oscillation across multiple speakers in iBGP topologies. This can occur with full-mesh iBGP, but is particularly problematic in non-full-mesh iBGP topologies that further reduce the routing information known to each speaker. This has primarily been documented with iBGP *route-reflection* topologies. However, any route-hiding technologies potentially could also exacerbate oscillation with MED.

This second issue occurs where speakers each have only a subset of routes, and there are cycles in the preferences between different combinations of routes - as the undefined order of preference of MED allows - and the routes are distributed in a way that causes the BGP speakers to ‘chase’ those cycles. This can occur even if all speakers use a deterministic order of evaluation in route selection.

E.g., speaker 4 in AS A might receive a route from speaker 2 in AS X, and from speaker 3 in AS Y; while speaker 5 in AS A might receive that route from speaker 1 in AS Y. AS Y might set a MED of 200 at speaker 1, and 100 at speaker 3. I.e., using ASN:ID:MED to label the speakers:

```

.
  /-----\\
X:2-----|--A:4-----A:5--|-Y:1:200
          Y:3:100--|-/   |
          \\-----/

```

Assuming all other metrics are equal (AS_PATH, ORIGIN, 0 IGP costs), then based on the RFC4271 decision process speaker 4 will choose X:2 over Y:3:100, based on the lower ID of 2. Speaker 4 advertises X:2 to speaker 5. Speaker 5 will continue to prefer Y:1:200 based on the ID, and advertise this to speaker 4. Speaker 4 will now have the full set of routes, and the Y:1:200 it receives from 5 will beat X:2, but when speaker 4 compares Y:1:200 to Y:3:100 the MED check now becomes active as the ASes match, and now Y:3:100 is preferred. Speaker 4 therefore now advertises Y:3:100 to 5, which will also agree that Y:3:100 is preferred to Y:1:200, and so withdraws the latter route from 4. Speaker 4 now has only X:2 and Y:3:100, and X:2 beats Y:3:100, and so speaker 4 implicitly updates its route to speaker 5 to X:2. Speaker 5 sees that Y:1:200 beats X:2 based on the ID, and advertises Y:1:200 to speaker 4, and the cycle continues.

The root cause is the lack of a clear order of preference caused by how MED sometimes is and sometimes is not compared, leading to this cycle in the preferences between the routes:

```

.
/----> X:2 ---beats----> Y:3:100 --\\
|
|
\\---beats--- Y:1:200 <---beats---/

```

This particular type of oscillation in full-mesh iBGP topologies can be avoided by speakers preferring already selected, external routes rather than choosing to update to new a route based on a post-MED metric (e.g. router-ID), at the cost of a non-deterministic selection process. FRR implements this, as do many other implementations, so long as it is not overridden by setting `bgp bestpath compare-routerid`, and see also *Route Selection*.

However, more complex and insidious cycles of oscillation are possible with iBGP route-reflection, which are not so easily avoided. These have been documented in various places. See, e.g.:

- [\[bgp-route-osci-cond\]](#)
- [\[stable-flexible-ibgp\]](#)

- [ibgp-correctness]

for concrete examples and further references.

There is as of this writing *no* known way to use MED for its original purpose; *and* reduce routing information in iBGP topologies; *and* be sure to avoid the instability problems of MED due the non-transitive routing preferences it can induce; in general on arbitrary networks.

There may be iBGP topology specific ways to reduce the instability risks, even while using MED, e.g.: by constraining the reflection topology and by tuning IGP costs between route-reflector clusters, see [RFC 3345](#) for details. In the near future, the Add-Path extension to BGP may also solve MED oscillation while still allowing MED to be used as intended, by distributing “best-paths per neighbour AS”. This would be at the cost of distributing at least as many routes to all speakers as a full-mesh iBGP would, if not more, while also imposing similar CPU overheads as the “Deterministic MED” feature at each Add-Path reflector.

More generally, the instability problems that MED can introduce on more complex, non-full-mesh, iBGP topologies may be avoided either by:

- Setting `bgp always-compare-med`, however this allows MED to be compared across values set by different neighbour ASes, which may not produce coherent desirable results, of itself.
- Effectively ignoring MED by setting MED to the same value (e.g.: 0) using `set metric METRIC` on all received routes, in combination with setting `bgp always-compare-med` on all speakers. This is the simplest and most performant way to avoid MED oscillation issues, where an AS is happy not to allow neighbours to inject this problematic metric.

As MED is evaluated after the AS_PATH length check, another possible use for MED is for intra-AS steering of routes with equal AS_PATH length, as an extension of the last case above. As MED is evaluated before IGP metric, this can allow cold-potato routing to be implemented to send traffic to preferred hand-offs with neighbours, rather than the closest hand-off according to the IGP metric.

Note that even if action is taken to address the MED non-transitivity issues, other oscillations may still be possible. E.g., on IGP cost if iBGP and IGP topologies are at cross-purposes with each other - see the Flavel and Roughan paper above for an example. Hence the guideline that the iBGP topology should follow the IGP topology.

bgp deterministic-med

Carry out route-selection in way that produces deterministic answers locally, even in the face of MED and the lack of a well-defined order of preference it can induce on routes. Without this option the preferred route with MED may be determined largely by the order that routes were received in.

Setting this option will have a performance cost that may be noticeable when there are many routes for each destination. Currently in FRR it is implemented in a way that scales poorly as the number of routes per destination increases.

The default is that this option is not set.

Note that there are other sources of indeterminism in the route selection process, specifically, the preference for older and already selected routes from eBGP peers, [Route Selection](#).

bgp always-compare-med

Always compare the MED on routes, even when they were received from different neighbouring ASes. Setting this option makes the order of preference of routes more defined, and should eliminate MED induced oscillations.

If using this option, it may also be desirable to use `set metric METRIC` to set MED to 0 on routes received from external neighbours.

This option can be used, together with `set metric METRIC` to use MED as an intra-AS metric to steer equal-length AS_PATH routes to, e.g., desired exit points.

Graceful Restart

BGP graceful restart functionality as defined in [RFC-4724](#) defines the mechanisms that allows BGP speaker to continue to forward data packets along known routes while the routing protocol information is being restored.

Usually, when BGP on a router restarts, all the BGP peers detect that the session went down and then came up. This “down/up” transition results in a “routing flap” and causes BGP route re-computation, generation of BGP routing updates, and unnecessary churn to the forwarding tables.

The following functionality is provided by graceful restart:

1. The feature allows the restarting router to indicate to the helping peer the routes it can preserve in its forwarding plane during control plane restart by sending graceful restart capability in the OPEN message sent during session establishment.
2. The feature allows helping router to advertise to all other peers the routes received from the restarting router which are preserved in the forwarding plane of the restarting router during control plane restart.

```
(R1)----- (R2)
1. BGP Graceful Restart Capability exchanged between R1 & R2.
<----->
2. Kill BGP Process at R1.
----->
3. R2 Detects the above BGP Restart & verifies BGP Restarting
   Capability of R1.
4. Start BGP Process at R1.
5. Re-establish the BGP session between R1 & R2.
<----->
6. R2 Send initial route updates, followed by End-Of-Rib.
<----->
7. R1 was waiting for End-Of-Rib from R2 & which has been received
   now.
8. R1 now runs BGP Best-Path algorithm. Send Initial BGP Update,
   followed by End-Of Rib
<----->
```

BGP-GR Preserve-Forwarding State

BGP OPEN message carrying optional capabilities for Graceful Restart has 8 bit “Flags for Address Family” for given AFI and SAFI. This field contains bit flags relating to routes that were advertised with the given AFI and SAFI.

```

0 1 2 3 4 5 6 7
+--+--+--+--+--+--+
|F|  Reserved  |
+--+--+--+--+--+--+

```

The most significant bit is defined as the Forwarding State (F) bit, which can be used to indicate whether the forwarding state for routes that were advertised with the given AFI and SAFI has indeed been preserved during the previous BGP restart. When set (value 1), the bit indicates that the forwarding state has been preserved. The remaining bits are reserved and MUST be set to zero by the sender and ignored by the receiver.

bgp graceful-restart preserve-fw-state

FRR gives us the option to enable/disable the “F” flag using this specific vty command. However, it doesn’t have the option to enable/disable this flag only for specific AFI/SAFI i.e. when this command is used, it applied to all the supported AFI/SAFI combinations for this peer.

End-of-RIB (EOR) message

An UPDATE message with no reachable Network Layer Reachability Information (NLRI) and empty withdrawn NLRI is specified as the End-of-RIB marker that can be used by a BGP speaker to indicate to its peer the completion of the initial routing update after the session is established.

For the IPv4 unicast address family, the End-of-RIB marker is an UPDATE message with the minimum length. For any other address family, it is an UPDATE message that contains only the MP_UNREACH_NLRI attribute with no withdrawn routes for that <AFI, SAFI>.

Although the End-of-RIB marker is specified for the purpose of BGP graceful restart, it is noted that the generation of such a marker upon completion of the initial update would be useful for routing convergence in general, and thus the practice is recommended.

Route Selection Deferral Timer

Specifies the time the restarting router defers the route selection process after restart.

Restarting Router : The usage of route election deferral timer is specified in <https://tools.ietf.org/html/rfc4724#section-4.1>

Once the session between the Restarting Speaker and the Receiving Speaker is re-established, the Restarting Speaker will receive and process BGP messages from its peers.

However, it MUST defer route selection for an address family until it either.

1. Receives the End-of-RIB marker from all its peers (excluding the ones with the “Restart State” bit set in the received capability and excluding the ones that do not advertise the graceful restart capability).
2. The Selection_Deferral_Timer timeout.

bgp graceful-restart select-defer-time (0-3600)

This is command, will set deferral time to value specified.

bgp graceful-restart rib-stale-time (1-3600)

This is command, will set the time for which stale routes are kept in RIB.

bgp graceful-restart stalepath-time (1-4095)

This is command, will set the max time (in seconds) to hold onto restarting peer's stale paths.

It also controls Enhanced Route-Refresh timer.

If this command is configured and the router does not receive a Route-Refresh EoRR message, the router removes the stale routes from the BGP table after the timer expires. The stale path timer is started when the router receives a Route-Refresh BoRR message.

BGP Per Peer Graceful Restart

Ability to enable and disable graceful restart, helper and no GR at all mode functionality at peer level.

So bgp graceful restart can be enabled at modes global BGP level or at per peer level. There are two FSM, one for BGP GR global mode and other for peer per GR.

Default global mode is helper and default peer per mode is inherit from global. If per peer mode is configured, the GR mode of this particular peer will override the global mode.

BGP GR Global Mode Commands

bgp graceful-restart

This command will enable BGP graceful restart functionality at the global level.

bgp graceful-restart disable

This command will disable both the functionality graceful restart and helper mode.

BGP GR Peer Mode Commands

neighbor A.B.C.D graceful-restart

This command will enable BGP graceful restart functionality at the peer level.

neighbor A.B.C.D graceful-restart-helper

This command will enable BGP graceful restart helper only functionality at the peer level.

neighbor A.B.C.D graceful-restart-disable

This command will disable the entire BGP graceful restart functionality at the peer level.

Administrative Shutdown

bgp shutdown [message MSG...]

Administrative shutdown of all peers of a bgp instance. Drop all BGP peers, but preserve their configurations. The peers are notified in accordance with [RFC 8203](#) by sending a NOTIFICATION message with error code Cease and subcode Administrative Shutdown prior to terminating connections. This global shutdown is independent of the neighbor shutdown, meaning that individually shut down peers will not be affected by lifting it.

An optional shutdown message *MSG* can be specified.

Networks

network A.B.C.D/M

This command adds the announcement network.

```
router bgp 1
address-family ipv4 unicast
network 10.0.0.0/8
exit-address-family
```

This configuration example says that network 10.0.0.0/8 will be announced to all neighbors. Some vendors' routers don't advertise routes if they aren't present in their IGP routing tables; *bgpd* doesn't care about IGP routes when announcing its routes.

bgp network import-check

This configuration modifies the behavior of the network statement. If you have this configured the underlying network must exist in the rib. If you have the [no] form configured then BGP will not check for the networks existence in the rib. default is the network must exist.

IPv6 Support

neighbor A.B.C.D activate

This configuration modifies whether to enable an address family for a specific neighbor. By default only the IPv4 unicast address family is enabled.

```
router bgp 1
address-family ipv6 unicast
neighbor 2001:0DB8::1 activate
network 2001:0DB8:5009::/64
exit-address-family
```

This configuration example says that network 2001:0DB8:5009::/64 will be announced and enables the neighbor 2001:0DB8::1 to receive this announcement.

By default, only the IPv4 unicast address family is announced to all neighbors. Using the 'no bgp default ipv4-unicast' configuration overrides this default so that all address families need to be enabled explicitly.

```
router bgp 1
no bgp default ipv4-unicast
neighbor 10.10.10.1 remote-as 2
neighbor 2001:0DB8::1 remote-as 3
address-family ipv4 unicast
neighbor 10.10.10.1 activate
network 192.168.1.0/24
exit-address-family
address-family ipv6 unicast
neighbor 2001:0DB8::1 activate
network 2001:0DB8:5009::/64
exit-address-family
```

This configuration demonstrates how the 'no bgp default ipv4-unicast' might be used in a setup with two upstreams where each of the upstreams should only receive either IPv4 or IPv6 announcements.

Using the `bgp default ipv6-unicast` configuration, IPv6 unicast address family is enabled by default for all new neighbors.

Route Aggregation

Route Aggregation-IPv4 Address Family

aggregate-address A.B.C.D/M

This command specifies an aggregate address.

In order to advertise an aggregated prefix, a more specific (longer) prefix **MUST** exist in the BGP table. For example, if you want to create an `aggregate-address 10.0.0.0/24`, you should make sure you have something like `10.0.0.5/32` or `10.0.0.0/26`, or any other smaller prefix in the BGP table. The routing information table (RIB) is not enough, you have to redistribute them into the BGP table.

aggregate-address A.B.C.D/M route-map NAME

Apply a route-map for an aggregated prefix.

aggregate-address A.B.C.D/M origin <egp|igp|incomplete>

Override ORIGIN for an aggregated prefix.

aggregate-address A.B.C.D/M as-set

This command specifies an aggregate address. Resulting routes include AS set.

aggregate-address A.B.C.D/M summary-only

This command specifies an aggregate address.

Longer prefixes advertisements of more specific routes to all neighbors are suppressed.

aggregate-address A.B.C.D/M matching-MED-only

Configure the aggregated address to only be created when the routes MED match, otherwise no aggregated route will be created.

aggregate-address A.B.C.D/M suppress-map NAME

Similar to *summary-only*, but will only suppress more specific routes that are matched by the selected route-map.

This configuration example sets up an `aggregate-address` under the `ipv4` address-family.

```
router bgp 1
address-family ipv4 unicast
  aggregate-address 10.0.0.0/8
  aggregate-address 20.0.0.0/8 as-set
  aggregate-address 40.0.0.0/8 summary-only
  aggregate-address 50.0.0.0/8 route-map aggr-rmap
exit-address-family
```

Route Aggregation-IPv6 Address Family

aggregate-address X:X::X:X/M

This command specifies an aggregate address.

aggregate-address X:X::X:X/M route-map NAME

Apply a route-map for an aggregated prefix.

aggregate-address X:X::X:X/M origin <egp|igp|incomplete>

Override ORIGIN for an aggregated prefix.

aggregate-address X:X::X:X/M as-set

This command specifies an aggregate address. Resulting routes include AS set.

aggregate-address X:X::X:X/M summary-only

This command specifies an aggregate address.

Longer prefixes advertisements of more specific routes to all neighbors are suppressed

aggregate-address X:X::X:X/M matching-MED-only

Configure the aggregated address to only be created when the routes MED match, otherwise no aggregated route will be created.

aggregate-address X:X::X:X/M suppress-map NAME

Similar to *summary-only*, but will only suppress more specific routes that are matched by the selected route-map.

This configuration example sets up an `aggregate-address` under the `ipv6` address-family.

```
router bgp 1
 address-family ipv6 unicast
  aggregate-address 10::0/64
  aggregate-address 20::0/64 as-set
  aggregate-address 40::0/64 summary-only
  aggregate-address 50::0/64 route-map aggr-rmap
 exit-address-family
```

Redistribution

Redistribution configuration should be placed under the `address-family` section for the specific AF to redistribute into. Protocol availability for redistribution is determined by BGP AF; for example, you cannot redistribute OSPFv3 into `address-family ipv4 unicast` as OSPFv3 supports IPv6.

redistribute <connected|isis|kernel|ospf|ospf6|rip|ripng|static|table> [metric (0-4294967295)] [route-m

Redistribute routes from other protocols into BGP. .. clicmd:: bgp update-delay MAX-DELAY ESTABLISH-WAIT

This feature is used to enable read-only mode on BGP process restart or when a BGP process is cleared using `'clear ip bgp *'`. Note that this command is configured at the global level and applies to all bgp instances/vrfs. It cannot be used at the same time as the “update-delay” command described below, which is entered in each bgp instance/vrf desired to delay update installation and advertisements. The global and per-vrf approaches to defining update-delay are mutually exclusive.

When applicable, read-only mode would begin as soon as the first peer reaches Established status and a timer for max-delay seconds is started. During this mode BGP doesn't run any best-path or generate any updates to its peers. This mode continues until:

1. All the configured peers, except the shutdown peers, have sent explicit EOR (End-Of-RIB) or an implicit-EOR. The first keep-alive after BGP has reached Established is considered an implicit-EOR. If the establish-wait optional value is given, then BGP will wait for peers to reach established from the beginning of the update-delay till the establish-wait period is over, i.e. the minimum set of established peers for which EOR is expected would be peers established during the establish-wait window, not necessarily all the configured neighbors.
2. max-delay period is over.

On hitting any of the above two conditions, BGP resumes the decision process and generates updates to its peers.

Default max-delay is 0, i.e. the feature is off by default.

update-delay MAX-DELAY

update-delay MAX-DELAY ESTABLISH-WAIT

This feature is used to enable read-only mode on BGP process restart or when a BGP process is cleared using 'clear ip bgp *'. Note that this command is configured under the specific bgp instance/vrf that the feature is enabled for. It cannot be used at the same time as the global "bgp update-delay" described above, which is entered at the global level and applies to all bgp instances. The global and per-vrf approaches to defining update-delay are mutually exclusive.

When applicable, read-only mode would begin as soon as the first peer reaches Established status and a timer for max-delay seconds is started. During this mode BGP doesn't run any best-path or generate any updates to its peers. This mode continues until:

1. All the configured peers, except the shutdown peers, have sent explicit EOR (End-Of-RIB) or an implicit-EOR. The first keep-alive after BGP has reached Established is considered an implicit-EOR. If the establish-wait optional value is given, then BGP will wait for peers to reach established from the beginning of the update-delay till the establish-wait period is over, i.e. the minimum set of established peers for which EOR is expected would be peers established during the establish-wait window, not necessarily all the configured neighbors.
2. max-delay period is over.

On hitting any of the above two conditions, BGP resumes the decision process and generates updates to its peers.

Default max-delay is 0, i.e. the feature is off by default.

table-map ROUTE-MAP-NAME

This feature is used to apply a route-map on route updates from BGP to Zebra. All the applicable match operations are allowed, such as match on prefix, next-hop, communities, etc. Set operations for this attach-point are limited to metric and next-hop only. Any operation of this feature does not affect BGP's internal RIB.

Supported for ipv4 and ipv6 address families. It works on multi-paths as well, however, metric setting is based on the best-path only.

Peers

Defining Peers

neighbor PEER remote-as ASN

Creates a new neighbor whose remote-as is ASN. PEER can be an IPv4 address or an IPv6 address or an interface to use for the connection.

```
router bgp 1
neighbor 10.0.0.1 remote-as 2
```

In this case my router, in AS-1, is trying to peer with AS-2 at 10.0.0.1.

This command must be the first command used when configuring a neighbor. If the remote-as is not specified, *bgpd* will complain like this:

```
can't find neighbor 10.0.0.1
```

neighbor PEER remote-as internal

Create a peer as you would when you specify an ASN, except that if the peers ASN is different than mine as specified under the *router bgp ASN* command the connection will be denied.

neighbor PEER remote-as external

Create a peer as you would when you specify an ASN, except that if the peers ASN is the same as mine as specified under the *router bgp ASN* command the connection will be denied.

bgp listen range <A.B.C.D/M|X:X::X:X/M> peer-group PNAME

Accept connections from any peers in the specified prefix. Configuration from the specified peer-group is used to configure these peers.

Note: When using BGP listen ranges, if the associated peer group has TCP MD5 authentication configured, your kernel must support this on prefixes. On Linux, this support was added in kernel version 4.14. If your kernel does not support this feature you will get a warning in the log file, and the listen range will only accept connections from peers without MD5 configured.

Additionally, we have observed that when using this option at scale (several hundred peers) the kernel may hit its option memory limit. In this situation you will see error messages like:

```
bgpd: sockopt_tcp_signature: setsockopt(23): Cannot allocate memory
```

In this case you need to increase the value of the `sysctl net.core.optmem_max` to allow the kernel to allocate the necessary option memory.

bgp listen limit <1-65535>

Define the maximum number of peers accepted for one BGP instance. This limit is set to 100 by default. Increasing this value will really be possible if more file descriptors are available in the BGP process.

coalesce-time (0-4294967295)

The time in milliseconds that BGP will delay before deciding what peers can be put into an update-group together in order to generate a single update for them. The default time is 1000.

Configuring Peers

neighbor PEER shutdown [message MSG...] [rtt (1-65535) [count (1-255)]]

Shutdown the peer. We can delete the neighbor's configuration by no `neighbor PEER remote-as ASN` but all configuration of the neighbor will be deleted. When you want to preserve the configuration, but want to drop the BGP peer, use this syntax.

Optionally you can specify a shutdown message *MSG*.

Also, you can specify optionally `rtt` in milliseconds to automatically shutdown the peer if round-trip-time becomes higher than defined.

Additional `count` parameter is the number of keepalive messages to count before shutdown the peer if round-trip-time becomes higher than defined.

neighbor PEER disable-connected-check

Allow peerings between directly connected eBGP peers using loopback addresses.

neighbor PEER disable-link-bw-encoding-ieee

By default bandwidth in extended communities is carried encoded as IEEE floating-point format, which is according to the draft.

Older versions have the implementation where extended community bandwidth value is carried encoded as uint32. To enable backward compatibility we need to disable IEEE floating-point encoding option per-peer.

neighbor PEER ebgp-multihop

Specifying `ebgp-multihop` allows sessions with eBGP neighbors to establish when they are multiple hops away. When the neighbor is not directly connected and this knob is not enabled, the session will not establish.

If the peer's IP address is not in the RIB and is reachable via the default route, then you have to enable `ip nht resolve-via-default`.

neighbor PEER description ...

Set description of the peer.

neighbor PEER version VERSION

Set up the neighbor's BGP version. *version* can be *4*, *4+* or *4-*. BGP version *4* is the default value used for BGP peering. BGP version *4+* means that the neighbor supports Multiprotocol Extensions for BGP-4. BGP version *4-* is similar but the neighbor speaks the old Internet-Draft revision 00's Multiprotocol Extensions for BGP-4. Some routing software is still using this version.

neighbor PEER interface IFNAME

When you connect to a BGP peer over an IPv6 link-local address, you have to specify the IFNAME of the interface used for the connection. To specify IPv4 session addresses, see the `neighbor PEER update-source` command below.

neighbor PEER interface remote-as <internal|external|ASN>

Configure an unnumbered BGP peer. PEER should be an interface name. The session will be established via IPv6 link locals. Use `internal` for iBGP and `external` for eBGP sessions, or specify an ASN if you wish.

neighbor PEER next-hop-self [force]

This command specifies an announced route's nexthop as being equivalent to the address of the bgp router if it is learned via eBGP. This will also bypass third-party next-hops in favor of the local bgp address. If the optional keyword `force` is specified the modification is done also for routes learned via iBGP.

neighbor PEER attribute-unchanged [{as-path|next-hop|med}]

This command specifies attributes to be left unchanged for advertisements sent to a peer. Use this to leave the next-hop unchanged in ipv6 configurations, as the route-map directive to leave the next-hop unchanged is only available for ipv4.

neighbor PEER update-source <IFNAME|ADDRESS>

Specify the IPv4 source address to use for the BGP session to this neighbour, may be specified as either an IPv4 address directly or as an interface name (in which case the *zebra* daemon MUST be running in order for *bgpd* to be able to retrieve interface state).

```
router bgp 64555
neighbor foo update-source 192.168.0.1
neighbor bar update-source loopback0
```

neighbor PEER default-originate

bgpd's default is to not announce the default route (0.0.0.0/0) even if it is in routing table. When you want to announce default routes to the peer, use this command.

neighbor PEER port PORT

neighbor PEER password PASSWORD

Set a MD5 password to be used with the tcp socket that is being used to connect to the remote peer. Please note if you are using this command with a large number of peers on linux you should consider modifying the *net.core.optmem_max* sysctl to a larger value to avoid out of memory errors from the linux kernel.

neighbor PEER send-community

neighbor PEER weight WEIGHT

This command specifies a default *weight* value for the neighbor's routes.

neighbor PEER maximum-prefix NUMBER [force]

Sets a maximum number of prefixes we can receive from a given peer. If this number is exceeded, the BGP session will be destroyed.

In practice, it is generally preferable to use a prefix-list to limit what prefixes are received from the peer instead of using this knob. Tearing down the BGP session when a limit is exceeded is far more destructive than merely rejecting undesired prefixes. The prefix-list method is also much more granular and offers much smarter matching criterion than number of received prefixes, making it more suited to implementing policy.

If *force* is set, then ALL prefixes are counted for maximum instead of accepted only. This is useful for cases where an inbound filter is applied, but you want maximum-prefix to act on ALL (including filtered) prefixes. This option requires *soft-reconfiguration inbound* to be enabled for the peer.

neighbor PEER maximum-prefix-out NUMBER

Sets a maximum number of prefixes we can send to a given peer.

Since sent prefix count is managed by update-groups, this option creates a separate update-group for outgoing updates.

neighbor PEER local-as AS-NUMBER [no-prepend] [replace-as]

Specify an alternate AS for this BGP process when interacting with the specified peer. With no modifiers, the specified local-as is prepended to the received AS_PATH when receiving routing updates from the peer, and prepended to the outgoing AS_PATH (after the process local AS) when transmitting local routes to the peer.

If the no-prepend attribute is specified, then the supplied local-as is not prepended to the received AS_PATH.

If the replace-as attribute is specified, then only the supplied local-as is prepended to the AS_PATH when transmitting local-route updates to this peer.

Note that replace-as can only be specified if no-prepend is.

This command is only allowed for eBGP peers.

neighbor <A.B.C.D|X:X::X:X|WORD> as-override

Override AS number of the originating router with the local AS number.

Usually this configuration is used in PEs (Provider Edge) to replace the incoming customer AS number so the connected CE (Customer Edge) can use the same AS number as the other customer sites. This allows customers of the provider network to use the same AS number across their sites.

This command is only allowed for eBGP peers.

neighbor <A.B.C.D|X:X::X:X|WORD> allowas-in [<(1-10)|origin>]

Accept incoming routes with AS path containing AS number with the same value as the current system AS.

This is used when you want to use the same AS number in your sites, but you can't connect them directly. This is an alternative to *neighbor WORD as-override*.

The parameter (1-10) configures the amount of accepted occurrences of the system AS number in AS path.

The parameter *origin* configures BGP to only accept routes originated with the same AS number as the system.

This command is only allowed for eBGP peers.

neighbor <A.B.C.D|X:X::X:X|WORD> addpath-tx-all-paths

Configure BGP to send all known paths to neighbor in order to preserve multi path capabilities inside a network.

neighbor <A.B.C.D|X:X::X:X|WORD> addpath-tx-bestpath-per-AS

Configure BGP to send best known paths to neighbor in order to preserve multi path capabilities inside a network.

neighbor <A.B.C.D|X:X::X:X|WORD> disable-addpath-rx

Do not accept additional paths from this neighbor.

neighbor PEER ttl-security hops NUMBER

This command enforces Generalized TTL Security Mechanism (GTSM), as specified in RFC 5082. With this command, only neighbors that are the specified number of hops away will be allowed to become neighbors. This command is mutually exclusive with *ebgp-multihop*.

neighbor PEER capability extended-nexthop

Allow bgp to negotiate the extended-nexthop capability with it's peer. If you are peering over a v6 LL address then this capability is turned on automatically. If you are peering over a v6 Global Address then turning on this command will allow BGP to install v4 routes with v6 nexthops if you do not have v4 configured on interfaces.

bgp fast-external-failover

This command causes bgp to not take down ebgp peers immediately when a link flaps. *bgp fast-external-failover* is the default and will not be displayed as part of a *show run*. The no form of the command turns off this ability.

bgp default ipv4-unicast

This command allows the user to specify that the IPv4 Unicast address family is turned on by default or not. This command defaults to on and is not displayed. The *no bgp default ipv4-unicast* form of the command is displayed.

bgp default ipv4-vpn

This command allows the user to specify that the IPv4 MPLS VPN address family is turned on by default or not. This command defaults to off and is not displayed. The *bgp default ipv4-vpn* form of the command is displayed.

bgp default ipv6-unicast

This command allows the user to specify that the IPv6 Unicast address family is turned on by default or not. This command defaults to off and is not displayed. The *bgp default ipv6-unicast* form of the command is displayed.

bgp default ipv6-vpn

This command allows the user to specify that the IPv6 MPLS VPN address family is turned on by default or not. This command defaults to off and is not displayed. The *bgp default ipv6-vpn* form of the command is displayed.

bgp default show-hostname

This command shows the hostname of the peer in certain BGP commands outputs. It's easier to troubleshoot if you have a number of BGP peers.

bgp default show-nexthop-hostname

This command shows the hostname of the next-hop in certain BGP commands outputs. It's easier to troubleshoot if you have a number of BGP peers and a number of routes to check.

neighbor PEER advertisement-interval (0-600)

Setup the minimum route advertisement interval(mrai) for the peer in question. This number is between 0 and 600 seconds, with the default advertisement interval being 0.

neighbor PEER timers (0-65535) (0-65535)

Set keepalive and hold timers for a neighbor. The first value is keepalive and the second is hold time.

neighbor PEER timers connect (1-65535)

Set connect timer for a neighbor. The connect timer controls how long BGP waits between connection attempts to a neighbor.

neighbor PEER timers delayopen (1-240)

This command allows the user enable the *RFC 4271* <<https://tools.ietf.org/html/rfc4271/>> DelayOpenTimer with the specified interval or disable it with the negating command for the peer. By default, the DelayOpenTimer is disabled. The timer interval may be set to a duration of 1 to 240 seconds.

bgp minimum-holdtime (1-65535)

This command allows user to prevent session establishment with BGP peers with lower holdtime less than configured minimum holdtime. When this command is not set, minimum holdtime does not work.

Displaying Information about Peers**show bgp <afi> <safi> neighbors WORD bestpath-routes [json] [wide]**

For the given neighbor, WORD, that is specified list the routes selected by BGP as having the best path.

Peer Filtering**neighbor PEER distribute-list NAME [in|out]**

This command specifies a distribute-list for the peer. *direct* is *in* or *out*.

neighbor PEER prefix-list NAME [in|out]**neighbor PEER filter-list NAME [in|out]****neighbor PEER route-map NAME [in|out]**

Apply a route-map on the neighbor. *direct* must be *in* or *out*.

bgp route-reflector allow-outbound-policy

By default, attribute modification via route-map policy out is not reflected on reflected routes. This option allows the modifications to be reflected as well. Once enabled, it affects all reflected routes.

neighbor PEER sender-as-path-loop-detection

Enable the detection of sender side AS path loops and filter the bad routes before they are sent.

This setting is disabled by default.

Peer Groups

Peer groups are used to help improve scaling by generating the same update information to all members of a peer group. Note that this means that the routes generated by a member of a peer group will be sent back to that originating peer with the originator identifier attribute set to indicated the originating peer. All peers not associated with a specific peer group are treated as belonging to a default peer group, and will share updates.

neighbor WORD peer-group

This command defines a new peer group.

neighbor PEER peer-group PNAME

This command bind specific peer to peer group WORD.

neighbor PEER solo

This command is used to indicate that routes advertised by the peer should not be reflected back to the peer. This command only is only meaningful when there is a single peer defined in the peer-group.

show [ip] bgp peer-group [json]

This command displays configured BGP peer-groups.

```
soodar# show bgp peer-group

BGP peer-group test1, remote AS 65001
Peer-group type is external
Configured address-families: IPv4 Unicast; IPv6 Unicast;
1 IPv4 listen range(s)
  192.168.100.0/24
2 IPv6 listen range(s)
  2001:db8:1::/64
  2001:db8:2::/64
Peer-group members:
  192.168.200.1 Active
  2001:db8::1 Active

BGP peer-group test2
Peer-group type is external
Configured address-families: IPv4 Unicast;
```

Optional json parameter is used to display JSON output.

```
{
  "test1":{
    "remoteAs":65001,
    "type":"external",
    "addressFamiliesConfigured":[
      "IPv4 Unicast",
      "IPv6 Unicast"
    ],
    "dynamicRanges":{
      "IPv4":{
        "count":1,
        "ranges":[
          "192.168.100.0\24"
        ]
      },
      "IPv6":{
        "count":2,
        "ranges":[
          "2001:db8:1::\64",
          "2001:db8:2::\64"
        ]
      }
    }
  },
  "members":{
    "192.168.200.1":{
      "status":"Active"
    }
  },
}
```

(continues on next page)

(continued from previous page)

```

    "2001:db8::1":{
      "status":"Active"
    }
  },
  "test2":{
    "type":"external",
    "addressFamiliesConfigured":[
      "IPv4 Unicast"
    ]
  }
}

```

Capability Negotiation

neighbor PEER strict-capability-match

Strictly compares remote capabilities and local capabilities. If capabilities are different, send Unsupported Capability error then reset connection.

You may want to disable sending Capability Negotiation OPEN message optional parameter to the peer when remote peer does not implement Capability Negotiation. Please use *dont-capability-negotiate* command to disable the feature.

neighbor PEER dont-capability-negotiate

Suppress sending Capability Negotiation as OPEN message optional parameter to the peer. This command only affects the peer is configured other than IPv4 unicast configuration.

When remote peer does not have capability negotiation feature, remote peer will not send any capabilities at all. In that case, bgp configures the peer with configured capabilities.

You may prefer locally configured capabilities more than the negotiated capabilities even though remote peer sends capabilities. If the peer is configured by *override-capability*, *bgpd* ignores received capabilities then override negotiated capabilities with configured values.

Additionally the operator should be reminded that this feature fundamentally disables the ability to use widely deployed BGP features. BGP unnumbered, hostname support, AS4, Addpath, Route Refresh, ORF, Dynamic Capabilities, and graceful restart.

neighbor PEER override-capability

Override the result of Capability Negotiation with local configuration. Ignore remote peer's capability value.

AS Path Access Lists

AS path access list is user defined AS path.

bgp as-path access-list WORD [seq (0-4294967295)] permit|deny LINE

This command defines a new AS path access list.

show bgp as-path-access-list [json]

Display all BGP AS Path access lists.

If the json option is specified, output is displayed in JSON format.

show bgp as-path-access-list WORD [json]

Display the specified BGP AS Path access list.

If the json option is specified, output is displayed in JSON format.

Bogon ASN filter policy configuration example

```
bgp as-path access-list 99 permit _0_  
bgp as-path access-list 99 permit _23456_  
bgp as-path access-list 99 permit _1310[0-6][0-9]_|_13107[0-1]_  
bgp as-path access-list 99 seq 20 permit ^65
```

Using AS Path in Route Map

match as-path WORD

For a given as-path, WORD, match it on the BGP as-path given for the prefix and if it matches do normal route-map actions. The no form of the command removes this match from the route-map.

set as-path prepend AS-PATH

Prepend the given string of AS numbers to the AS_PATH of the BGP path's NLRI. The no form of this command removes this set operation from the route-map.

set as-path prepend last-as NUM

Prepend the existing last AS number (the leftmost ASN) to the AS_PATH. The no form of this command removes this set operation from the route-map.

Communities Attribute

The BGP communities attribute is widely used for implementing policy routing. Network operators can manipulate BGP communities attribute based on their network policy. BGP communities attribute is defined in [RFC 1997](#) and [RFC 1998](#). It is an optional transitive attribute, therefore local policy can travel through different autonomous system.

The communities attribute is a set of communities values. Each community value is 4 octet long. The following format is used to define the community value.

AS:VAL

This format represents 4 octet communities value. AS is high order 2 octet in digit format. VAL is low order 2 octet in digit format. This format is useful to define AS oriented policy value. For example, 7675:80 can be used when AS 7675 wants to pass local policy value 80 to neighboring peer.

internet

internet represents well-known communities value 0.

graceful-shutdown

graceful-shutdown represents well-known communities value GRACEFUL_SHUTDOWN 0xFFFF0000 65535:0. [RFC 8326](#) implements the purpose Graceful BGP Session Shutdown to reduce the amount of lost traffic when taking BGP sessions down for maintenance. The use of the community needs to be supported from your peers side to actually have any effect.

accept-own

accept-own represents well-known communities value ACCEPT_OWN 0xFFFF0001 65535:1. [RFC 7611](#) implements a way to signal to a router to accept routes with a local nexthop address. This can be the case when doing policing and having traffic having a nexthop located in another VRF but still local interface to the router. It is recommended to read the RFC for full details.

route-filter-translated-v4

`route-filter-translated-v4` represents well-known communities value `ROUTE_FILTER_TRANSLATED_v4 0xFFFF0002 65535:2`.

route-filter-v4

`route-filter-v4` represents well-known communities value `ROUTE_FILTER_v4 0xFFFF0003 65535:3`.

route-filter-translated-v6

`route-filter-translated-v6` represents well-known communities value `ROUTE_FILTER_TRANSLATED_v6 0xFFFF0004 65535:4`.

route-filter-v6

`route-filter-v6` represents well-known communities value `ROUTE_FILTER_v6 0xFFFF0005 65535:5`.

llgr-stale

`llgr-stale` represents well-known communities value `LLGR_STALE 0xFFFF0006 65535:6`. Assigned and intended only for use with routers supporting the Long-lived Graceful Restart Capability as described in [Draft-IETF-uttaro-idr-bgp-persistence]. Routers receiving routes with this community may (depending on implementation) choose allow to reject or modify routes on the presence or absence of this community.

no-llgr

`no-llgr` represents well-known communities value `NO_LLGR 0xFFFF0007 65535:7`. Assigned and intended only for use with routers supporting the Long-lived Graceful Restart Capability as described in [Draft-IETF-uttaro-idr-bgp-persistence]. Routers receiving routes with this community may (depending on implementation) choose allow to reject or modify routes on the presence or absence of this community.

accept-own-nexthop

`accept-own-nexthop` represents well-known communities value `accept-own-nexthop 0xFFFF0008 65535:8`. [Draft-IETF-agrewal-idr-accept-own-nexthop] describes how to tag and label VPN routes to be able to send traffic between VRFs via an internal layer 2 domain on the same PE device. Refer to [Draft-IETF-agrewal-idr-accept-own-nexthop] for full details.

blackhole

`blackhole` represents well-known communities value `BLACKHOLE 0xFFFF029A 65535:666`. [RFC 7999](#) documents sending prefixes to EBGp peers and upstream for the purpose of blackholing traffic. Prefixes tagged with the this community should normally not be re-advertised from neighbors of the originating network. Upon receiving `BLACKHOLE` community from a BGP speaker, `NO_ADVERTISE` community is added automatically.

no-export

`no-export` represents well-known communities value `NO_EXPORT 0xFFFFFFFF01`. All routes carry this value must not be advertised to outside a BGP confederation boundary. If neighboring BGP peer is part of BGP confederation, the peer is considered as inside a BGP confederation boundary, so the route will be announced to the peer.

no-advertise

`no-advertise` represents well-known communities value `NO_ADVERTISE 0xFFFFFFFF02`. All routes carry this value must not be advertise to other BGP peers.

local-AS

`local-AS` represents well-known communities value `NO_EXPORT_SUBCONFED 0xFFFFFFFF03`. All routes carry this value must not be advertised to external BGP peers. Even if the neighboring router is part of confederation, it is considered as external BGP peer, so the route will not be announced to the peer.

no-peer

`no-peer` represents well-known communities value `NOPEER 0xFFFFFFFF04 65535:65284`. [RFC 3765](#) is used to communicate to another network how the originating network want the prefix propagated.

When the communities attribute is received duplicate community values in the attribute are ignored and value is sorted in numerical order.

Community Lists

Community lists are user defined lists of community attribute values. These lists can be used for matching or manipulating the communities attribute in UPDATE messages.

There are two types of community list:

standard

This type accepts an explicit value for the attribute.

expanded

This type accepts a regular expression. Because the regex must be interpreted on each use expanded community lists are slower than standard lists.

bgp community-list standard NAME permit|deny COMMUNITY

This command defines a new standard community list. **COMMUNITY** is communities value. The **COMMUNITY** is compiled into community structure. We can define multiple community list under same name. In that case match will happen user defined order. Once the community list matches to communities attribute in BGP updates it return permit or deny by the community list definition. When there is no matched entry, deny will be returned. When **COMMUNITY** is empty it matches to any routes.

bgp community-list expanded NAME permit|deny COMMUNITY

This command defines a new expanded community list. **COMMUNITY** is a string expression of communities attribute. **COMMUNITY** can be a regular expression (*BGP Regular Expressions*) to match the communities attribute in BGP updates. The expanded community is only used to filter, not *set* actions.

Deprecated since version 5.0: It is recommended to use the more explicit versions of this command.

bgp community-list NAME permit|deny COMMUNITY

When the community list type is not specified, the community list type is automatically detected. If **COMMUNITY** can be compiled into communities attribute, the community list is defined as a standard community list. Otherwise it is defined as an expanded community list. This feature is left for backward compatibility. Use of this feature is not recommended.

Note that all community lists share the same namespace, so it's not necessary to specify **standard** or **expanded**; these modifiers are purely aesthetic.

show bgp community-list [NAME detail]

Displays community list information. When **NAME** is specified the specified community list's information is shown.

```
# show bgp community-list
Named Community standard list CLIST
permit 7675:80 7675:100 no-export
deny internet
  Named Community expanded list EXPAND
permit :

# show bgp community-list CLIST detail
Named Community standard list CLIST
permit 7675:80 7675:100 no-export
deny internet
```

Numbered Community Lists

When number is used for BGP community list name, the number has special meanings. Community list number in the range from 1 and 99 is standard community list. Community list number in the range from 100 to 500 is expanded community list. These community lists are called as numbered community lists. On the other hand normal community lists is called as named community lists.

bgp community-list (1-99) permit|deny COMMUNITY

This command defines a new community list. The argument to (1-99) defines the list identifier.

bgp community-list (100-500) permit|deny COMMUNITY

This command defines a new expanded community list. The argument to (100-500) defines the list identifier.

Community alias

BGP community aliases are useful to quickly identify what communities are set for a specific prefix in a human-readable format. Especially handy for a huge amount of communities. Accurately defined aliases can help you faster spot things on the wire.

bgp community alias NAME ALIAS

This command creates an alias name for a community that will be used later in various CLI outputs in a human-readable format.

```
soodar# show run | include bgp community alias
bgp community alias 65001:14 community-1
bgp community alias 65001:123:1 lcommunity-1

soodar# show ip bgp 172.16.16.1/32
BGP routing table entry for 172.16.16.1/32, version 21
Paths: (2 available, best #2, table default)
  Advertised to non peer-group peers:
  65030
    192.168.0.2 from 192.168.0.2 (172.16.16.1)
      Origin incomplete, metric 0, valid, external, best (Neighbor IP)
      Community: 65001:12 65001:13 community-1 65001:65534
      Large Community: lcommunity-1 65001:123:2
      Last update: Fri Apr 16 12:51:27 2021
```

show bgp [afi] [safi] [all] alias WORD [wide|json]

Display prefixes with matching BGP community alias.

Using Communities in Route Maps

In *Route Maps* we can match on or set the BGP communities attribute. Using this feature network operator can implement their network policy based on BGP communities attribute.

The following commands can be used in route maps:

match alias WORD

This command performs match to BGP updates using community alias WORD. When the one of BGP communities value match to the one of community alias value in community alias, it is match.

match community WORD exact-match [exact-match]

This command perform match to BGP updates using community list WORD. When the one of BGP communities value match to the one of communities value in community list, it is match. When *exact-match* keyword is specified, match happen only when BGP updates have completely same communities value specified in the community list.

set community <none|COMMUNITY> additive

This command sets the community value in BGP updates. If the attribute is already configured, the newly provided value replaces the old one unless the *additive* keyword is specified, in which case the new value is appended to the existing value.

If *none* is specified as the community value, the communities attribute is not sent.

It is not possible to set an expanded community list.

set comm-list WORD delete

This command remove communities value from BGP communities attribute. The word is community list name. When BGP route's communities value matches to the community list word, the communities value is removed. When all of communities value is removed eventually, the BGP update's communities attribute is completely removed.

Example Configuration

The following configuration is exemplary of the most typical usage of BGP communities attribute. In the example, AS 7675 provides an upstream Internet connection to AS 100. When the following configuration exists in AS 7675, the network operator of AS 100 can set local preference in AS 7675 network by setting BGP communities attribute to the updates.

```
router bgp 7675
 neighbor 192.168.0.1 remote-as 100
 address-family ipv4 unicast
  neighbor 192.168.0.1 route-map RMAP in
 exit-address-family
!
bgp community-list 70 permit 7675:70
bgp community-list 70 deny
bgp community-list 80 permit 7675:80
bgp community-list 80 deny
bgp community-list 90 permit 7675:90
bgp community-list 90 deny
!
route-map RMAP permit 10
 match community 70
 set local-preference 70
!
route-map RMAP permit 20
 match community 80
 set local-preference 80
!
route-map RMAP permit 30
 match community 90
 set local-preference 90
```

The following configuration announces 10.0.0.0/8 from AS 100 to AS 7675. The route has communities value

7675:80 so when above configuration exists in AS 7675, the announced routes' local preference value will be set to 80.

```
router bgp 100
 network 10.0.0.0/8
 neighbor 192.168.0.2 remote-as 7675
 address-family ipv4 unicast
   neighbor 192.168.0.2 route-map RMAP out
 exit-address-family
!
ip prefix-list PLIST permit 10.0.0.0/8
!
route-map RMAP permit 10
 match ip address prefix-list PLIST
 set community 7675:80
```

The following configuration is an example of BGP route filtering using communities attribute. This configuration only permit BGP routes which has BGP communities value 0:80 or 0:90. The network operator can set special internal communities value at BGP border router, then limit the BGP route announcements into the internal network.

```
router bgp 7675
 neighbor 192.168.0.1 remote-as 100
 address-family ipv4 unicast
   neighbor 192.168.0.1 route-map RMAP in
 exit-address-family
!
bgp community-list 1 permit 0:80 0:90
!
route-map RMAP permit in
 match community 1
```

The following example filters BGP routes which have a community value of 1:1. When there is no match community-list returns deny. To avoid filtering all routes, a permit line is set at the end of the community-list.

```
router bgp 7675
 neighbor 192.168.0.1 remote-as 100
 address-family ipv4 unicast
   neighbor 192.168.0.1 route-map RMAP in
 exit-address-family
!
bgp community-list standard FILTER deny 1:1
bgp community-list standard FILTER permit
!
route-map RMAP permit 10
 match community FILTER
```

The communities value keyword internet has special meanings in standard community lists. In the below example internet matches all BGP routes even if the route does not have communities attribute at all. So community list INTERNET is the same as FILTER in the previous example.

```
bgp community-list standard INTERNET deny 1:1
bgp community-list standard INTERNET permit internet
```

The following configuration is an example of communities value deletion. With this configuration the community values 100:1 and 100:2 are removed from BGP updates. For communities value deletion, only permit community-

list is used. deny community-list is ignored.

```
router bgp 7675
 neighbor 192.168.0.1 remote-as 100
 address-family ipv4 unicast
   neighbor 192.168.0.1 route-map RMAP in
 exit-address-family
!
bgp community-list standard DEL permit 100:1 100:2
!
route-map RMAP permit 10
 set comm-list DEL delete
```

Extended Communities Attribute

BGP extended communities attribute is introduced with MPLS VPN/BGP technology. MPLS VPN/BGP expands capability of network infrastructure to provide VPN functionality. At the same time it requires a new framework for policy routing. With BGP Extended Communities Attribute we can use Route Target or Site of Origin for implementing network policy for MPLS VPN/BGP.

BGP Extended Communities Attribute is similar to BGP Communities Attribute. It is an optional transitive attribute. BGP Extended Communities Attribute can carry multiple Extended Community value. Each Extended Community value is eight octet length.

BGP Extended Communities Attribute provides an extended range compared with BGP Communities Attribute. Adding to that there is a type field in each value to provides community space structure.

There are two format to define Extended Community value. One is AS based format the other is IP address based format.

AS:VAL

This is a format to define AS based Extended Community value. AS part is 2 octets Global Administrator subfield in Extended Community value. VAL part is 4 octets Local Administrator subfield. 7675:100 represents AS 7675 policy value 100.

IP-Address:VAL

This is a format to define IP address based Extended Community value. IP-Address part is 4 octets Global Administrator subfield. VAL part is 2 octets Local Administrator subfield.

Extended Community Lists

bgp extcommunity-list standard NAME permit|deny EXTCOMMUNITY

This command defines a new standard extcommunity-list. *extcommunity* is extended communities value. The *extcommunity* is compiled into extended community structure. We can define multiple extcommunity-list under same name. In that case match will happen user defined order. Once the extcommunity-list matches to extended communities attribute in BGP updates it return permit or deny based upon the extcommunity-list definition. When there is no matched entry, deny will be returned. When *extcommunity* is empty it matches to any routes.

bgp extcommunity-list expanded NAME permit|deny LINE

This command defines a new expanded extcommunity-list. *line* is a string expression of extended communities attribute. *line* can be a regular expression (*BGP Regular Expressions*) to match an extended communities attribute in BGP updates.

Note that all extended community lists shares a single name space, so it's not necessary to specify their type when creating or destroying them.

show bgp extcommunity-list [NAME detail]

This command displays current extcommunity-list information. When *name* is specified the community list's information is shown.

BGP Extended Communities in Route Map**match extcommunity WORD****set extcommunity none**

This command resets the extended community value in BGP updates. If the attribute is already configured or received from the peer, the attribute is discarded and set to none. This is useful if you need to strip incoming extended communities.

set extcommunity rt EXTCOMMUNITY

This command set Route Target value.

set extcommunity soo EXTCOMMUNITY

This command set Site of Origin value.

set extcommunity bandwidth <(1-25600) | cumulative | num-multipaths> [non-transitive]

This command sets the BGP link-bandwidth extended community for the prefix (best path) for which it is applied. The link-bandwidth can be specified as an **explicit** value (specified in Mbps), or the router can be told to use the **cumulative** bandwidth of all multipaths for the prefix or to compute it based on the **number of multipaths**. The link bandwidth extended community is encoded as **transitive** unless the set command explicitly configures it as **non-transitive**.

See also:

wecmp_linkbw

Note that the extended expanded community is only used for *match* rule, not for *set* actions.

Large Communities Attribute

The BGP Large Communities attribute was introduced in Feb 2017 with [RFC 8092](#).

The BGP Large Communities Attribute is similar to the BGP Communities Attribute except that it has 3 components instead of two and each of which are 4 octets in length. Large Communities bring additional functionality and convenience over traditional communities, specifically the fact that the GLOBAL part below is now 4 octets wide allowing seamless use in networks using 4-byte ASNs.

GLOBAL:LOCAL1:LOCAL2

This is the format to define Large Community values. Referencing [RFC 8195](#) the values are commonly referred to as follows:

- The GLOBAL part is a 4 octet Global Administrator field, commonly used as the operators AS number.
- The LOCAL1 part is a 4 octet Local Data Part 1 subfield referred to as a function.
- The LOCAL2 part is a 4 octet Local Data Part 2 field and referred to as the parameter subfield.

As an example, 65551:1:10 represents AS 65551 function 1 and parameter 10. The referenced RFC above gives some guidelines on recommended usage.

Large Community Lists

Two types of large community lists are supported, namely *standard* and *expanded*.

bgp large-community-list standard NAME permit|deny LARGE-COMMUNITY

This command defines a new standard large-community-list. *large-community* is the Large Community value. We can add multiple large communities under same name. In that case the match will happen in the user defined order. Once the large-community-list matches the Large Communities attribute in BGP updates it will return permit or deny based upon the large-community-list definition. When there is no matched entry, a deny will be returned. When *large-community* is empty it matches any routes.

bgp large-community-list expanded NAME permit|deny LINE

This command defines a new expanded large-community-list. Where *line* is a string matching expression, it will be compared to the entire Large Communities attribute as a string, with each large-community in order from lowest to highest. *line* can also be a regular expression which matches this Large Community attribute.

Note that all community lists share the same namespace, so it's not necessary to specify *standard* or *expanded*; these modifiers are purely aesthetic.

show bgp large-community-list

show bgp large-community-list NAME detail

This command display current large-community-list information. When *name* is specified the community list information is shown.

show ip bgp large-community-info

This command displays the current large communities in use.

Large Communities in Route Map

match large-community LINE [exact-match]

Where *line* can be a simple string to match, or a regular expression. It is very important to note that this match occurs on the entire large-community string as a whole, where each large-community is ordered from lowest to highest. When *exact-match* keyword is specified, match happen only when BGP updates have completely same large communities value specified in the large community list.

set large-community LARGE-COMMUNITY

set large-community LARGE-COMMUNITY LARGE-COMMUNITY

set large-community LARGE-COMMUNITY additive

These commands are used for setting large-community values. The first command will overwrite any large-communities currently present. The second specifies two large-communities, which overwrites the current large-community list. The third will add a large-community value without overwriting other values. Multiple large-community values can be specified.

Note that the large expanded community is only used for *match* rule, not for *set* actions.

L3VPN VRFs

bgpd supports L3VPN (Layer 3 Virtual Private Networks) VRFs (Virtual Routing and Forwarding) for IPv4 [RFC 4364](#) and IPv6 [RFC 4659](#). L3VPN routes, and their associated VRF MPLS labels, can be distributed to VPN SAFI neighbors in the *default*, i.e., non VRF, BGP instance. VRF MPLS labels are reached using *core* MPLS labels which are distributed using LDP or BGP labeled unicast. *bgpd* also supports inter-VRF route leaking.

VRF Route Leaking

BGP routes may be leaked (i.e. copied) between a unicast VRF RIB and the VPN SAFI RIB of the default VRF for use in MPLS-based L3VPNs. Unicast routes may also be leaked between any VRFs (including the unicast RIB of the default BGP instanced). A shortcut syntax is also available for specifying leaking from one VRF to another VRF using the default instance's VPN RIB as the intermediary. A common application of the VRF-VRF feature is to connect a customer's private routing domain to a provider's VPN service. Leaking is configured from the point of view of an individual VRF: *import* refers to routes leaked from VPN to a unicast VRF, whereas *export* refers to routes leaked from a unicast VRF to VPN.

Required parameters

Routes exported from a unicast VRF to the VPN RIB must be augmented by two parameters:

- an RD (Route Distinguisher)
- an RTLIST (Route-target List)

Configuration for these exported routes must, at a minimum, specify these two parameters.

Routes imported from the VPN RIB to a unicast VRF are selected according to their RTLISTs. Routes whose RTLIST contains at least one route-target in common with the configured import RTLIST are leaked. Configuration for these imported routes must specify an RTLIST to be matched.

The RD, which carries no semantic value, is intended to make the route unique in the VPN RIB among all routes of its prefix that originate from all the customers and sites that are attached to the provider's VPN service. Accordingly, each site of each customer is typically assigned an RD that is unique across the entire provider network.

The RTLIST is a set of route-target extended community values whose purpose is to specify route-leaking policy. Typically, a customer is assigned a single route-target value for import and export to be used at all customer sites. This configuration specifies a simple topology wherein a customer has a single routing domain which is shared across all its sites. More complex routing topologies are possible through use of additional route-targets to augment the leaking of sets of routes in various ways.

When using the shortcut syntax for vrf-to-vrf leaking, the RD and RT are auto-derived.

General configuration

Configuration of route leaking between a unicast VRF RIB and the VPN SAFI RIB of the default VRF is accomplished via commands in the context of a VRF address-family:

rd vpn export AS:NN|IP:nn

Specifies the route distinguisher to be added to a route exported from the current unicast VRF to VPN.

rt vpn import|export|both RTLIST...

Specifies the route-target list to be attached to a route (export) or the route-target list to match against (import) when exporting/importing between the current unicast VRF and VPN.

The RTLIST is a space-separated list of route-targets, which are BGP extended community values as described in *Extended Communities Attribute*.

label vpn export (0..1048575)|auto

Enables an MPLS label to be attached to a route exported from the current unicast VRF to VPN. If the value specified is auto, the label value is automatically assigned from a pool maintained by the Zebra daemon. If Zebra is not running, or if this command is not configured, automatic label assignment will not complete, which will block corresponding route export.

nexthop vpn export A.B.C.D|X:X::X:X

Specifies an optional nexthop value to be assigned to a route exported from the current unicast VRF to VPN. If left unspecified, the nexthop will be set to 0.0.0.0 or 0:0::0:0 (self).

route-map vpn import|export MAP

Specifies an optional route-map to be applied to routes imported or exported between the current unicast VRF and VPN.

import|export vpn

Enables import or export of routes between the current unicast VRF and VPN.

import vrf VRFNAME

Shortcut syntax for specifying automatic leaking from vrf VRFNAME to the current VRF using the VPN RIB as intermediary. The RD and RT are auto derived and should not be specified explicitly for either the source or destination VRF's.

This shortcut syntax mode is not compatible with the explicit *import vpn* and *export vpn* statements for the two VRF's involved. The CLI will disallow attempts to configure incompatible leaking modes.

Debugging

show debug

Show all enabled debugs.

show bgp listeners

Display Listen sockets and the vrf that created them. Useful for debugging of when listen is not working and this is considered a developer debug statement.

debug bgp bfd

Enable or disable debugging for BFD events. This will show BFD integration library messages and BGP BFD integration messages that are mostly state transitions and validation problems.

debug bgp neighbor-events

Enable or disable debugging for neighbor events. This provides general information on BGP events such as peer connection / disconnection, session establishment / teardown, and capability negotiation.

debug bgp updates

Enable or disable debugging for BGP updates. This provides information on BGP UPDATE messages transmitted and received between local and remote instances.

debug bgp keepalives

Enable or disable debugging for BGP keepalives. This provides information on BGP KEEPALIVE messages transmitted and received between local and remote instances.

debug bgp bestpath <A.B.C.D/M|X:X::X:X/M>

Enable or disable debugging for bestpath selection on the specified prefix.

debug bgp nht

Enable or disable debugging of BGP nexthop tracking.

debug bgp update-groups

Enable or disable debugging of dynamic update groups. This provides general information on group creation, deletion, join and prune events.

debug bgp zebra

Enable or disable debugging of communications between *bgpd* and *zebra*.

Dumping Messages and Routing Tables**dump bgp all PATH [INTERVAL]****dump bgp all-et PATH [INTERVAL]**

Dump all BGP packet and events to *path* file. If *interval* is set, a new file will be created for echo *interval* of seconds. The path *path* can be set with date and time formatting (strftime). The type 'all-et' enables support for Extended Timestamp Header (packet-binary-dump-format).

dump bgp updates PATH [INTERVAL]**dump bgp updates-et PATH [INTERVAL]**

Dump only BGP updates messages to *path* file. If *interval* is set, a new file will be created for echo *interval* of seconds. The path *path* can be set with date and time formatting (strftime). The type 'updates-et' enables support for Extended Timestamp Header (packet-binary-dump-format).

dump bgp routes-mrt PATH**dump bgp routes-mrt PATH INTERVAL**

Dump whole BGP routing table to *path*. This is heavy process. The path *path* can be set with date and time formatting (strftime). If *interval* is set, a new file will be created for echo *interval* of seconds.

Note: the interval variable can also be set using hours and minutes: 04h20m00.

Other BGP Commands

The following are available in the top level *enable* mode:

clear bgp *

Clear all peers.

clear bgp ipv4|ipv6 *

Clear all peers with this address-family activated.

clear bgp ipv4|ipv6 unicast *

Clear all peers with this address-family and sub-address-family activated.

clear bgp ipv4|ipv6 PEER

Clear peers with address of X.X.X.X and this address-family activated.

clear bgp ipv4|ipv6 unicast PEER

Clear peer with address of X.X.X.X and this address-family and sub-address-family activated.

clear bgp ipv4|ipv6 PEER soft|in|out

Clear peer using soft reconfiguration in this address-family.

clear bgp ipv4|ipv6 unicast PEER soft|in|out

Clear peer using soft reconfiguration in this address-family and sub-address-family.

The following are available in the router `bgp` mode:

write-quanta (1-64)

BGP message Tx I/O is vectored. This means that multiple packets are written to the peer socket at the same time each I/O cycle, in order to minimize system call overhead. This value controls how many are written at a time. Under certain load conditions, reducing this value could make peer traffic less ‘bursty’. In practice, leave this settings on the default (64) unless you truly know what you are doing.

read-quanta (1-10)

Unlike Tx, BGP Rx traffic is not vectored. Packets are read off the wire one at a time in a loop. This setting controls how many iterations the loop runs for. As with write-quanta, it is best to leave this setting on the default.

The following command is available in `config` mode as well as in the router `bgp` mode:

bgp graceful-shutdown

The purpose of this command is to initiate BGP Graceful Shutdown which is described in [RFC 8326](#). The use case for this is to minimize or eliminate the amount of traffic loss in a network when a planned maintenance activity such as software upgrade or hardware replacement is to be performed on a router. The feature works by re-announcing routes to eBGP peers with the GRACEFUL_SHUTDOWN community included. Peers are then expected to treat such paths with the lowest preference. This happens automatically on a receiver running FRR; with other routing protocol stacks, an inbound policy may have to be configured. In FRR, triggering graceful shutdown also results in announcing a LOCAL_PREF of 0 to iBGP peers.

Graceful shutdown can be configured per BGP instance or globally for all of BGP. These two options are mutually exclusive. The no form of the command causes graceful shutdown to be stopped, and routes will be re-announced without the GRACEFUL_SHUTDOWN community and/or with the usual LOCAL_PREF value. Note that if this option is saved to the startup configuration, graceful shutdown will remain in effect across restarts of *bgpd* and will need to be explicitly disabled.

Displaying BGP Information

The following four commands display the IPv6 and IPv4 routing tables, depending on whether or not the `ip` keyword is used. Actually, `show ip bgp` command was used on older *Quagga* routing daemon project, while `show bgp` command is the new format. The choice has been done to keep old format with IPv4 routing table, while new format displays IPv6 routing table.

```
show ip bgp [all] [wide|json [detail]]
```

```
show ip bgp A.B.C.D [json]
```

```
show bgp [all] [wide|json [detail]]
```

```
show bgp X:X::X:X [json]
```

These commands display BGP routes. When no route is specified, the default is to display all BGP routes.

```
BGP table version is 0, local router ID is 10.1.1.1
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

Network      Next Hop      Metric LocPrf Weight Path
\*> 1.1.1.1/32    0.0.0.0        0   32768 i

Total number of prefixes 1
```


If `wide` option is specified, then the prefix table's width is increased to fully display the prefix and the nexthop.

This is especially handy dealing with IPv6 prefixes and if `[no] bgp default show-nexthop-hostname` is enabled.

If `all` option is specified, `ip` keyword is ignored, `show bgp all` and `show ip bgp all` commands display routes for all AFIs and SAFIs.

If `json` option is specified, output is displayed in JSON format.

If `detail` option is specified after `json`, more verbose JSON output will be displayed.

Some other commands provide additional options for filtering the output.

show [ip] bgp regexp LINE

This command displays BGP routes using AS path regular expression (*BGP Regular Expressions*).

show [ip] bgp [all] summary [wide] [json]

Show a bgp peer summary for the specified address family.

The old command structure `show ip bgp` may be removed in the future and should no longer be used. In order to reach the other BGP routing tables other than the IPv6 routing table given by `show bgp`, the new command structure is extended with `show bgp [afi] [safi]`.

`wide` option gives more output like LocalAS and extended Desc to 64 characters.

```
soodar# show ip bgp summary wide
IPv4 Unicast Summary (VRF default):
BGP router identifier 192.168.100.1, local AS number 65534 vrf-id 0
BGP table version 3
RIB entries 5, using 920 bytes of memory
Peers 1, using 27 KiB of memory

Neighbor      V      AS   LocalAS   MsgRcvd   MsgSent   TblVer  InQ  OutQ
→ Up/Down State/PfxRcd  PfxSnt Desc
192.168.0.2   4      65030     123      15        22       0    0    0
→00:07:00           0         1 us-east1-rs1.frrouting.org

Total number of neighbors 1
soodar#
```

show bgp [afi] [safi] [all] [wide|json]

show bgp [<ipv4|ipv6> <unicast|vpn|labeled-unicast>]

These commands display BGP routes for the specific routing table indicated by the selected `afi` and the selected `safi`. If no `afi` and no `safi` value is given, the command falls back to the default IPv6 routing table

show bgp [afi] [safi] [all] summary [json]

Show a bgp peer summary for the specified address family, and subsequent address-family.

show bgp [afi] [safi] [all] summary failed [json]

Show a bgp peer summary for peers that are not successfully exchanging routes for the specified address family, and subsequent address-family.

show bgp [afi] [safi] [all] summary established [json]

Show a bgp peer summary for peers that are successfully exchanging routes for the specified address family, and subsequent address-family.

show bgp [afi] [safi] [all] summary neighbor [PEER] [json]

Show a bgp summary for the specified peer, address family, and subsequent address-family. The neighbor filter can be used in combination with the failed, established filters.

show bgp [afi] [safi] [all] summary remote-as <internal|external|ASN> [json]

Show a bgp peer summary for the specified remote-as ASN or type (**internal** for iBGP and **external** for eBGP sessions), address family, and subsequent address-family. The remote-as filter can be used in combination with the failed, established filters.

show bgp [afi] [safi] [all] summary terse [json]

Shorten the output. Do not show the following information about the BGP instances: the number of RIB entries, the table version and the used memory. The **terse** option can be used in combination with the remote-as, neighbor, failed and established filters, and with the **wide** option as well.

show bgp [afi] [safi] [neighbor [PEER] [routes|advertised-routes|received-routes] [json]

This command shows information on a specific BGP peer of the relevant afi and safi selected.

The **routes** keyword displays only routes in this address-family's BGP table that were received by this peer and accepted by inbound policy.

The **advertised-routes** keyword displays only the routes in this address-family's BGP table that were permitted by outbound policy and advertised to this peer.

The **received-routes** keyword displays all routes belonging to this address-family (prior to inbound policy) that were received by this peer.

show bgp [afi] [safi] [all] dampening dampened-paths [wide|json]

Display paths suppressed due to dampening of the selected afi and safi selected.

show bgp [afi] [safi] [all] dampening flap-statistics [wide|json]

Display flap statistics of routes of the selected afi and safi selected.

show bgp [afi] [safi] [all] version (1-4294967295) [wide|json]

Display prefixes with matching version numbers. The version number and above having prefixes will be listed here.

It helps to identify which prefixes were installed at some point.

show bgp [afi] [safi] statistics

Display statistics of routes of the selected afi and safi.

show bgp statistics-all

Display statistics of routes of all the afi and safi.

show [ip] bgp [afi] [safi] [all] cidr-only [wide|json]

Display routes with non-natural netmasks.

show [ip] bgp [afi] [safi] [all] neighbors A.B.C.

D [advertised-routes|received-routes|filtered-routes] [json|wide]

Display the routes advertised to a BGP neighbor or received routes from neighbor or filtered routes received from neighbor based on the option specified.

If **wide** option is specified, then the prefix table's width is increased to fully display the prefix and the nexthop.

This is especially handy dealing with IPv6 prefixes and if **[no] bgp default show-nexthop-hostname** is enabled.

If **all** option is specified, **ip** keyword is ignored and, routes displayed for all AFIs and SAFIs. if **afi** is specified, with **all** option, routes will be displayed for each SAFI in the selected AFI

If **json** option is specified, output is displayed in JSON format.

Displaying Routes by Community Attribute

The following commands allow displaying routes based on their community attribute.

```
show [ip] bgp <ipv4|ipv6> [all] community [wide|json]
```

```
show [ip] bgp <ipv4|ipv6> [all] community COMMUNITY [wide|json]
```

```
show [ip] bgp <ipv4|ipv6> [all] community COMMUNITY exact-match [wide|json]
```

These commands display BGP routes which have the community attribute. When COMMUNITY is specified, BGP routes that match that community are displayed. When *exact-match* is specified, it display only routes that have an exact match.

```
show [ip] bgp <ipv4|ipv6> community-list WORD
```

```
show [ip] bgp <ipv4|ipv6> community-list WORD exact-match
```

These commands display BGP routes for the address family specified that match the specified community list. When *exact-match* is specified, it displays only routes that have an exact match.

If *wide* option is specified, then the prefix table's width is increased to fully display the prefix and the nexthop.

This is especially handy dealing with IPv6 prefixes and if `[no] bgp default show-nexthop-hostname` is enabled.

If *all* option is specified, *ip* keyword is ignored and, routes displayed for all AFIs and SAFIs. if *afi* is specified, with *all* option, routes will be displayed for each SAFI in the selcted AFI

If *json* option is specified, output is displayed in JSON format.

```
show bgp labelpool <chunks|inuse|ledger|requests|summary> [json]
```

These commands display information about the BGP labelpool used for the association of MPLS labels with routes for L3VPN and Labeled Unicast

If *chunks* option is specified, output shows the current list of label chunks granted to BGP by Zebra, indicating the start and end label in each chunk

If *inuse* option is specified, output shows the current inuse list of label to prefix mappings

If *ledger* option is specified, output shows ledger list of all label requests made per prefix

If *requests* option is specified, output shows current list of label requests which have not yet been fulfilled by the labelpool

If *summary* option is specified, output is a summary of the counts for the chunks, inuse, ledger and requests list along with the count of outstanding chunk requests to Zebra and the number of zebra reconnects that have happened

If *json* option is specified, output is displayed in JSON format.

Displaying Routes by Large Community Attribute

The following commands allow displaying routes based on their large community attribute.

```
show [ip] bgp <ipv4|ipv6> large-community
```

```
show [ip] bgp <ipv4|ipv6> large-community LARGE-COMMUNITY
```

```
show [ip] bgp <ipv4|ipv6> large-community LARGE-COMMUNITY exact-match
```

show [ip] bgp <ipv4|ipv6> large-community LARGE-COMMUNITY json

These commands display BGP routes which have the large community attribute. When LARGE-COMMUNITY is specified, BGP routes that match that large community are displayed. When *exact-match* is specified, it display only routes that have an exact match. When *json* is specified, it display routes in json format.

show [ip] bgp <ipv4|ipv6> large-community-list WORD

show [ip] bgp <ipv4|ipv6> large-community-list WORD exact-match

show [ip] bgp <ipv4|ipv6> large-community-list WORD json

These commands display BGP routes for the address family specified that match the specified large community list. When *exact-match* is specified, it displays only routes that have an exact match. When *json* is specified, it display routes in json format.

Displaying Routes by AS Path

show bgp ipv4|ipv6 regexp LINE

This commands displays BGP routes that matches a regular expression *line* (*BGP Regular Expressions*).

show [ip] bgp ipv4 vpn

show [ip] bgp ipv6 vpn

Print active IPV4 or IPV6 routes advertised via the VPN SAFI.

show bgp ipv4 vpn summary

show bgp ipv6 vpn summary

Print a summary of neighbor connections for the specified AFI/SAFI combination.

Displaying Routes by Route Distinguisher

show bgp [<ipv4|ipv6> vpn [route]] rd <all|RD>

For L3VPN address-families, routes can be displayed on a per-RD (Route Distinguisher) basis or for all RD's.

Displaying Update Group Information

show bgp update-groups [advertise-queue|advertised-routes|packet-queue]

Display Information about each individual update-group being used. If SUBGROUP-ID is specified only display about that particular group. If *advertise-queue* is specified the list of routes that need to be sent to the peers in the update-group is displayed, *advertised-routes* means the list of routes we have sent to the peers in the update-group and *packet-queue* specifies the list of packets in the queue to be sent.

show bgp update-groups statistics

Display Information about update-group events in FRR.

Route Reflector

BGP routers connected inside the same AS through BGP belong to an internal BGP session, or IBGP. In order to prevent routing table loops, IBGP does not advertise IBGP-learned routes to other routers in the same session. As such, IBGP requires a full mesh of all peers. For large networks, this quickly becomes unscalable. Introducing route reflectors removes the need for the full-mesh.

When route reflectors are configured, these will reflect the routes announced by the peers configured as clients. A route reflector client is configured with:

```
neighbor PEER route-reflector-client
```

To avoid single points of failure, multiple route reflectors can be configured.

A cluster is a collection of route reflectors and their clients, and is used by route reflectors to avoid looping.

```
bgp cluster-id A.B.C.D
```

Routing Policy

You can set different routing policy for a peer. For example, you can set different filter for a peer.

```
!
router bgp 1 view 1
neighbor 10.0.0.1 remote-as 2
address-family ipv4 unicast
neighbor 10.0.0.1 distribute-list 1 in
exit-address-family
!
router bgp 1 view 2
neighbor 10.0.0.1 remote-as 2
address-family ipv4 unicast
neighbor 10.0.0.1 distribute-list 2 in
exit-address-family
```

This means BGP update from a peer 10.0.0.1 goes to both BGP view 1 and view 2. When the update is inserted into view 1, distribute-list 1 is applied. On the other hand, when the update is inserted into view 2, distribute-list 2 is applied.

BGP Regular Expressions

BGP regular expressions are based on *POSIX 1003.2* regular expressions. The following description is just a quick subset of the POSIX regular expressions.

- .*
Matches any single character.
- *
Matches 0 or more occurrences of pattern.
- +
Matches 1 or more occurrences of pattern.
- ?
Match 0 or 1 occurrences of pattern.
- ^
Matches the beginning of the line.

\$

Matches the end of the line.

_

The _ character has special meanings in BGP regular expressions. It matches to space and comma , and AS set delimiter { and } and AS confederation delimiter (and). And it also matches to the beginning of the line and the end of the line. So _ can be used for AS value boundaries match. This character technically evaluates to (^|[,{}()|\$).

Miscellaneous Configuration Examples

Example of a session to an upstream, advertising only one prefix to it.

```
router bgp 64512
  bgp router-id 10.236.87.1
  neighbor upstream peer-group
  neighbor upstream remote-as 64515
  neighbor upstream capability dynamic
  neighbor 10.1.1.1 peer-group upstream
  neighbor 10.1.1.1 description ACME ISP

  address-family ipv4 unicast
    network 10.236.87.0/24
    neighbor upstream prefix-list pl-allowed-adv out
  exit-address-family
!
ip prefix-list pl-allowed-adv seq 5 permit 82.195.133.0/25
ip prefix-list pl-allowed-adv seq 10 deny any
```

A more complex example including upstream, peer and customer sessions advertising global prefixes and NO_EXPORT prefixes and providing actions for customer routes based on community values. Extensive use is made of route-maps and the 'call' feature to support selective advertising of prefixes. This example is intended as guidance only, it has NOT been tested and almost certainly contains silly mistakes, if not serious flaws.

```
router bgp 64512
  bgp router-id 10.236.87.1
  neighbor upstream capability dynamic
  neighbor cust capability dynamic
  neighbor peer capability dynamic
  neighbor 10.1.1.1 remote-as 64515
  neighbor 10.1.1.1 peer-group upstream
  neighbor 10.2.1.1 remote-as 64516
  neighbor 10.2.1.1 peer-group upstream
  neighbor 10.3.1.1 remote-as 64517
  neighbor 10.3.1.1 peer-group cust-default
  neighbor 10.3.1.1 description customer1
  neighbor 10.4.1.1 remote-as 64518
  neighbor 10.4.1.1 peer-group cust
  neighbor 10.4.1.1 description customer2
  neighbor 10.5.1.1 remote-as 64519
  neighbor 10.5.1.1 peer-group peer
  neighbor 10.5.1.1 description peer AS 1
  neighbor 10.6.1.1 remote-as 64520
```

(continues on next page)

(continued from previous page)

```

neighbor 10.6.1.1 peer-group peer
neighbor 10.6.1.1 description peer AS 2

address-family ipv4 unicast
  network 10.123.456.0/24
  network 10.123.456.128/25 route-map rm-no-export
  neighbor upstream route-map rm-upstream-out out
  neighbor cust route-map rm-cust-in in
  neighbor cust route-map rm-cust-out out
  neighbor cust send-community both
  neighbor peer route-map rm-peer-in in
  neighbor peer route-map rm-peer-out out
  neighbor peer send-community both
  neighbor 10.3.1.1 prefix-list pl-cust1-network in
  neighbor 10.4.1.1 prefix-list pl-cust2-network in
  neighbor 10.5.1.1 prefix-list pl-peer1-network in
  neighbor 10.6.1.1 prefix-list pl-peer2-network in
exit-address-family
!
ip prefix-list pl-default permit 0.0.0.0/0
!
ip prefix-list pl-upstream-peers permit 10.1.1.1/32
ip prefix-list pl-upstream-peers permit 10.2.1.1/32
!
ip prefix-list pl-cust1-network permit 10.3.1.0/24
ip prefix-list pl-cust1-network permit 10.3.2.0/24
!
ip prefix-list pl-cust2-network permit 10.4.1.0/24
!
ip prefix-list pl-peer1-network permit 10.5.1.0/24
ip prefix-list pl-peer1-network permit 10.5.2.0/24
ip prefix-list pl-peer1-network permit 192.168.0.0/24
!
ip prefix-list pl-peer2-network permit 10.6.1.0/24
ip prefix-list pl-peer2-network permit 10.6.2.0/24
ip prefix-list pl-peer2-network permit 192.168.1.0/24
ip prefix-list pl-peer2-network permit 192.168.2.0/24
ip prefix-list pl-peer2-network permit 172.16.1/24
!
bgp as-path access-list seq 5 asp-own-as permit ^$
bgp as-path access-list seq 10 asp-own-as permit _64512_
!
! #####
! Match communities we provide actions for, on routes receives from
! customers. Communities values of <our-ASN>:X, with X, have actions:
!
! 100 - blackhole the prefix
! 200 - set no_export
! 300 - advertise only to other customers
! 400 - advertise only to upstreams
! 500 - set no_export when advertising to upstreams
! 2X00 - set local_preference to X00

```

(continues on next page)

(continued from previous page)

```

!
! blackhole the prefix of the route
bgp community-list standard cm-blackhole permit 64512:100
!
! set no-export community before advertising
bgp community-list standard cm-set-no-export permit 64512:200
!
! advertise only to other customers
bgp community-list standard cm-cust-only permit 64512:300
!
! advertise only to upstreams
bgp community-list standard cm-upstream-only permit 64512:400
!
! advertise to upstreams with no-export
bgp community-list standard cm-upstream-noexport permit 64512:500
!
! set local-pref to least significant 3 digits of the community
bgp community-list standard cm-prefmod-100 permit 64512:2100
bgp community-list standard cm-prefmod-200 permit 64512:2200
bgp community-list standard cm-prefmod-300 permit 64512:2300
bgp community-list standard cm-prefmod-400 permit 64512:2400
bgp community-list expanded cme-prefmod-range permit 64512:2...
!
! Informational communities
!
! 3000 - learned from upstream
! 3100 - learned from customer
! 3200 - learned from peer
!
bgp community-list standard cm-learnt-upstream permit 64512:3000
bgp community-list standard cm-learnt-cust permit 64512:3100
bgp community-list standard cm-learnt-peer permit 64512:3200
!
! #####
! Utility route-maps
!
! These utility route-maps generally should not used to permit/deny
! routes, i.e. they do not have meaning as filters, and hence probably
! should be used with 'on-match next'. These all finish with an empty
! permit entry so as not interfere with processing in the caller.
!
route-map rm-no-export permit 10
  set community additive no-export
route-map rm-no-export permit 20
!
route-map rm-blackhole permit 10
  description blackhole, up-pref and ensure it cannot escape this AS
  set ip next-hop 127.0.0.1
  set local-preference 10
  set community additive no-export
route-map rm-blackhole permit 20
!

```

(continues on next page)

(continued from previous page)

```

! Set local-pref as requested
route-map rm-prefmod permit 10
  match community cm-prefmod-100
  set local-preference 100
route-map rm-prefmod permit 20
  match community cm-prefmod-200
  set local-preference 200
route-map rm-prefmod permit 30
  match community cm-prefmod-300
  set local-preference 300
route-map rm-prefmod permit 40
  match community cm-prefmod-400
  set local-preference 400
route-map rm-prefmod permit 50
!
! Community actions to take on receipt of route.
route-map rm-community-in permit 10
  description check for blackholing, no point continuing if it matches.
  match community cm-blackhole
  call rm-blackhole
route-map rm-community-in permit 20
  match community cm-set-no-export
  call rm-no-export
  on-match next
route-map rm-community-in permit 30
  match community cme-prefmod-range
  call rm-prefmod
route-map rm-community-in permit 40
!
! #####
! Community actions to take when advertising a route.
! These are filtering route-maps,
!
! Deny customer routes to upstream with cust-only set.
route-map rm-community-filt-to-upstream deny 10
  match community cm-learnt-cust
  match community cm-cust-only
route-map rm-community-filt-to-upstream permit 20
!
! Deny customer routes to other customers with upstream-only set.
route-map rm-community-filt-to-cust deny 10
  match community cm-learnt-cust
  match community cm-upstream-only
route-map rm-community-filt-to-cust permit 20
!
! #####
! The top-level route-maps applied to sessions. Further entries could
! be added obviously..
!
! Customers
route-map rm-cust-in permit 10
  call rm-community-in

```

(continues on next page)

(continued from previous page)

```

on-match next
route-map rm-cust-in permit 20
  set community additive 64512:3100
route-map rm-cust-in permit 30
!
route-map rm-cust-out permit 10
  call rm-community-filt-to-cust
  on-match next
route-map rm-cust-out permit 20
!
! Upstream transit ASes
route-map rm-upstream-out permit 10
  description filter customer prefixes which are marked cust-only
  call rm-community-filt-to-upstream
  on-match next
route-map rm-upstream-out permit 20
  description only customer routes are provided to upstreams/peers
  match community cm-learnt-cust
!
! Peer ASes
! outbound policy is same as for upstream
route-map rm-peer-out permit 10
  call rm-upstream-out
!
route-map rm-peer-in permit 10
  set community additive 64512:3200

```

Example of how to set up a 6-Bone connection.

```

! bgpd configuration
! =====
!
! MP-BGP configuration
!
router bgp 7675
  bgp router-id 10.0.0.1
  neighbor 3ffe:1cfa:0:2:2a0:c9ff:fe9e:f56 remote-as `as-number`
!
  address-family ipv6
  network 3ffe:506::/32
  neighbor 3ffe:1cfa:0:2:2a0:c9ff:fe9e:f56 activate
  neighbor 3ffe:1cfa:0:2:2a0:c9ff:fe9e:f56 route-map set-nexthop out
  neighbor 3ffe:1cfa:0:2:2c0:4fff:fe68:a231 remote-as `as-number`
  neighbor 3ffe:1cfa:0:2:2c0:4fff:fe68:a231 route-map set-nexthop out
  exit-address-family
!
  ipv6 access-list all permit any
!
! Set output nexthop address.
!
route-map set-nexthop permit 10
  match ipv6 address all

```

(continues on next page)

(continued from previous page)

```

set ipv6 nexthop global 3ffe:1cfa:0:2:2c0:4fff:fe68:a225
set ipv6 nexthop local fe80::2c0:4fff:fe68:a225
!
log syslog
!
```

BGP tcp-mss support

TCP provides a mechanism for the user to specify the max segment size. setsockopt API is used to set the max segment size for TCP session. We can configure this as part of BGP neighbor configuration.

This document explains how to avoid ICMP vulnerability issues by limiting TCP max segment size when you are using MTU discovery. Using MTU discovery on TCP paths is one method of avoiding BGP packet fragmentation.

TCP negotiates a maximum segment size (MSS) value during session connection establishment between two peers. The MSS value negotiated is primarily based on the maximum transmission unit (MTU) of the interfaces to which the communicating peers are directly connected. However, due to variations in link MTU on the path taken by the TCP packets, some packets in the network that are well within the MSS value might be fragmented when the packet size exceeds the link's MTU.

This feature is supported with TCP over IPv4 and TCP over IPv6.

CLI Configuration:

Below configuration can be done in router bgp mode and allows the user to configure the tcp-mss value per neighbor. The configuration gets applied only after hard reset is performed on that neighbor. If we configure tcp-mss on both the neighbors then both neighbors need to be reset.

The configuration takes effect based on below rules, so there is a configured tcp-mss and a synced tcp-mss value per TCP session.

By default if the configuration is not done then the TCP max segment size is set to the Maximum Transmission unit (MTU) – (IP/IPv6 header size + TCP header size + ethernet header). For IPv4 its MTU – (20 bytes IP header + 20 bytes TCP header + 12 bytes ethernet header) and for IPv6 its MTU – (40 bytes IPv6 header + 20 bytes TCP header + 12 bytes ethernet header).

If the config is done then it reduces 12-14 bytes for the ether header and uses it after synchronizing in TCP handshake.

neighbor <A.B.C.D|X:X::X:X|WORD> tcp-mss (1-65535)

When tcp-mss is configured kernel reduces 12-14 bytes for ethernet header. E.g. if tcp-mss is configured as 150 the synced value will be 138.

Note: configured and synced value is different since TCP module will reduce 12 bytes for ethernet header.

Running config:

```
soodar# show running-config
Building configuration...

Current configuration:
!
router bgp 100
  bgp router-id 192.0.2.1
  neighbor 198.51.100.2 remote-as 100
  neighbor 198.51.100.2 tcp-mss 150          => new entry
  neighbor 2001:DB8::2 remote-as 100
  neighbor 2001:DB8::2 tcp-mss 400         => new entry
```

Show command:

```
soodar# show bgp neighbors 198.51.100.2
BGP neighbor is 198.51.100.2, remote AS 100, local AS 100, internal link
Hostname: frr
  BGP version 4, remote router ID 192.0.2.2, local router ID 192.0.2.1
  BGP state = Established, up for 02:15:28
  Last read 00:00:28, Last write 00:00:28
  Hold time is 180, keepalive interval is 60 seconds
  Configured tcp-mss is 150, synced tcp-mss is 138    => new display
```

```
soodar# show bgp neighbors 2001:DB8::2
BGP neighbor is 2001:DB8::2, remote AS 100, local AS 100, internal link
Hostname: frr
  BGP version 4, remote router ID 192.0.2.2, local router ID 192.0.2.1
  BGP state = Established, up for 02:16:34
  Last read 00:00:34, Last write 00:00:34
  Hold time is 180, keepalive interval is 60 seconds
  Configured tcp-mss is 400, synced tcp-mss is 388    => new display
```

Show command json output:

```
soodar# show bgp neighbors 2001:DB8::2 json
{
  "2001:DB8::2":{
    "remoteAs":100,
    "localAs":100,
    "nbrInternalLink":true,
    "hostname":"frr",
    "bgpVersion":4,
    "remoteRouterId":"192.0.2.2",
    "localRouterId":"192.0.2.1",
    "bgpState":"Established",
    "bgpTimerUpMsec":8349000,
    "bgpTimerUpString":"02:19:09",
```

(continues on next page)

(continued from previous page)

```

"bgpTimerUpEstablishedEpoch":1613054251,
"bgpTimerLastRead":9000,
"bgpTimerLastWrite":9000,
"bgpInUpdateElapsedTimeMsecs":8347000,
"bgpTimerHoldTimeMsecs":180000,
"bgpTimerKeepAliveIntervalMsecs":60000,
"bgpTcpMssConfigured":400,
"bgpTcpMssSynced":388,

```

=> new entry
=> new entry

```

soodar# show bgp neighbors 198.51.100.2 json
{
  "198.51.100.2":{
    "remoteAs":100,
    "localAs":100,
    "nbrInternalLink":true,
    "hostname":"frr",
    "bgpVersion":4,
    "remoteRouterId":"192.0.2.2",
    "localRouterId":"192.0.2.1",
    "bgpState":"Established",
    "bgpTimerUpMsec":8370000,
    "bgpTimerUpString":"02:19:30",
    "bgpTimerUpEstablishedEpoch":1613054251,
    "bgpTimerLastRead":30000,
    "bgpTimerLastWrite":30000,
    "bgpInUpdateElapsedTimeMsecs":8368000,
    "bgpTimerHoldTimeMsecs":180000,
    "bgpTimerKeepAliveIntervalMsecs":60000,
    "bgpTcpMssConfigured":150,
    "bgpTcpMssSynced":138,
  }
}

```

=> new entry
=> new entry

Configuring FRR as a Route Server

The purpose of a Route Server is to centralize the peerings between BGP speakers. For example if we have an exchange point scenario with four BGP speakers, each of which maintaining a BGP peering with the other three (fig-topologies-full), we can convert it into a centralized scenario where each of the four establishes a single BGP peering against the Route Server (fig-topologies-rs).

We will first describe briefly the Route Server model implemented by FRR. We will explain the commands that have been added for configuring that model. And finally we will show a full example of FRR configured as Route Server.

Description of the Route Server model

First we are going to describe the normal processing that BGP announcements suffer inside a standard BGP speaker, as shown in fig-normal-processing, it consists of three steps:

- When an announcement is received from some peer, the *In* filters configured for that peer are applied to the announcement. These filters can reject the announcement, accept it unmodified, or accept it with some of its attributes modified.
- The announcements that pass the *In* filters go into the Best Path Selection process, where they are compared to other announcements referred to the same destination that have been received from different peers (in case such

other announcements exist). For each different destination, the announcement which is selected as the best is inserted into the BGP speaker's Loc-RIB.

- The routes which are inserted in the Loc-RIB are considered for announcement to all the peers (except the one from which the route came). This is done by passing the routes in the Loc-RIB through the *Out* filters corresponding to each peer. These filters can reject the route, accept it unmodified, or accept it with some of its attributes modified. Those routes which are accepted by the *Out* filters of a peer are announced to that peer.

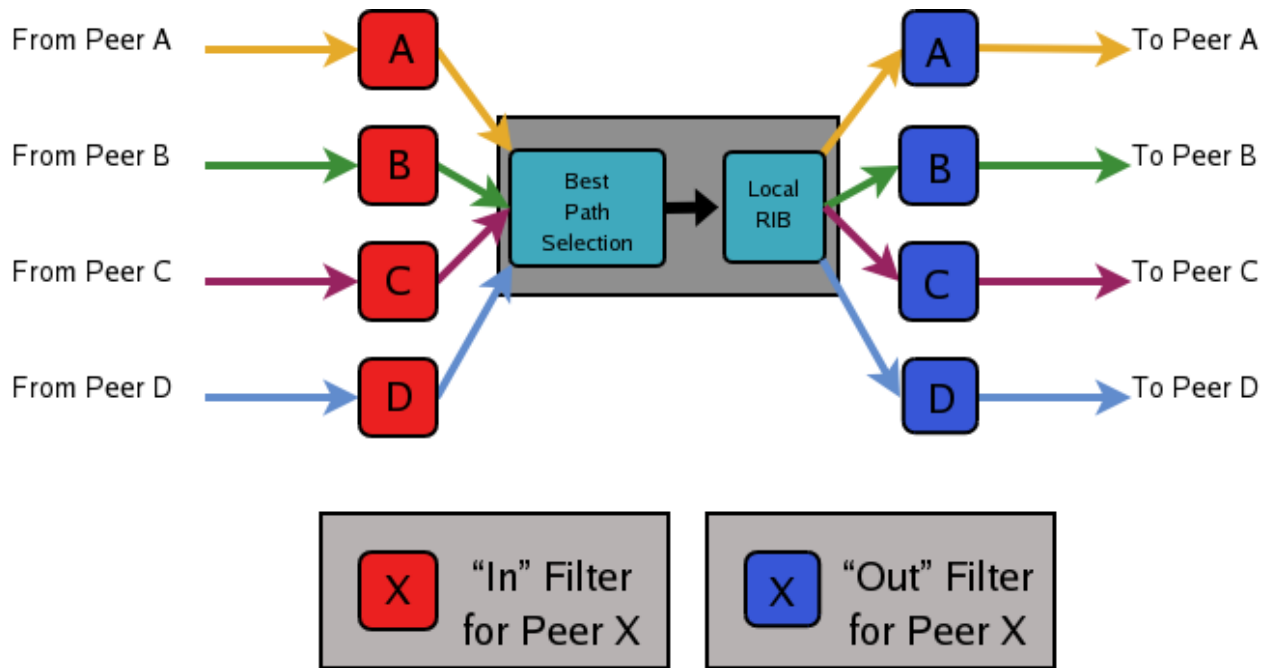


Fig. 1: Announcement processing inside a 'normal' BGP speaker

Of course we want that the routing tables obtained in each of the routers are the same when using the route server than when not. But as a consequence of having a single BGP peering (against the route server), the BGP speakers can no longer distinguish from/to which peer each announce comes/goes.

This means that the routers connected to the route server are not able to apply by themselves the same input/output filters as in the full mesh scenario, so they have to delegate those functions to the route server.

Even more, the 'best path' selection must be also performed inside the route server on behalf of its clients. The reason is that if, after applying the filters of the announcer and the (potential) receiver, the route server decides to send to some client two or more different announcements referred to the same destination, the client will only retain the last one, considering it as an implicit withdrawal of the previous announcements for the same destination. This is the expected behavior of a BGP speaker as defined in [RFC 1771](#), and even though there are some proposals of mechanisms that permit multiple paths for the same destination to be sent through a single BGP peering, none are currently supported by most existing BGP implementations.

As a consequence a route server must maintain additional information and perform additional tasks for a RS-client that those necessary for common BGP peerings. Essentially a route server must:

- Maintain a separated Routing Information Base (Loc-RIB) for each peer configured as RS-client, containing the routes selected as a result of the 'Best Path Selection' process that is performed on behalf of that RS-client.
- Whenever it receives an announcement from a RS-client, it must consider it for the Loc-RIBs of the other RS-clients.
 - This means that for each of them the route server must pass the announcement through the appropriate *Out* filter of the announcer.

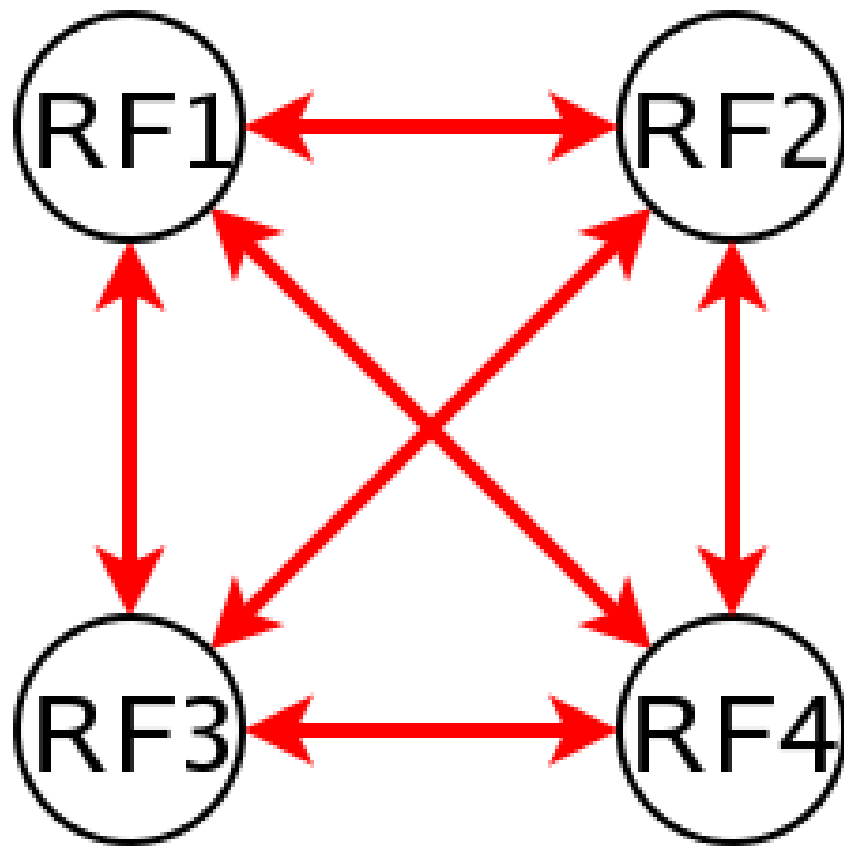


Fig. 2: Full Mesh

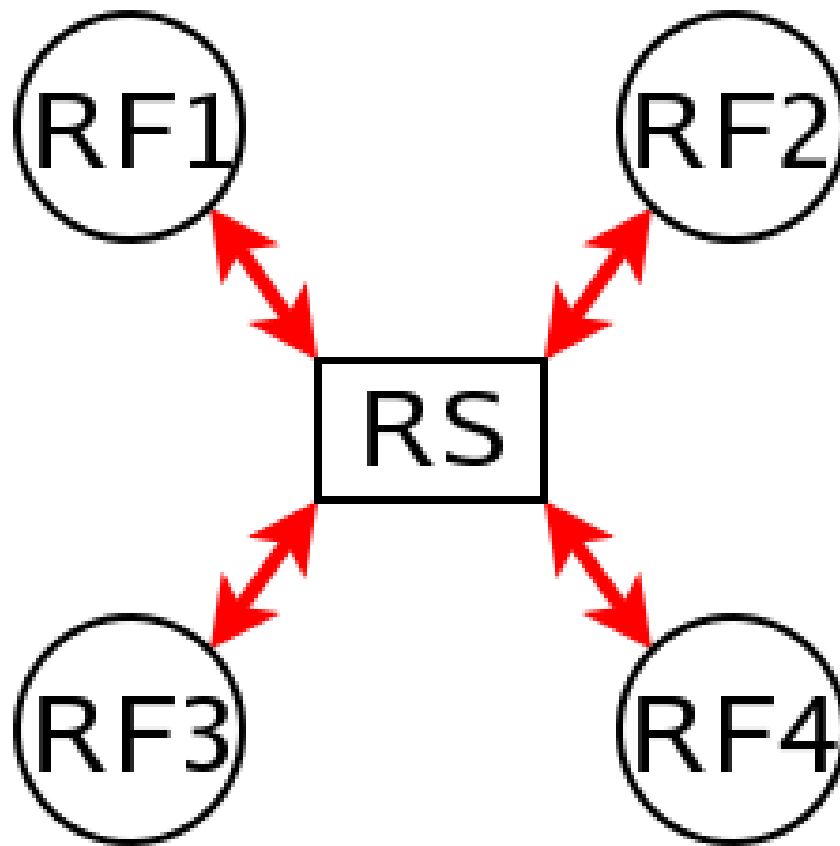


Fig. 3: Route server and clients

- Then through the appropriate *In* filter of the potential receiver.
- Only if the announcement is accepted by both filters it will be passed to the ‘Best Path Selection’ process.
- Finally, it might go into the Loc-RIB of the receiver.

When we talk about the ‘appropriate’ filter, both the announcer and the receiver of the route must be taken into account. Suppose that the route server receives an announcement from client A, and the route server is considering it for the Loc-RIB of client B. The filters that should be applied are the same that would be used in the full mesh scenario, i.e., first the *Out* filter of router A for announcements going to router B, and then the *In* filter of router B for announcements coming from router A.

We call ‘Export Policy’ of a RS-client to the set of *Out* filters that the client would use if there was no route server. The same applies for the ‘Import Policy’ of a RS-client and the set of *In* filters of the client if there was no route server.

It is also common to demand from a route server that it does not modify some BGP attributes (next-hop, as-path and MED) that are usually modified by standard BGP speakers before announcing a route.

The announcement processing model implemented by FRR is shown in fig-rs-processing. The figure shows a mixture of RS-clients (B, C and D) with normal BGP peers (A). There are some details that worth additional comments:

- Announcements coming from a normal BGP peer are also considered for the Loc-RIBs of all the RS-clients. But logically they do not pass through any export policy.
- Those peers that are configured as RS-clients do not receive any announce from the *Main* Loc-RIB.
- Apart from import and export policies, *In* and *Out* filters can also be set for RS-clients. *In* filters might be useful when the route server has also normal BGP peers. On the other hand, *Out* filters for RS-clients are probably unnecessary, but we decided not to remove them as they do not hurt anybody (they can always be left empty).

Commands for configuring a Route Server

Now we will describe the commands that have been added to frr in order to support the route server features.

neighbor PEER-GROUP route-server-client

neighbor A.B.C.D route-server-client

neighbor X:X::X:X route-server-client

This command configures the peer given by *peer*, *A.B.C.D* or *X:X::X:X* as an RS-client.

Actually this command is not new, it already existed in standard FRR. It enables the transparent mode for the specified peer. This means that some BGP attributes (as-path, next-hop and MED) of the routes announced to that peer are not modified.

With the route server patch, this command, apart from setting the transparent mode, creates a new Loc-RIB dedicated to the specified peer (those named *Loc-RIB for X* in fig-rs-processing.). Starting from that moment, every announcement received by the route server will be also considered for the new Loc-RIB.

neighbor A.B.C.D|X.X::X.X|peer-group route-map WORD import|export

This set of commands can be used to specify the route-map that represents the Import or Export policy of a peer which is configured as a RS-client (with the previous command).

match peer A.B.C.D|X.X::X.X

This is a new *match* statement for use in route-maps, enabling them to describe import/export policies. As we said before, an import/export policy represents a set of input/output filters of the RS-client. This statement makes possible that a single route-map represents the full set of filters that a BGP speaker would use for its different peers in a non-RS scenario.

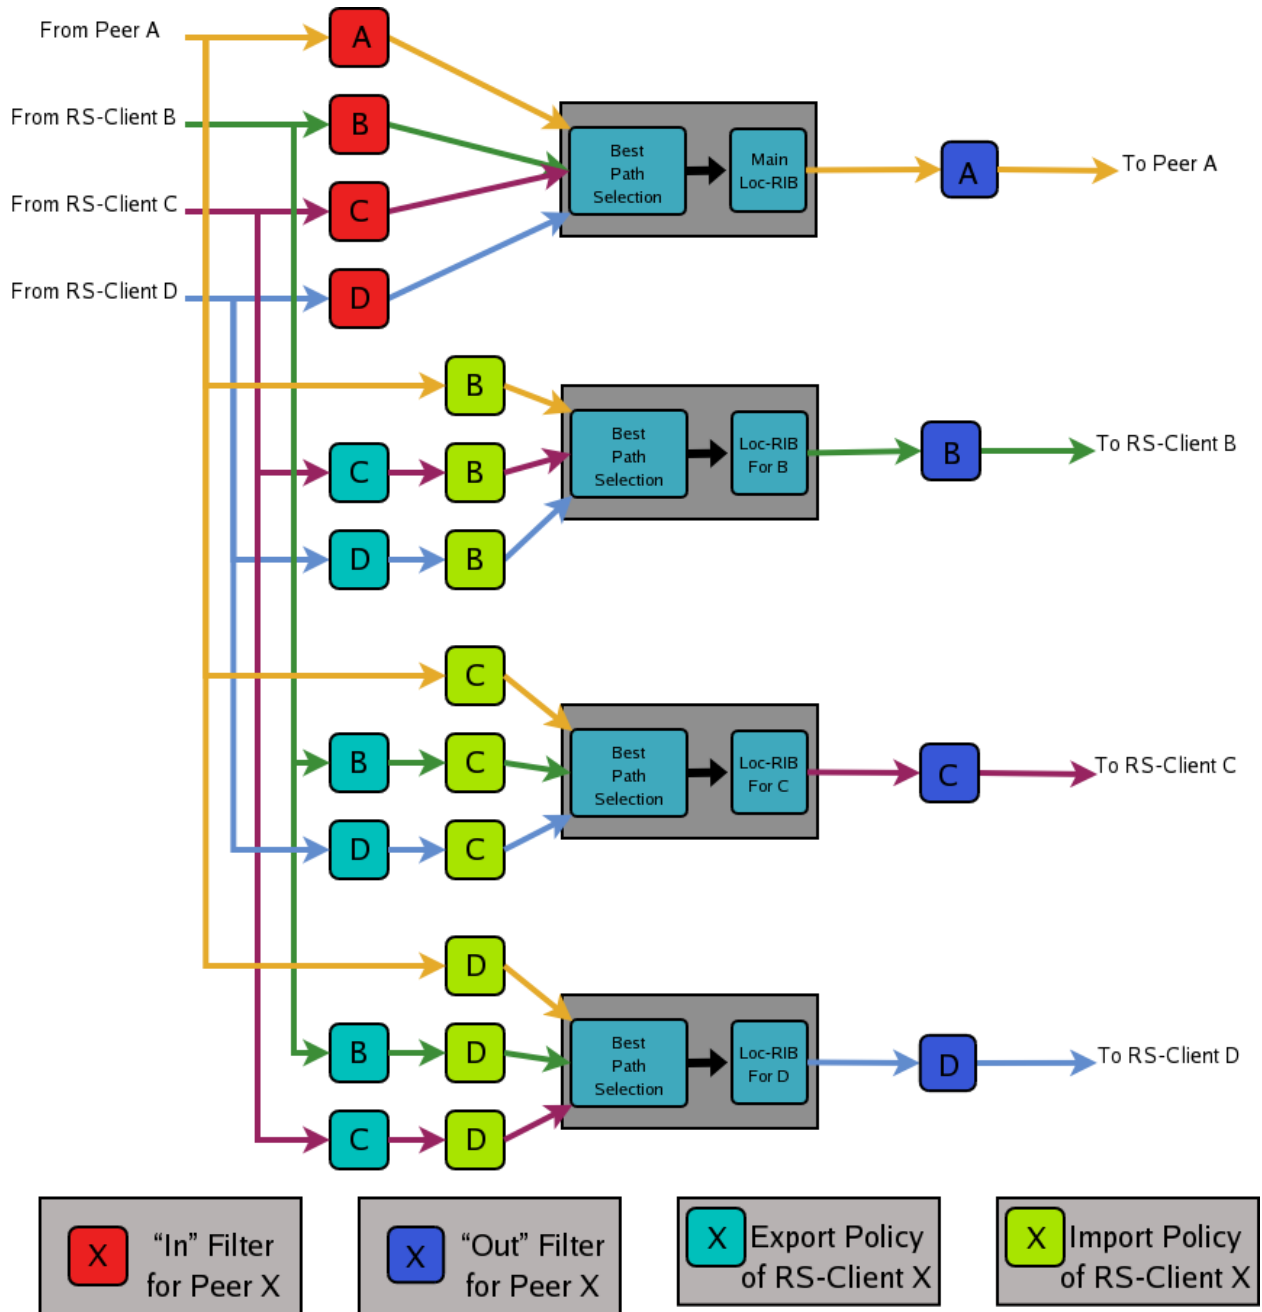


Fig. 4: Announcement processing model implemented by the Route Server

The *match peer* statement has different semantics whether it is used inside an import or an export route-map. In the first case the statement matches if the address of the peer who sends the announce is the same that the address specified by {A.B.C.D|X:X::X:X}. For export route-maps it matches when {A.B.C.D|X:X::X:X} is the address of the RS-Client into whose Loc-RIB the announce is going to be inserted (how the same export policy is applied before different Loc-RIBs is shown in fig-rs-processing.).

call WORD

This command (also used inside a route-map) jumps into a different route-map, whose name is specified by *WORD*. When the called route-map finishes, depending on its result the original route-map continues or not. Apart from being useful for making import/export route-maps easier to write, this command can also be used inside any normal (in or out) route-map.

Example of Route Server Configuration

Finally we are going to show how to configure a FRR daemon to act as a Route Server. For this purpose we are going to present a scenario without route server, and then we will show how to use the configurations of the BGP routers to generate the configuration of the route server.

All the configuration files shown in this section have been taken from scenarios which were tested using the VNUML tool <http://www.dit.upm.es/vnuml,VNUML>.

Configuration of the BGP routers without Route Server

We will suppose that our initial scenario is an exchange point with three BGP capable routers, named RA, RB and RC. Each of the BGP speakers generates some routes (with the *network* command), and establishes BGP peerings against the other two routers. These peerings have In and Out route-maps configured, named like 'PEER-X-IN' or 'PEER-X-OUT'. For example the configuration file for router RA could be the following:

```
#Configuration for router 'RA'
!
hostname RA
password ****
!
router bgp 65001
  no bgp default ipv4-unicast
  neighbor 2001:0DB8::B remote-as 65002
  neighbor 2001:0DB8::C remote-as 65003
!
  address-family ipv6
    network 2001:0DB8:AAAA:1::/64
    network 2001:0DB8:AAAA:2::/64
    network 2001:0DB8:0000:1::/64
    network 2001:0DB8:0000:2::/64
    neighbor 2001:0DB8::B activate
    neighbor 2001:0DB8::B soft-reconfiguration inbound
    neighbor 2001:0DB8::B route-map PEER-B-IN in
    neighbor 2001:0DB8::B route-map PEER-B-OUT out
    neighbor 2001:0DB8::C activate
    neighbor 2001:0DB8::C soft-reconfiguration inbound
    neighbor 2001:0DB8::C route-map PEER-C-IN in
    neighbor 2001:0DB8::C route-map PEER-C-OUT out
  exit-address-family
```

(continues on next page)

(continued from previous page)

```

!
ipv6 prefix-list COMMON-PREFIXES seq 5 permit 2001:0DB8:0000::/48 ge 64 le 64
ipv6 prefix-list COMMON-PREFIXES seq 10 deny any
!
ipv6 prefix-list PEER-A-PREFIXES seq 5 permit 2001:0DB8:AAAA::/48 ge 64 le 64
ipv6 prefix-list PEER-A-PREFIXES seq 10 deny any
!
ipv6 prefix-list PEER-B-PREFIXES seq 5 permit 2001:0DB8:BBBB::/48 ge 64 le 64
ipv6 prefix-list PEER-B-PREFIXES seq 10 deny any
!
ipv6 prefix-list PEER-C-PREFIXES seq 5 permit 2001:0DB8:CCCC::/48 ge 64 le 64
ipv6 prefix-list PEER-C-PREFIXES seq 10 deny any
!
route-map PEER-B-IN permit 10
  match ipv6 address prefix-list COMMON-PREFIXES
  set metric 100
route-map PEER-B-IN permit 20
  match ipv6 address prefix-list PEER-B-PREFIXES
  set community 65001:11111
!
route-map PEER-C-IN permit 10
  match ipv6 address prefix-list COMMON-PREFIXES
  set metric 200
route-map PEER-C-IN permit 20
  match ipv6 address prefix-list PEER-C-PREFIXES
  set community 65001:22222
!
route-map PEER-B-OUT permit 10
  match ipv6 address prefix-list PEER-A-PREFIXES
!
route-map PEER-C-OUT permit 10
  match ipv6 address prefix-list PEER-A-PREFIXES
!
line vty
!

```

Configuration of the BGP routers with Route Server

To convert the initial scenario into one with route server, first we must modify the configuration of routers RA, RB and RC. Now they must not peer between them, but only with the route server. For example, RA's configuration would turn into:

```

# Configuration for router 'RA'
!
hostname RA
password ****
!
router bgp 65001
  no bgp default ipv4-unicast
  neighbor 2001:0DB8::FFFF remote-as 65000
!

```

(continues on next page)

(continued from previous page)

```

address-family ipv6
  network 2001:0DB8:AAAA:1::/64
  network 2001:0DB8:AAAA:2::/64
  network 2001:0DB8:0000:1::/64
  network 2001:0DB8:0000:2::/64

  neighbor 2001:0DB8::FFFF activate
  neighbor 2001:0DB8::FFFF soft-reconfiguration inbound
exit-address-family
!
line vty
!

```

Which is logically much simpler than its initial configuration, as it now maintains only one BGP peering and all the filters (route-maps) have disappeared.

Configuration of the Route Server itself

As we said when we described the functions of a route server (description-of-the-route-server-model), it is in charge of all the route filtering. To achieve that, the In and Out filters from the RA, RB and RC configurations must be converted into Import and Export policies in the route server.

This is a fragment of the route server configuration (we only show the policies for client RA):

```

# Configuration for Route Server ('RS')
!
hostname RS
password ix
!
router bgp 65000 view RS
  no bgp default ipv4-unicast
  neighbor 2001:0DB8::A remote-as 65001
  neighbor 2001:0DB8::B remote-as 65002
  neighbor 2001:0DB8::C remote-as 65003
!
  address-family ipv6
    neighbor 2001:0DB8::A activate
    neighbor 2001:0DB8::A route-server-client
    neighbor 2001:0DB8::A route-map RSCLIENT-A-IMPORT import
    neighbor 2001:0DB8::A route-map RSCLIENT-A-EXPORT export
    neighbor 2001:0DB8::A soft-reconfiguration inbound

    neighbor 2001:0DB8::B activate
    neighbor 2001:0DB8::B route-server-client
    neighbor 2001:0DB8::B route-map RSCLIENT-B-IMPORT import
    neighbor 2001:0DB8::B route-map RSCLIENT-B-EXPORT export
    neighbor 2001:0DB8::B soft-reconfiguration inbound

    neighbor 2001:0DB8::C activate
    neighbor 2001:0DB8::C route-server-client
    neighbor 2001:0DB8::C route-map RSCLIENT-C-IMPORT import
    neighbor 2001:0DB8::C route-map RSCLIENT-C-EXPORT export

```

(continues on next page)

(continued from previous page)

```
neighbor 2001:0DB8::C soft-reconfiguration inbound
exit-address-family
!
ipv6 prefix-list COMMON-PREFIXES seq 5 permit 2001:0DB8:0000::/48 ge 64 le 64
ipv6 prefix-list COMMON-PREFIXES seq 10 deny any
!
ipv6 prefix-list PEER-A-PREFIXES seq 5 permit 2001:0DB8:AAAA::/48 ge 64 le 64
ipv6 prefix-list PEER-A-PREFIXES seq 10 deny any
!
ipv6 prefix-list PEER-B-PREFIXES seq 5 permit 2001:0DB8:BBBB::/48 ge 64 le 64
ipv6 prefix-list PEER-B-PREFIXES seq 10 deny any
!
ipv6 prefix-list PEER-C-PREFIXES seq 5 permit 2001:0DB8:CCCC::/48 ge 64 le 64
ipv6 prefix-list PEER-C-PREFIXES seq 10 deny any
!
route-map RSCLIENT-A-IMPORT permit 10
  match peer 2001:0DB8::B
  call A-IMPORT-FROM-B
route-map RSCLIENT-A-IMPORT permit 20
  match peer 2001:0DB8::C
  call A-IMPORT-FROM-C
!
route-map A-IMPORT-FROM-B permit 10
  match ipv6 address prefix-list COMMON-PREFIXES
  set metric 100
route-map A-IMPORT-FROM-B permit 20
  match ipv6 address prefix-list PEER-B-PREFIXES
  set community 65001:11111
!
route-map A-IMPORT-FROM-C permit 10
  match ipv6 address prefix-list COMMON-PREFIXES
  set metric 200
route-map A-IMPORT-FROM-C permit 20
  match ipv6 address prefix-list PEER-C-PREFIXES
  set community 65001:22222
!
route-map RSCLIENT-A-EXPORT permit 10
  match peer 2001:0DB8::B
  match ipv6 address prefix-list PEER-A-PREFIXES
route-map RSCLIENT-A-EXPORT permit 20
  match peer 2001:0DB8::C
  match ipv6 address prefix-list PEER-A-PREFIXES
!
...
...
...
```

If you compare the initial configuration of RA with the route server configuration above, you can see how easy it is to generate the Import and Export policies for RA from the In and Out route-maps of RA's original configuration.

When there was no route server, RA maintained two peerings, one with RB and another with RC. Each of these peerings had an In route-map configured. To build the Import route-map for client RA in the route server, simply add route-map entries following this scheme:

```

route-map <NAME> permit 10
  match peer <Peer Address>
  call <In Route-Map for this Peer>
route-map <NAME> permit 20
  match peer <Another Peer Address>
  call <In Route-Map for this Peer>

```

This is exactly the process that has been followed to generate the route-map RSCLIENT-A-IMPORT. The route-maps that are called inside it (A-IMPORT-FROM-B and A-IMPORT-FROM-C) are exactly the same than the In route-maps from the original configuration of RA (PEER-B-IN and PEER-C-IN), only the name is different.

The same could have been done to create the Export policy for RA (route-map RSCLIENT-A-EXPORT), but in this case the original Out route-maps were so simple that we decided not to use the *call WORD* commands, and we integrated all in a single route-map (RSCLIENT-A-EXPORT).

The Import and Export policies for RB and RC are not shown, but the process would be identical.

Further considerations about Import and Export route-maps

The current version of the route server patch only allows to specify a route-map for import and export policies, while in a standard BGP speaker apart from route-maps there are other tools for performing input and output filtering (access-lists, community-lists, ...). But this does not represent any limitation, as all kinds of filters can be included in import/export route-maps. For example suppose that in the non-route-server scenario peer RA had the following filters configured for input from peer B:

```

neighbor 2001:0DB8::B prefix-list LIST-1 in
neighbor 2001:0DB8::B filter-list LIST-2 in
neighbor 2001:0DB8::B route-map PEER-B-IN in
...
...
route-map PEER-B-IN permit 10
  match ipv6 address prefix-list COMMON-PREFIXES
  set local-preference 100
route-map PEER-B-IN permit 20
  match ipv6 address prefix-list PEER-B-PREFIXES
  set community 65001:1111

```

It is possible to write a single route-map which is equivalent to the three filters (the community-list, the prefix-list and the route-map). That route-map can then be used inside the Import policy in the route server. Lets see how to do it:

```

neighbor 2001:0DB8::A route-map RSCLIENT-A-IMPORT import
...
!
...
route-map RSCLIENT-A-IMPORT permit 10
  match peer 2001:0DB8::B
  call A-IMPORT-FROM-B
...
...
!
route-map A-IMPORT-FROM-B permit 1
  match ipv6 address prefix-list LIST-1
  match as-path LIST-2

```

(continues on next page)

(continued from previous page)

```
on-match goto 10
route-map A-IMPORT-FROM-B deny 2
route-map A-IMPORT-FROM-B permit 10
  match ipv6 address prefix-list COMMON-PREFIXES
  set local-preference 100
route-map A-IMPORT-FROM-B permit 20
  match ipv6 address prefix-list PEER-B-PREFIXES
  set community 65001:11111
!
...
...
```

The route-map A-IMPORT-FROM-B is equivalent to the three filters (LIST-1, LIST-2 and PEER-B-IN). The first entry of route-map A-IMPORT-FROM-B (sequence number 1) matches if and only if both the prefix-list LIST-1 and the filter-list LIST-2 match. If that happens, due to the ‘on-match goto 10’ statement the next route-map entry to be processed will be number 10, and as of that point route-map A-IMPORT-FROM-B is identical to PEER-B-IN. If the first entry does not match, *on-match goto 10*’ will be ignored and the next processed entry will be number 2, which will deny the route.

Thus, the result is the same that with the three original filters, i.e., if either LIST-1 or LIST-2 rejects the route, it does not reach the route-map PEER-B-IN. In case both LIST-1 and LIST-2 accept the route, it passes to PEER-B-IN, which can reject, accept or modify the route.

Weighted ECMP using BGP link bandwidth

Overview

In normal equal cost multipath (ECMP), the route to a destination has multiple next hops and traffic is expected to be equally distributed across these next hops. In practice, flow-based hashing is used so that all traffic associated with a particular flow uses the same next hop, and by extension, the same path across the network.

Weighted ECMP using BGP link bandwidth introduces support for network-wide unequal cost multipathing (UCMP) to an IP destination. The unequal cost load balancing is implemented by the forwarding plane based on the weights associated with the next hops of the IP prefix. These weights are computed based on the bandwidths of the corresponding multipaths which are encoded in the BGP link bandwidth extended community as specified in [?]. Exchange of an appropriate BGP link bandwidth value for a prefix across the network results in network-wide unequal cost multipathing.

One of the primary use cases of this capability is in the data center when a service (represented by its anycast IP) has an unequal set of resources across the regions (e.g., PODs) of the data center and the network itself provides the load balancing function instead of an external load balancer. Refer to [?] and [RFC 7938](#) for details on this use case. This use case is applicable in a pure L3 network as well as in a EVPN network.

The traditional use case for BGP link bandwidth to load balance traffic to the exit routers in the AS based on the bandwidth of their external eBGP peering links is also supported.

Design Principles

Next hop weight computation and usage

As described, in UCMP, there is a weight associated with each next hop of an IP prefix, and traffic is expected to be distributed across the next hops in proportion to their weight. The weight of a next hop is a simple factoring of the bandwidth of the corresponding path against the total bandwidth of all multipaths, mapped to the range 1 to 100. What happens if not all the paths in the multipath set have link bandwidth associated with them? In such a case, in adherence to [?], the behavior reverts to standard ECMP among all the multipaths, with the link bandwidth being effectively ignored.

Note that there is no change to either the BGP best path selection algorithm or to the multipath computation algorithm; the mapping of link bandwidth to weight happens at the time of installation of the route in the RIB.

Unequal cost multipath across a network

For the use cases listed above, it is not sufficient to support UCMP on just one router (e.g., egress router), or individually, on multiple routers; UCMP must be deployed across the entire network. This is achieved by employing the BGP link-bandwidth extended community.

At the router which originates the BGP link bandwidth, there has to be user configuration to trigger it, which is described below. Receiving routers would use the received link bandwidth from their downstream routers to determine the next hop weight as described in the earlier section. Further, if the received link bandwidth is a transitive attribute, it would be propagated to eBGP peers, with the additional change that if the next hop is set to oneself, the cumulative link bandwidth of all downstream paths is propagated to other routers. In this manner, the entire network will know how to distribute traffic to an anycast service across the network.

The BGP link-bandwidth extended community is encoded in bytes-per-second. In the use case where UCMP must be based on the number of paths, a reference bandwidth of 1 Mbps is used. So, for example, if there are 4 equal cost paths to an anycast IP, the encoded bandwidth in the extended community will be 500,000. The actual value itself doesn't matter as long as all routers originating the link-bandwidth are doing it in the same way.

Configuration Guide

The configuration for weighted ECMP using BGP link bandwidth requires one essential step - using a route-map to inject the link bandwidth extended community. An additional option is provided to control the processing of received link bandwidth.

Injecting link bandwidth into the network

At the “entry point” router that is injecting the prefix to which weighted load balancing must be performed, a route-map must be configured to attach the link bandwidth extended community.

For the use case of providing weighted load balancing for an anycast service, this configuration will typically need to be applied at the TOR or Leaf router that is connected to servers which provide the anycast service and the bandwidth would be based on the number of multipaths for the destination.

For the use case of load balancing to the exit router, the exit router should be configured with the route map specifying the a bandwidth value that corresponds to the bandwidth of the link connecting to its eBGP peer in the adjoining AS. In addition, the link bandwidth extended community must be explicitly configured to be non-transitive.

The complete syntax of the route-map set command can be found at [BGP Extended Communities in Route Map](#)

This route-map is supported only at two attachment points: (a) the outbound route-map attached to a peer or peer-group, per address-family (b) the EVPN advertise route-map used to inject IPv4 or IPv6 unicast routes into EVPN as type-5 routes.

Since the link bandwidth origination is done by using a route-map, it can be constrained to certain prefixes (e.g., only for anycast services) or it can be generated for all prefixes. Further, when the route-map is used in the neighbor context, the link bandwidth usage can be constrained to certain peers only.

A sample configuration is shown below and illustrates link bandwidth advertisement towards the “SPINE” peer-group for anycast IPs in the range 192.168.x.x

```
ip prefix-list anycast_ip seq 10 permit 192.168.0.0/16 le 32
route-map anycast_ip permit 10
  match ip address prefix-list anycast_ip
  set extcommunity bandwidth num-multipaths
route-map anycast_ip permit 20
!
router bgp 65001
  neighbor SPINE peer-group
  neighbor SPINE remote-as external
  neighbor 172.16.35.1 peer-group SPINE
  neighbor 172.16.36.1 peer-group SPINE
!
address-family ipv4 unicast
  network 110.0.0.1/32
  network 192.168.44.1/32
  neighbor SPINE route-map anycast_ip out
exit-address-family
!
```

Controlling link bandwidth processing on the receiver

There is no configuration necessary to process received link bandwidth and translate it into the weight associated with the corresponding next hop; that happens by default. If some of the multipaths do not have the link bandwidth extended community, the default behavior is to revert to normal ECMP as recommended in [?].

The operator can change these behaviors with the following configuration:

```
bgp bestpath bandwidth <ignore | skip-missing | default-weight-for-missing>
```

The different options imply behavior as follows:

- ignore: Ignore link bandwidth completely for route installation (i.e., do regular ECMP, not weighted)
- skip-missing: Skip paths without link bandwidth and do UCMP among the others (if at least some paths have link-bandwidth)
- default-weight-for-missing: Assign a low default weight (value 1) to paths not having link bandwidth

This configuration is per BGP instance similar to other BGP route-selection controls; it operates on both IPv4-unicast and IPv6-unicast routes in that instance. In an EVPN network, this configuration (if required) should be implemented in the tenant VRF and is again applicable for IPv4-unicast and IPv6-unicast, including the ones sourced from EVPN type-5 routes.

A sample snippet of FRR configuration on a receiver to skip paths without link bandwidth and do weighted ECMP among the other paths (if some of them have link bandwidth) is as shown below.

```

router bgp 65021
  bgp bestpath as-path multipath-relax
  bgp bestpath bandwidth skip-missing
  neighbor LEAF peer-group
  neighbor LEAF remote-as external
  neighbor 172.16.35.2 peer-group LEAF
  neighbor 172.16.36.2 peer-group LEAF
  !
  address-family ipv4 unicast
    network 130.0.0.1/32
  exit-address-family
  !

```

Stopping the propagation of the link bandwidth outside a domain

The link bandwidth extended community will get automatically propagated with the prefix to EBGp peers, if it is encoded as a transitive attribute by the originator. If this propagation has to be stopped outside of a particular domain (e.g., stopped from being propagated to routers outside of the data center core network), the mechanism available is to disable the advertisement of all BGP extended communities on the specific peering/s. In other words, the propagation cannot be blocked just for the link bandwidth extended community. The configuration to disable all extended communities can be applied to a peer or peer-group (per address-family).

Of course, the other common way to stop the propagation of the link bandwidth outside the domain is to block the prefixes themselves from being advertised and possibly, announce only an aggregate route. This would be quite common in a EVPN network.

BGP link bandwidth and UCMP monitoring & troubleshooting

Existing operational commands to display the BGP routing table for a specific prefix will show the link bandwidth extended community also, if present.

An example of an IPv4-unicast route received with the link bandwidth attribute from two peers is shown below:

```

CLI# show bgp ipv4 unicast 192.168.10.1/32
BGP routing table entry for 192.168.10.1/32
Paths: (2 available, best #2, table default)
  Advertised to non peer-group peers:
  l1(swp1) l2(swp2) l3(swp3) l4(swp4)
  65002
    fe80::202:ff:fe00:1b from l2(swp2) (110.0.0.2)
    (fe80::202:ff:fe00:1b) (used)
    Origin IGP, metric 0, valid, external, multipath, bestpath-from-AS 65002
    Extended Community: LB:65002:125000000 (1000.000 Mbps)
    Last update: Thu Feb 20 18:34:16 2020

  65001
    fe80::202:ff:fe00:15 from l1(swp1) (110.0.0.1)
    (fe80::202:ff:fe00:15) (used)
    Origin IGP, metric 0, valid, external, multipath, bestpath-from-AS 65001, best_
  ←(Older Path)
    Extended Community: LB:65001:625000000 (500.000 Mbps)
    Last update: Thu Feb 20 18:22:34 2020

```

The weights associated with the next hops of a route can be seen by querying the RIB for a specific route.

For example, the next hop weights corresponding to the link bandwidths in the above example is illustrated below:

```
spine1# show ip route 192.168.10.1/32
Routing entry for 192.168.10.1/32
  Known via "bgp", distance 20, metric 0, best
  Last update 00:00:32 ago
  * fe80::202:ff:fe00:1b, via swp2, weight 66
  * fe80::202:ff:fe00:15, via swp1, weight 33
```

For troubleshooting, existing debug logs `debug bgp updates`, `debug bgp bestpath <prefix>`, `debug bgp zebra` and `debug zebra kernel` can be used.

A debug log snippet when `debug bgp zebra` is enabled and a route is installed by BGP in the RIB with next hop weights is shown below:

```
2020-02-29T06:26:19.927754+00:00 leaf1 bgpd[5459]: bgp_zebra_announce: p=192.168.150.1/
↳32, bgp_is_valid_label: 0
2020-02-29T06:26:19.928096+00:00 leaf1 bgpd[5459]: Tx route add VRF 33 192.168.150.1/32_
↳metric 0 tag 0 count 2
2020-02-29T06:26:19.928289+00:00 leaf1 bgpd[5459]:   nhop [1]: 110.0.0.6 if 35 VRF 33 wt_
↳50   RMAC 0a:11:2f:7d:35:20
2020-02-29T06:26:19.928479+00:00 leaf1 bgpd[5459]:   nhop [2]: 110.0.0.5 if 35 VRF 33 wt_
↳50   RMAC 32:1e:32:a3:6c:bf
2020-02-29T06:26:19.928668+00:00 leaf1 bgpd[5459]: bgp_zebra_announce: 192.168.150.1/32:_
↳announcing to zebra (recursion NOT set)
```

References

BGP fast-convergence support

Whenever BGP peer address becomes unreachable we must bring down the BGP session immediately. Currently only single-hop EBGP sessions are brought down immediately. IBGP and multi-hop EBGP sessions wait for hold-timer expiry to bring down the sessions.

This new configuration option helps user to teardown BGP sessions immediately whenever peer becomes unreachable.

bgp fast-convergence

This configuration is available at the `bgp` level. When enabled, configuration is applied to all the neighbors configured in that `bgp` instance.

```
router bgp 64496
  neighbor 10.0.0.2 remote-as 64496
  neighbor fd00::2 remote-as 64496
  bgp fast-convergence
  !
address-family ipv4 unicast
  redistribute static
exit-address-family
!
address-family ipv6 unicast
```

(continues on next page)

(continued from previous page)

```
neighbor fd00::2 activate
exit-address-family
```

1.4.3 LDP

The *ldpd* daemon is a standardised protocol that permits exchanging MPLS label information between MPLS devices. The LDP protocol creates peering between devices, so as to exchange that label information. This information is stored in MPLS table of *zebra*, and it injects that MPLS information in the underlying system (Linux kernel or OpenBSD system for instance). *ldpd* provides necessary options to create a Layer 2 VPN across MPLS network. For instance, it is possible to interconnect several sites that share the same broadcast domain.

FRR implements LDP as described in [RFC 5036](#); other LDP standard are the following ones: [RFC 6720](#), [RFC 6667](#), [RFC 5919](#), [RFC 5561](#), [RFC 7552](#), [RFC 4447](#). Because MPLS is already available, FRR also supports [RFC 3031](#).

Understanding LDP principles

Let's first introduce some definitions that permit understand better the LDP protocol:

- **LSR** : Labeled Switch Router. Networking devices handling labels used to forward traffic between and through them.
- **LER**
[Labeled Edge Router. A Labeled edge router is located at the edge of] an MPLS network, generally between an IP network and an MPLS network.

LDP aims at sharing label information across devices. It tries to establish peering with remote LDP capable devices, first by discovering using UDP port 646 , then by peering using TCP port 646. Once the TCP session is established, the label information is shared, through label advertisements.

There are different methods to send label advertisement modes. The implementation actually supports the following : Liberal Label Retention + Downstream Unsolicited + Independent Control. The other advertising modes are depicted below, and compared with the current implementation.

- Liberal label retention versus conservative mode In liberal mode, every label sent by every LSR is stored in the MPLS table. In conservative mode, only the label that was sent by the best next hop (determined by the IGP metric) for that particular FEC is stored in the MPLS table.
- Independent LSP Control versus ordered LSP Control MPLS has two ways of binding labels to FEC's; either through ordered LSP control, or independent LSP control. Ordered LSP control only binds a label to a FEC if it is the egress LSR, or the router received a label binding for a FEC from the next hop router. In this mode, an MPLS router will create a label binding for each FEC and distribute it to its neighbors so long as he has a entry in the RIB for the destination. In the other mode, label bindings are made without any dependencies on another router advertising a label for a particular FEC. Each router makes it own independent decision to create a label for each FEC. By default IOS uses Independent LSP Control, while Juniper implements the Ordered Control. Both modes are interoperable, the difference is that Ordered Control prevent blackholing during the LDP convergence process, at cost of slowing down the convergence itself
- unsolicited downstream versus downstream on demand Downstream on demand label distribution is where an LSR must explicitly request that a label be sent from its downstream router for a particular FEC. Unsolicited label distribution is where a label is sent from the downstream router without the original router requesting it.

LDP Configuration

mpls ldp

Enable or disable LDP daemon

router-id A.B.C.D

The following command located under MPLS router node configures the MPLS router-id of the local device.

ordered-control

Configure LDP Ordered Label Distribution Control.

address-family [ipv4 | ipv6]

Configure LDP for IPv4 or IPv6 address-family. Located under MPLS route node, this subnode permits configuring the LDP neighbors.

interface IFACE

Located under MPLS address-family node, use this command to enable or disable LDP discovery per interface. IFACE stands for the interface name where LDP is enabled. By default it is disabled. Once this command executed, the address-family interface node is configured.

discovery transport-address A.B.C.D | A:B::C:D

Located under mpls address-family interface node, use this command to set the IPv4 or IPv6 transport-address used by the LDP protocol to talk on this interface.

neighbor A.B.C.D password PASSWORD

The following command located under MPLS router node configures the router of a LDP device. This device, if found, will have to comply with the configured password. PASSWORD is a clear text password with its digest sent through the network.

neighbor A.B.C.D holdtime HOLDTIME

The following command located under MPLS router node configures the holdtime value in seconds of the LDP neighbor ID. Configuring it triggers a keepalive mechanism. That value can be configured between 15 and 65535 seconds. After this time of non response, the LDP established session will be considered as set to down. By default, no holdtime is configured for the LDP devices.

discovery hello holdtime HOLDTIME

discovery hello interval INTERVAL

INTERVAL value ranges from 1 to 65535 seconds. Default value is 5 seconds. This is the value between each hello timer message sent. HOLDTIME value ranges from 1 to 65535 seconds. Default value is 15 seconds. That value is added as a TLV in the LDP messages.

dual-stack transport-connection prefer ipv4

When *ldpd* is configured for dual-stack operation, the transport connection preference is IPv6 by default (as specified by [RFC 7552](#)). On such circumstances, *ldpd* will refuse to establish TCP connections over IPv4. You can use above command to change the transport connection preference to IPv4. In this case, it will be possible to distribute label mappings for IPv6 FECs over TCPv4 connections.

Show LDP Information

These commands dump various parts of *ldpd*.

show mpls ldp neighbor [A.B.C.D]

This command dumps the various neighbors discovered. Below example shows that local machine has an operation neighbor with ID set to 1.1.1.1.

```
west-vm# show mpls ldp neighbor
AF  ID                State      Remote Address  Uptime
ipv4 1.1.1.1            OPERATIONAL 1.1.1.1        00:01:37
west-vm#
```

show mpls ldp neighbor [A.B.C.D] capabilities

show mpls ldp neighbor [A.B.C.D] detail

Above commands dump other neighbor information.

show mpls ldp discovery [detail]

show mpls ldp ipv4 discovery [detail]

show mpls ldp ipv6 discovery [detail]

Above commands dump discovery information.

show mpls ldp ipv4 interface

show mpls ldp ipv6 interface

Above command dumps the IPv4 or IPv6 interface per where LDP is enabled. Below output illustrates what is dumped for IPv4.

```
west-vm# show mpls ldp ipv4 interface
AF  Interface  State  Uptime  Hello Timers  ac
ipv4 eth1     ACTIVE 00:08:35 5/15      0
ipv4 eth3     ACTIVE 00:08:35 5/15      1
```

show mpls ldp ipv4|ipv6 binding

Above command dumps the binding obtained through MPLS exchanges with LDP.

```
west-vm# show mpls ldp ipv4 binding
AF  Destination      Nexthop      Local Label  Remote Label  In Use
ipv4 1.1.1.1/32        1.1.1.1      16           imp-null      yes
ipv4 2.2.2.2/32        1.1.1.1      imp-null     16            no
ipv4 10.0.2.0/24       1.1.1.1      imp-null     imp-null      no
ipv4 10.115.0.0/24     1.1.1.1      imp-null     17            no
ipv4 10.135.0.0/24    1.1.1.1      imp-null     imp-null      no
ipv4 10.200.0.0/24    1.1.1.1      17           imp-null      yes
west-vm#
```

LDP debugging commands

debug mpls ldp KIND

Enable or disable debugging messages of a given kind. KIND can be one of:

- discovery
- errors
- event
- labels
- messages
- zebra

LDP Example Configuration

Below configuration gives a typical MPLS configuration of a device located in a MPLS backbone. LDP is enabled on two interfaces and will attempt to peer with two neighbors with router-id set to either 1.1.1.1 or 3.3.3.3.

```
mpls ldp
router-id 2.2.2.2
neighbor 1.1.1.1 password test
neighbor 3.3.3.3 password test
!
address-family ipv4
discovery transport-address 2.2.2.2
!
interface eth1
!
interface eth3
!
exit-address-family
!
```

Deploying LDP across a backbone generally is done in a full mesh configuration topology. LDP is typically deployed with an IGP like OSPF, that helps discover the remote IPs. Below example is an OSPF configuration extract that goes with LDP configuration

```
router ospf
ospf router-id 2.2.2.2
network 0.0.0.0/0 area 0
!
```

Below output shows the routing entry on the LER side. The OSPF routing entry (10.200.0.0) is associated with Label entry (17), and shows that MPLS push action that traffic to that destination will be applied.

```
north-vm# show ip route
Codes: K - kernel route, C - connected, S - static, R - RIP,
O - OSPF, I - IS-IS, B - BGP, E - EIGRP, N - NHRP,
T - Table, v - VNC, V - VNC-Direct, A - Babel, D - SHARP,
F - PBR,
> - selected route, * - FIB route
```

(continues on next page)

(continued from previous page)

```

O>* 1.1.1.1/32 [110/120] via 10.115.0.1, eth2, label 16, 00:00:15
O>* 2.2.2.2/32 [110/20] via 10.115.0.1, eth2, label implicit-null, 00:00:15
O 3.3.3.3/32 [110/10] via 0.0.0.0, loopback1 onlink, 00:01:19
C>* 3.3.3.3/32 is directly connected, loopback1, 00:01:29
O>* 10.0.2.0/24 [110/11] via 10.115.0.1, eth2, label implicit-null, 00:00:15
O 10.100.0.0/24 [110/10] is directly connected, eth1, 00:00:32
C>* 10.100.0.0/24 is directly connected, eth1, 00:00:32
O 10.115.0.0/24 [110/10] is directly connected, eth2, 00:00:25
C>* 10.115.0.0/24 is directly connected, eth2, 00:00:32
O>* 10.135.0.0/24 [110/110] via 10.115.0.1, eth2, label implicit-null, 00:00:15
O>* 10.200.0.0/24 [110/210] via 10.115.0.1, eth2, label 17, 00:00:15
north-vm#

```

Additional example demonstrating use of some miscellaneous config options:

```

interface ge0
!
interface ge1
!
interface loopback0
!
mpls ldp
dual-stack cisco-interop
neighbor 10.0.1.5 password opensourcerouting
neighbor 172.16.0.1 password opensourcerouting
!
address-family ipv4
discovery transport-address 10.0.1.1
label local advertise explicit-null
!
interface ge0
!
interface ge1
!
!
address-family ipv6
discovery transport-address 2001:db8::1
!
interface ge1
!
!
!
l2vpn ENG type vpls
!
member pseudowire mpls-tunnel1
neighbor lsr-id 1.1.1.1
pw-id 100
!
!

```

1.4.4 EIGRP

DUAL

The *Diffusing Update ALgorithm*, a Bellman-Ford based routing algorithm used by EIGRP.

EIGRP – Routing Information Protocol is widely deployed interior gateway routing protocol. EIGRP was developed in the 1990's. EIGRP is a distance-vector protocol and is based on the *DUAL* algorithms. As a distance-vector protocol, the EIGRP router send updates to its neighbors as networks change, thus allowing the convergence to a known topology.

eigrpd supports EIGRP as described in RFC7868

eigrpd invocation options. Common options that can be specified (common-invocation-options).

EIGRP Configuration

router eigrp (1-65535) [vrf NAME]

The *router eigrp* command is necessary to enable EIGRP. To disable EIGRP, use the *no router eigrp (1-65535)* command. EIGRP must be enabled before carrying out any of the EIGRP commands. Specify vrf NAME if you want eigrp to work within the specified vrf.

network NETWORK

Set the EIGRP enable interface by *network*. The interfaces which have addresses matching with *network* are enabled.

This group of commands either enables or disables EIGRP interfaces between certain numbers of a specified network address. For example, if the network for 10.0.0.0/24 is EIGRP enabled, this would result in all the addresses from 10.0.0.0 to 10.0.0.255 being enabled for EIGRP. The *no network* command will disable EIGRP for the specified network.

Below is very simple EIGRP configuration. Interface *eth0* and interface which address match to *10.0.0.0/8* are EIGRP enabled.

```
!  
router eigrp 1  
  network 10.0.0.0/8  
!
```

passive-interface (IFNAME|default)

This command sets the specified interface to passive mode. On passive mode interface, all receiving packets are ignored and *eigrpd* does not send either multicast or unicast EIGRP packets except to EIGRP neighbors specified with *neighbor* command. The interface may be specified as *default* to make *eigrpd* default to passive on all interfaces.

The default is to be passive on all interfaces.

How to Announce EIGRP route

Redistribute routes into EIGRP:

redistribute <bgp|connected|isis|kernel|ospf|rip|static|table> [metric (1-4294967295) (0-4294967295) (0-

The *redistribute* family of commands imports routing information from other sources into EIGRP's tables. Redistribution may be disabled with the *no* form of the commands.

Note that connected routes on interfaces EIGRP is enabled on are announced by default.

Optionally, various EIGRP metrics may be specified. These metrics will be applied to the imported routes.

Show EIGRP Information

show ip eigrp [vrf NAME] topology

Display current EIGRP status.

```
eigrpd> **show ip eigrp topology**
# show ip eigrp topo

EIGRP Topology Table for AS(4)/ID(0.0.0.0)

Codes: P - Passive, A - Active, U - Update, Q - Query, R - Reply
       r - reply Status, s - sia Status

P 10.0.2.0/24, 1 successors, FD is 256256, serno: 0
   via Connected, enp0s3
```

show ip eigrp [vrf NAME] interface

Display the list of interfaces associated with a particular eigrp instance.

show ip eigrp [vrf NAME] neighbor

Display the list of neighbors that have been established within a particular eigrp instance.

EIGRP Debug Commands

Debug for EIGRP protocol.

debug eigrp packets

Debug eigrp packets

debug eigrp will show EIGRP packets that are sent and received.

debug eigrp transmit

Debug eigrp transmit events

debug eigrp transmit will display detailed information about the EIGRP transmit events.

show debugging eigrp

Display *eigrpd*'s debugging option.

show debugging eigrp will show all information currently set for eigrpd debug.

1.4.5 ISIS

ISIS (Intermediate System to Intermediate System) is a routing protocol which is described in *ISO10589*, **RFC 1195**, **RFC 5308**. ISIS is an IGP (Interior Gateway Protocol). Compared with RIP, ISIS can provide scalable network support and faster convergence times like OSPF. ISIS is widely used in large networks such as ISP (Internet Service Provider) and carrier backbone networks.

Configuring isisd

There are no *isisd* specific options. Common options can be specified (common-invocation-options) to *isisd*. *isisd* needs to acquire interface information from *zebra* in order to function. Therefore *zebra* must be running before invoking *isisd*. Also, if *zebra* is restarted then *isisd* must be too.

ISIS router

To start the ISIS process you have to specify the ISIS router. As of this writing, *isisd* does not support multiple ISIS processes.

router isis WORD [vrf NAME]

Enable or disable the ISIS process by specifying the ISIS domain with 'WORD'. *isisd* does not yet support multiple ISIS processes but you must specify the name of ISIS process. The ISIS process name 'WORD' is then used for interface (see command `ip router isis WORD`).

net XX.XXXX.XXX.XX

Set/Unset network entity title (NET) provided in ISO format.

hostname dynamic

Enable support for dynamic hostname.

area-password [clear | md5] <password>

domain-password [clear | md5] <password>

Configure the authentication password for an area, respectively a domain, as clear text or md5 one.

attached-bit [receive ignore | send]

Set attached bit for inter-area traffic:

- receive If LSP received with attached bit set, create default route to neighbor
- send If L1/L2 router, set attached bit in LSP sent to L1 router

log-adjacency-changes

Log changes in adjacency state.

metric-style [narrow | transition | wide]

Set old-style (ISO 10589) or new-style packet formats:

- narrow Use old style of TLVs with narrow metric
- transition Send and accept both styles of TLVs during transition
- wide Use new style of TLVs to carry wider metric. SoodarOS uses this as a default value

set-overload-bit

Set overload bit to avoid any transit traffic.

purge-originator

Enable or disable [RFC 6232](#) purge originator identification.

lsp-mtu (128-4352)

Configure the maximum size of generated LSPs, in bytes.

ISIS Timer

lsp-gen-interval [**level-1** | **level-2**] (1-120)

Set minimum interval in seconds between regenerating same LSP, globally, for an area (level-1) or a domain (level-2).

lsp-refresh-interval [**level-1** | **level-2**] (1-65235)

Set LSP refresh interval in seconds, globally, for an area (level-1) or a domain (level-2).

max-lsp-lifetime [**level-1** | **level-2**] (360-65535)

Set LSP maximum LSP lifetime in seconds, globally, for an area (level-1) or a domain (level-2).

spf-interval [**level-1** | **level-2**] (1-120)

Set minimum interval between consecutive SPF calculations in seconds.

ISIS region

is-type [**level-1** | **level-1-2** | **level-2-only**]

Define the ISIS router behavior:

- level-1 Act as a station router only
- level-1-2 Act as both a station router and an area router
- level-2-only Act as an area router only

ISIS interface

<ip|ipv6> router isis WORD

Activate ISIS adjacency on this interface. Note that the name of ISIS instance must be the same as the one used to configure the ISIS process (see command `router isis WORD`). To enable IPv4, issue `ip router isis WORD`; to enable IPv6, issue `ipv6 router isis WORD`.

isis circuit-type [**level-1** | **level-1-2** | **level-2**]

Configure circuit type for interface:

- level-1 Level-1 only adjacencies are formed
- level-1-2 Level-1-2 adjacencies are formed
- level-2-only Level-2 only adjacencies are formed

isis csnp-interval (1-600) [**level-1** | **level-2**]

Set CSNP interval in seconds globally, for an area (level-1) or a domain (level-2).

isis hello padding

Add padding to IS-IS hello packets.

isis hello-interval (1-600) [**level-1** | **level-2**]

Set Hello interval in seconds globally, for an area (level-1) or a domain (level-2).

isis hello-multiplier (2-100) [**level-1** | **level-2**]

Set multiplier for Hello holding time globally, for an area (level-1) or a domain (level-2).

isis metric [(0-255) | (0-16777215)] [**level-1** | **level-2**]

Set default metric value globally, for an area (level-1) or a domain (level-2). Max value depend if metric support narrow or wide value (see command `metric-style [narrow | transition | wide]`).

isis network point-to-point

Set network type to 'Point-to-Point' (broadcast by default).

isis passive

Configure the passive mode for this interface.

isis password [clear | md5] <password>

Configure the authentication password (clear or encoded text) for the interface.

isis priority (0-127) [level-1 | level-2]

Set priority for Designated Router election, globally, for the area (level-1) or the domain (level-2).

isis psnp-interval (1-120) [level-1 | level-2]

Set PSNP interval in seconds globally, for an area (level-1) or a domain (level-2).

isis three-way-handshake

Enable or disable **RFC 5303** Three-Way Handshake for P2P adjacencies. Three-Way Handshake is enabled by default.

Showing ISIS information

show isis summary

Show summary information about ISIS.

show isis hostname

Show information about ISIS node.

show isis interface [detail] [IFNAME]

Show state and configuration of ISIS specified interface, or all interfaces if no interface is given with or without details.

show isis neighbor [detail] [SYSTEMID]

Show state and information of ISIS specified neighbor, or all neighbors if no system id is given with or without details.

show isis database [detail] [LSPID]

Show the ISIS database globally, for a specific LSP id without or with details.

show isis topology [level-1|level-2]

Show topology IS-IS paths to Intermediate Systems, globally, in area (level-1) or domain (level-2).

show isis route [level-1|level-2] [prefix-sid|backup]

Show the ISIS routing table, as determined by the most recent SPF calculation.

Debugging ISIS

debug isis adj-packets

IS-IS Adjacency related packets.

debug isis checksum-errors

IS-IS LSP checksum errors.

debug isis events

IS-IS Events.

debug isis local-updates

IS-IS local update packets.

debug isis packet-dump

IS-IS packet dump.

debug isis protocol-errors

IS-IS LSP protocol errors.

debug isis route-events

IS-IS Route related events.

debug isis snp-packets

IS-IS CSNP/PSNP packets.

debug isis spf-events**debug isis spf-statistics****debug isis spf-triggers**

IS-IS Shortest Path First Events, Timing and Statistic Data and triggering events.

debug isis update-packets

Update related packets.

show debugging isis

Print which ISIS debug level is activate.

ISIS Configuration Examples

A simple example, with MD5 authentication enabled:

```
!
interface eth0
 ip router isis F00
 isis network point-to-point
 isis circuit-type level-2-only
!
router isis F00
net 47.0023.0000.0000.0000.0000.0000.0000.1900.0004.00
 metric-style wide
 is-type level-2-only
```

ISIS Vrf Configuration Examples

A simple vrf example:

```
!
interface ge0 vrf RED
 ip vrf forwarding RED
 ip router isis F00 vrf RED
 isis network point-to-point
 isis circuit-type level-2-only
!
```

(continues on next page)

(continued from previous page)

```
router isis F00 vrf RED
net 47.0023.0000.0000.0000.0000.0000.0000.1900.0004.00
metric-style wide
is-type level-2-only
```

1.4.6 OSPFv2

OSPF (Open Shortest Path First) version 2 is a routing protocol which is described in [RFC 2328](#). OSPF is an IGP. Compared with RIP, OSPF can provide scalable network support and faster convergence times. OSPF is widely used in large networks such as ISP backbone and enterprise networks.

OSPF Fundamentals

OSPF is, mostly, a link-state routing protocol. In contrast to distance-vector protocols, such as RIP or BGP, where routers describe available *paths* (i.e. routes) to each other, in link-state protocols routers instead describe the state of their links to their immediate neighbouring routers.

Each router describes their link-state information in a message known as an LSA (Link State Advertisement), which is then propagated through to all other routers in a link-state routing domain, by a process called *flooding*. Each router thus builds up an LSDB (Link State Database) of all the link-state messages. From this collection of LSAs in the LSDB, each router can then calculate the shortest path to any other router, based on some common metric, by using an algorithm such as [Edsger Dijkstra's SPF](#) (Shortest Path First) algorithm.

By describing connectivity of a network in this way, in terms of routers and links rather than in terms of the paths through a network, a link-state protocol can use less bandwidth and converge more quickly than other protocols. A link-state protocol need distribute only one link-state message throughout the link-state domain when a link on any single given router changes state, in order for all routers to reconverge on the best paths through the network. In contrast, distance vector protocols can require a progression of different path update messages from a series of different routers in order to converge.

The disadvantage to a link-state protocol is that the process of computing the best paths can be relatively intensive when compared to distance-vector protocols, in which near to no computation need be done other than (potentially) select between multiple routes. This overhead is mostly negligible for modern embedded CPUs, even for networks with thousands of nodes. The primary scaling overhead lies more in coping with the ever greater frequency of LSA updates as the size of a link-state area increases, in managing the LSDB and required flooding.

This section aims to give a distilled, but accurate, description of the more important workings of OSPF which an administrator may need to know to be able best configure and trouble-shoot OSPF.

OSPF Mechanisms

OSPF defines a range of mechanisms, concerned with detecting, describing and propagating state through a network. These mechanisms will nearly all be covered in greater detail further on. They may be broadly classed as:

The Hello Protocol

The OSPF Hello protocol allows OSPF to quickly detect changes in two-way reachability between routers on a link. OSPF can additionally avail of other sources of reachability information, such as link-state information provided by hardware, or through dedicated reachability protocols such as BFD.

OSPF also uses the Hello protocol to propagate certain state between routers sharing a link, for example:

- Hello protocol configured state, such as the dead-interval.
- Router priority, for DR/BDR election.
- DR/BDR election results.
- Any optional capabilities supported by each router.

The Hello protocol is comparatively trivial and will not be explored in more detail.

LSAs

At the heart of OSPF are LSA messages. Despite the name, some LSA s do not, strictly speaking, describe link-state information. Common LSA s describe information such as:

- Routers, in terms of their links.
- Networks, in terms of attached routers.
- Routes, external to a link-state domain:

External Routes

Routes entirely external to OSPF. Routers originating such routes are known as ASBR (Autonomous-System Border Router) routers.

Summary Routes

Routes which summarise routing information relating to OSPF areas external to the OSPF link-state area at hand, originated by ABR (Area Boundary Router) routers.

LSA Flooding

OSPF defines several related mechanisms, used to manage synchronisation of LSDB s between neighbours as neighbours form adjacencies and the propagation, or *flooding* of new or updated LSA s.

Areas

OSPF provides for the protocol to be broken up into multiple smaller and independent link-state areas. Each area must be connected to a common backbone area by an ABR. These ABR routers are responsible for summarising the link-state routing information of an area into *Summary LSAs*, possibly in a condensed (i.e. aggregated) form, and then originating these summaries into all other areas the ABR is connected to.

Note that only summaries and external routes are passed between areas. As these describe *paths*, rather than any router link-states, routing between areas hence is by distance-vector, **not** link-state.

OSPF LSAs

The core objects in OSPF are LSAs. Everything else in OSPF revolves around detecting what to describe in LSAs, when to update them, how to flood them throughout a network and how to calculate routes from them.

There are a variety of different LSAs, for purposes such as describing actual link-state information, describing paths (i.e. routes), describing bandwidth usage of links for TE (Traffic Engineering) purposes, and even arbitrary data by way of *Opaque* LSAs.

LSA Header

All LSAs share a common header with the following information:

- Type

Different types of LSAs describe different things in OSPF. Types include:

- Router LSA
- Network LSA
- Network Summary LSA
- Router Summary LSA
- AS-External LSA

The specifics of the different types of LSA are examined below.

- Advertising Router

The Router ID of the router originating the LSA.

See also:

`ospf router-id A.B.C.D.`

- LSA ID

The ID of the LSA, which is typically derived in some way from the information the LSA describes, e.g. a Router LSA uses the Router ID as the LSA ID, a Network LSA will have the IP address of the DR as its LSA ID.

The combination of the Type, ID and Advertising Router ID must uniquely identify the LSA. There can however be multiple instances of an LSA with the same Type, LSA ID and Advertising Router ID, see *sequence number*.

- Age

A number to allow stale LSAs to, eventually, be purged by routers from their LSDBs.

The value nominally is one of seconds. An age of 3600, i.e. 1 hour, is called the *MaxAge*. MaxAge LSAs are ignored in routing calculations. LSAs must be periodically refreshed by their Advertising Router before reaching MaxAge if they are to remain valid.

Routers may deliberately flood LSAs with the age artificially set to 3600 to indicate an LSA is no longer valid. This is called *flushing* of an LSA.

It is not abnormal to see stale LSAs in the LSDB, this can occur where a router has shutdown without flushing its LSA(s), e.g. where it has become disconnected from the network. Such LSAs do little harm.

- Sequence Number

A number used to distinguish newer instances of an LSA from older instances.

Link-State LSAs

Of all the various kinds of LSAs, just two types comprise the actual link-state part of OSPF, Router LSAs and Network LSAs. These LSA types are absolutely core to the protocol.

Instances of these LSAs are specific to the link-state area in which they are originated. Routes calculated from these two LSA types are called *intra-area routes*.

- Router LSA

Each OSPF Router must originate a router LSA to describe itself. In it, the router lists each of its OSPF enabled interfaces, for the given link-state area, in terms of:

Cost

The output cost of that interface, scaled inversely to some commonly known reference value, *auto-cost reference-bandwidth (1-4294967)*.

Link Type

Transit Network

A link to a multi-access network, on which the router has at least one Full adjacency with another router.

PtP (Point-to-Point)

A link to a single remote router, with a Full adjacency. No DR (Designated Router) is elected on such links; no network LSA is originated for such a link.

Stub

A link with no adjacent neighbours, or a host route.

- Link ID and Data

These values depend on the Link Type:

Link Type	Link ID	Link Data
Transit	Link IP address of the DR	Interface IP address
Point-to-Point	Router ID of the remote router	Local interface IP address, or the IFINDEX (MIB-II interface index) for unnumbered links
Stub	IP address	Subnet Mask

Links on a router may be listed multiple times in the Router LSA, e.g. a PtP interface on which OSPF is enabled must *always* be described by a Stub link in the Router LSA, in addition to being listed as PtP link in the Router LSA if the adjacency with the remote router is Full.

Stub links may also be used as a way to describe links on which OSPF is *not* spoken, known as *passive interfaces*, see *ip ospf passive [A.B.C.D]*.

- Network LSA

On multi-access links (e.g. ethernet, certain kinds of ATM and X.25 configurations), routers elect a DR. The DR is responsible for originating a Network LSA, which helps reduce the information needed to describe multi-access networks with multiple routers attached. The DR also acts as a hub for the flooding of LSAs on that link, thus reducing flooding overheads.

The contents of the Network LSA describes the:

- Subnet Mask

As the LSA ID of a Network LSA must be the IP address of the DR, the Subnet Mask together with the LSA ID gives you the network address.

– Attached Routers

Each router fully-adjacent with the DR is listed in the LSA, by their Router-ID. This allows the corresponding Router LSAs to be easily retrieved from the LSDB.

Summary of Link State LSAs:

LSA Type	LSA ID	LSA Data Describes
Router LSA	Router ID	The OSPF enabled links of the router, within a specific link-state area.
Network LSA	The IP address of the DR for the network	The subnet mask of the network and the Router IDs of all routers on the network

With an LSDB composed of just these two types of LSA, it is possible to construct a directed graph of the connectivity between all routers and networks in a given OSPF link-state area. So, not surprisingly, when OSPF routers build updated routing tables, the first stage of SPF calculation concerns itself only with these two LSA types.

Link-State LSA Examples

The example below shows two LSAs, both originated by the same router (Router ID 192.168.0.49) and with the same LSA ID (192.168.0.49), but of different LSA types.

The first LSA being the router LSA describing 192.168.0.49's links: 2 links to multi-access networks with fully-adjacent neighbours (i.e. Transit links) and 1 being a Stub link (no adjacent neighbours).

The second LSA being a Network LSA, for which 192.168.0.49 is the DR, listing the Router IDs of 4 routers on that network which are fully adjacent with 192.168.0.49.

```
# show ip ospf database router 192.168.0.49

      OSPF Router with ID (192.168.0.53)

          Router Link States (Area 0.0.0.0)

LS age: 38
Options: 0x2 : *|---|---|E|*
LS Flags: 0x6
Flags: 0x2 : ASBR
LS Type: router-LSA
Link State ID: 192.168.0.49
Advertising Router: 192.168.0.49
LS Seq Number: 80000f90
Checksum: 0x518b
Length: 60
  Number of Links: 3

Link connected to: a Transit Network
(Link ID) Designated Router address: 192.168.1.3
(Link Data) Router Interface address: 192.168.1.3
  Number of TOS metrics: 0
```

(continues on next page)

(continued from previous page)

```

TOS 0 Metric: 10

Link connected to: a Transit Network
(Link ID) Designated Router address: 192.168.0.49
(Link Data) Router Interface address: 192.168.0.49
Number of TOS metrics: 0
TOS 0 Metric: 10

Link connected to: Stub Network
(Link ID) Net: 192.168.3.190
(Link Data) Network Mask: 255.255.255.255
Number of TOS metrics: 0
TOS 0 Metric: 39063
# show ip ospf database network 192.168.0.49

OSPF Router with ID (192.168.0.53)

Net Link States (Area 0.0.0.0)

LS age: 285
Options: 0x2 : *|---|---|E|*
LS Flags: 0x6
LS Type: network-LSA
Link State ID: 192.168.0.49 (address of Designated Router)
Advertising Router: 192.168.0.49
LS Seq Number: 80000074
Checksum: 0x0103
Length: 40
Network Mask: /29
Attached Router: 192.168.0.49
Attached Router: 192.168.0.52
Attached Router: 192.168.0.53
Attached Router: 192.168.0.54

```

Note that from one LSA, you can find the other. E.g. Given the Network-LSA you have a list of Router IDs on that network, from which you can then look up, in the local LSDB, the matching Router LSA. From that Router-LSA you may (potentially) find links to other Transit networks and Routers IDs which can be used to lookup the corresponding Router or Network LSA. And in that fashion, one can find all the Routers and Networks reachable from that starting LSA.

Given the Router LSA instead, you have the IP address of the DR of any attached transit links. Network LSAs will have that IP as their LSA ID, so you can then look up that Network LSA and from that find all the attached routers on that link, leading potentially to more links and Network and Router LSAs, etc. etc.

From just the above two LSA s, one can already see the following partial topology:


```

----- Network: .....
          |
          | Designated Router IP: 192.168.1.3
          |
          |
          | IP: 192.168.1.3
          | (transit link)
          | (cost: 10)
          |
Router ID: 192.168.0.49(stub)----- IP: 192.168.3.190/32

```

(continues on next page)

(continued from previous page)

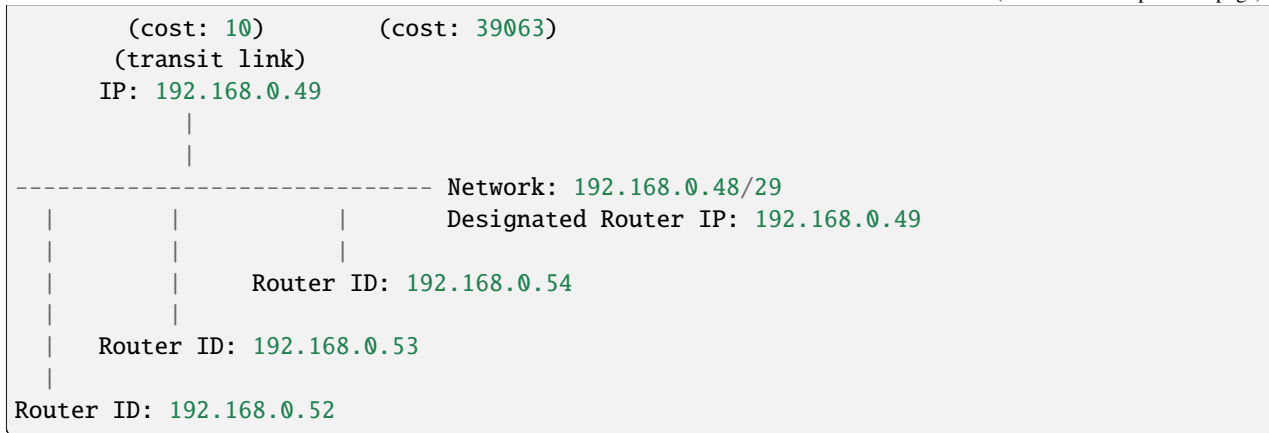

Note the Router IDs, though they look like IP addresses and often are IP addresses, are not strictly speaking IP addresses, nor need they be reachable addresses (though, OSPF will calculate routes to Router IDs).

External LSAs

External, or “Type 5”, LSAs describe routing information which is entirely external to OSPF, and is “injected” into OSPF. Such routing information may have come from another routing protocol, such as RIP or BGP, they may represent static routes or they may represent a default route.

An OSPF router which originates External LSAs is known as an ASBR. Unlike the link-state LSAs, and most other LSAs, which are flooded only within the area in which they originate, External LSAs are flooded throughout the OSPF network to all areas capable of carrying External LSAs (*Areas*).

Routes internal to OSPF (intra-area or inter-area) are always preferred over external routes.

The External LSA describes the following:

IP Network number

The IP Network number of the route is described by the LSA ID field.

IP Network Mask

The body of the External LSA describes the IP Network Mask of the route. This, together with the LSA ID, describes the prefix of the IP route concerned.

Metric

The cost of the External Route. This cost may be an OSPF cost (also known as a “Type 1” metric), i.e. equivalent to the normal OSPF costs, or an externally derived cost (“Type 2” metric) which is not comparable to OSPF costs and always considered larger than any OSPF cost. Where there are both Type 1 and 2 External routes for a route, the Type 1 is always preferred.

Forwarding Address

The address of the router to forward packets to for the route. This may be, and usually is, left as 0 to specify that the ASBR originating the External LSA should be used. There must be an internal OSPF route to the forwarding address, for the forwarding address to be usable.

Tag

An arbitrary 4-bytes of data, not interpreted by OSPF, which may carry whatever information about the route which OSPF speakers desire.

AS External LSA Example

To illustrate, below is an example of an External LSA in the LSDB of an OSPF router. It describes a route to the IP prefix of 192.168.165.0/24, originated by the ASBR with Router-ID 192.168.0.49. The metric of 20 is external to OSPF. The forwarding address is 0, so the route should forward to the originating ASBR if selected.

```
# show ip ospf database external 192.168.165.0
LS age: 995
Options: 0x2 : *|---|---|E|*
LS Flags: 0x9
LS Type: AS-external-LSA
Link State ID: 192.168.165.0 (External Network Number)
Advertising Router: 192.168.0.49
LS Seq Number: 800001d8
Checksum: 0xea27
Length: 36
Network Mask: /24
    Metric Type: 2 (Larger than any link state path)
    TOS: 0
    Metric: 20
    Forward Address: 0.0.0.0
    External Route Tag: 0
```

We can add this to our partial topology from above, which now looks like::

```
----- Network: .....
      |
      | Designated Router IP: 192.168.1.3
      |
      | IP: 192.168.1.3 /---- External route: 192.168.165.0/24
      | (transit link) / Cost: 20 (External metric)
      | (cost: 10) /
Router ID: 192.168.0.49(stub)----- IP: 192.168.3.190/32
      (cost: 10) (cost: 39063)
      (transit link)
      IP: 192.168.0.49
      |
      |----- Network: 192.168.0.48/29
      | Designated Router IP: 192.168.0.49
      |
      | Router ID: 192.168.0.54
      |
      | Router ID: 192.168.0.53
      |
      | Router ID: 192.168.0.52
```

Summary LSAs

Summary LSAs are created by ABR s to summarise the destinations available within one area to other areas. These LSAs may describe IP networks, potentially in aggregated form, or ASBR routers.

Routers

To start OSPF process you have to specify the OSPF router.

router ospf [{(1-65535)|vrf NAME}]

Enable or disable the OSPF process.

Multiple instances don't support *vrf NAME*.

ospf router-id A.B.C.D

This sets the router-ID of the OSPF process. The router-ID may be an IP address of the router, but need not be - it can be any arbitrary 32bit number. However it MUST be unique within the entire OSPF domain to the OSPF speaker - bad things will happen if multiple OSPF speakers are configured with the same router-ID! If one is not specified then *ospfd* will obtain a router-ID automatically from *zebra*.

ospf abr-type TYPE

type can be cisco|ibm|shortcut|standard. The “Cisco” and “IBM” types are equivalent.

The OSPF standard for ABR behaviour does not allow an ABR to consider routes through non-backbone areas when its links to the backbone are down, even when there are other ABRs in attached non-backbone areas which still can reach the backbone - this restriction exists primarily to ensure routing-loops are avoided.

With the “Cisco” or “IBM” ABR type, the default in this release of FRR, this restriction is lifted, allowing an ABR to consider summaries learned from other ABRs through non-backbone areas, and hence route via non-backbone areas as a last resort when, and only when, backbone links are down.

Note that areas with fully-adjacent virtual-links are considered to be “transit capable” and can always be used to route backbone traffic, and hence are unaffected by this setting (*area A.B.C.D virtual-link A.B.C.D*).

More information regarding the behaviour controlled by this command can be found in [RFC 3509](#), and *draft-ietf-ospf-shortcut-abr-02.txt*.

Quote: “Though the definition of the ABR in the OSPF specification does not require a router with multiple attached areas to have a backbone connection, it is actually necessary to provide successful routing to the inter-area and external destinations. If this requirement is not met, all traffic destined for the areas not connected to such an ABR or out of the OSPF domain, is dropped. This document describes alternative ABR behaviors implemented in Cisco and IBM routers.”

ospf rfc1583compatibility

[RFC 2328](#), the successor to [RFC 1583](#), suggests according to section G.2 (changes) in section 16.4 a change to the path preference algorithm that prevents possible routing loops that were possible in the old version of OSPFv2. More specifically it demands that inter-area paths and intra-area backbone path are now of equal preference but still both preferred to external paths.

This command should NOT be set normally.

log-adjacency-changes [detail]

Configures *ospfd* to log changes in adjacency. With the optional detail argument, all changes in adjacency status are shown. Without detail, only changes to full or regressions are shown.

passive-interface default

Make all interfaces that belong to this router passive by default. For the description of passive interface look at *ip ospf passive [A.B.C.D]*. Per-interface configuration takes precedence over the default value.

timers throttle spf (0-600000) (0-600000) (0-600000)

This command sets the initial *delay*, the *initial-holdtime* and the *maximum-holdtime* between when SPF is calculated and the event which triggered the calculation. The times are specified in milliseconds and must be in the range of 0 to 600000 milliseconds.

The *delay* specifies the minimum amount of time to delay SPF calculation (hence it affects how long SPF calculation is delayed after an event which occurs outside of the holdtime of any previous SPF calculation, and also serves as a minimum holdtime).

Consecutive SPF calculations will always be separated by at least ‘hold-time’ milliseconds. The hold-time is adaptive and initially is set to the *initial-holdtime* configured with the above command. Events which occur within the holdtime of the previous SPF calculation will cause the holdtime to be increased by *initial-holdtime*, bounded by the *maximum-holdtime* configured with this command. If the adaptive hold-time elapses without any SPF-triggering event occurring then the current holdtime is reset to the *initial-holdtime*. The current holdtime can be viewed with `show ip ospf`, where it is expressed as a multiplier of the *initial-holdtime*.

```
router ospf
timers throttle spf 200 400 10000
```

In this example, the *delay* is set to 200ms, the initial holdtime is set to 400ms and the *maximum holdtime* to 10s. Hence there will always be at least 200ms between an event which requires SPF calculation and the actual SPF calculation. Further consecutive SPF calculations will always be separated by between 400ms to 10s, the hold-time increasing by 400ms each time an SPF-triggering event occurs within the hold-time of the previous SPF calculation.

This command supersedes the *timers spf* command in previous FRR releases.

max-metric router-lsa [on-startup|on-shutdown] (5-86400)**max-metric router-lsa administrative**

This enables [RFC 3137](#) support, where the OSPF process describes its transit links in its router-LSA as having infinite distance so that other routers will avoid calculating transit paths through the router while still being able to reach networks through the router.

This support may be enabled administratively (and indefinitely) or conditionally. Conditional enabling of max-metric router-lsas can be for a period of seconds after startup and/or for a period of seconds prior to shutdown.

Enabling this for a period after startup allows OSPF to converge fully first without affecting any existing routes used by other routers, while still allowing any connected stub links and/or redistributed routes to be reachable. Enabling this for a period of time in advance of shutdown allows the router to gracefully excuse itself from the OSPF domain.

Enabling this feature administratively allows for administrative intervention for whatever reason, for an indefinite period of time. Note that if the configuration is written to file, this administrative form of the stub-router command will also be written to file. If *ospfd* is restarted later, the command will then take effect until manually deconfigured.

Configured state of this feature as well as current status, such as the number of second remaining till on-startup or on-shutdown ends, can be viewed with the `show ip ospf` command.

auto-cost reference-bandwidth (1-4294967)

This sets the reference bandwidth for cost calculations, where this bandwidth is considered equivalent to an OSPF cost of 1, specified in Mbits/s. The default is 100Mbit/s (i.e. a link of bandwidth 100Mbit/s or higher will have a cost of 1. Cost of lower bandwidth links will be scaled with reference to this cost).

This configuration setting **MUST** be consistent across all routers within the OSPF domain.

network A.B.C.D/M area A.B.C.D

network A.B.C.D/M area (0-4294967295)

This command specifies the OSPF enabled interface(s). If the interface has an address from range 192.168.1.0/24 then the command below enables ospf on this interface so router can provide network information to the other ospf routers via this interface.

```
router ospf
network 192.168.1.0/24 area 0.0.0.0
```

Prefix length in interface must be equal or bigger (i.e. smaller network) than prefix length in network statement. For example statement above doesn't enable ospf on interface with address 192.168.1.1/23, but it does on interface with address 192.168.1.129/25.

Note that the behavior when there is a peer address defined on an interface changed after release 0.99.7. Currently, if a peer prefix has been configured, then we test whether the prefix in the network command contains the destination prefix. Otherwise, we test whether the network command prefix contains the local address prefix of the interface.

In some cases it may be more convenient to enable OSPF on a per interface/subnet basis (*ip ospf area AREA [ADDR]*).

proactive-arp

This command enables or disables sending ARP requests to update neighbor table entries. It speeds up convergence for /32 networks on a P2P connection.

This feature is enabled by default.

clear ip ospf [(1-65535)] process

This command can be used to clear the ospf process data structures. This will clear the ospf neighborhood as well and it will get re-established. This will clear the LSDB too. This will be helpful when there is a change in router-id and if user wants the router-id change to take effect.

clear ip ospf [(1-65535)] neighbor

This command can be used to clear the ospf neighbor data structures. This will clear the ospf neighborhood and it will get re-established. This command can be used when the neighbor state get stuck at some state and this can be used to recover it from that state.

maximum-paths (1-64)

Use this command to control the maximum number of equal cost paths to reach a specific destination. The upper limit may differ if you change the value of MULTIPATH_NUM during compilation. The default is MULTIPATH_NUM (64).

write-multiplier (1-100)

Use this command to tune the amount of work done in the packet read and write threads before relinquishing control. The parameter is the number of packets to process before returning. The default value of this parameter is 20.

Areas

area A.B.C.D range A.B.C.D/M

area (0-4294967295) range A.B.C.D/M

Summarize intra area paths from specified area into one Type-3 summary-LSA announced to other areas. This command can be used only in ABR and ONLY router-LSAs (Type-1) and network-LSAs (Type-2) (i.e. LSAs with scope area) can be summarized. Type-5 AS-external-LSAs can't be summarized - their scope is AS. Summarizing Type-7 AS-external-LSAs isn't supported yet by FRR.

```
router ospf
network 192.168.1.0/24 area 0.0.0.0
network 10.0.0.0/8 area 0.0.0.10
area 0.0.0.10 range 10.0.0.0/8
```

With configuration above one Type-3 Summary-LSA with routing info 10.0.0.0/8 is announced into backbone area if area 0.0.0.10 contains at least one intra-area network (i.e. described with router or network LSA) from this range.

area A.B.C.D range IPV4_PREFIX not-advertise

Instead of summarizing intra area paths filter them - i.e. intra area paths from this range are not advertised into other areas. This command makes sense in ABR only.

area A.B.C.D range IPV4_PREFIX substitute IPV4_PREFIX

Substitute summarized prefix with another prefix.

```
router ospf
network 192.168.1.0/24 area 0.0.0.0
network 10.0.0.0/8 area 0.0.0.10
area 0.0.0.10 range 10.0.0.0/8 substitute 11.0.0.0/8
```

One Type-3 summary-LSA with routing info 11.0.0.0/8 is announced into backbone area if area 0.0.0.10 contains at least one intra-area network (i.e. described with router-LSA or network-LSA) from range 10.0.0.0/8. This command makes sense in ABR only.

area A.B.C.D virtual-link A.B.C.D

area (0-4294967295) virtual-link A.B.C.D

area A.B.C.D shortcut

area (0-4294967295) shortcut

Configure the area as Shortcut capable. See [RFC 3509](#). This requires that the 'abr-type' be set to 'shortcut'.

area A.B.C.D stub

area (0-4294967295) stub

Configure the area to be a stub area. That is, an area where no router originates routes external to OSPF and hence an area where all external routes are via the ABR(s). Hence, ABRs for such an area do not need to pass AS-External LSAs (type-5s) or ASBR-Summary LSAs (type-4) into the area. They need only pass Network-Summary (type-3) LSAs into such an area, along with a default-route summary.

area A.B.C.D stub no-summary

area (0-4294967295) stub no-summary

Prevents an *ospfd* ABR from injecting inter-area summaries into the specified stub area.

area A.B.C.D nssa

area (0-4294967295) nssa

Configure the area to be a NSSA (Not-So-Stubby Area). This is an area that allows OSPF to import external routes into a stub area via a new LSA type (type 7). An NSSA autonomous system boundary router (ASBR) will generate this type of LSA. The area border router (ABR) translates the LSA type 7 into LSA type 5, which is propagated into the OSPF domain. NSSA areas are defined in RFC 3101.

area A.B.C.D nssa suppress-fa

area (0-4294967295) nssa suppress-fa

Configure the router to set the forwarding address to 0.0.0.0 in all LSA type 5 translated from LSA type 7. The router needs to be elected the translator of the area for this command to take effect. This feature causes routers that are configured not to advertise forwarding addresses into the backbone to direct forwarded traffic to the NSSA ABR translator.

area A.B.C.D default-cost (0-16777215)

Set the cost of default-summary LSAs announced to stubby areas.

area A.B.C.D export-list NAME**area (0-4294967295) export-list NAME**

Filter Type-3 summary-LSAs announced to other areas originated from intra- area paths from specified area.

```
router ospf
network 192.168.1.0/24 area 0.0.0.0
network 10.0.0.0/8 area 0.0.0.10
area 0.0.0.10 export-list foo
!
access-list foo permit 10.10.0.0/16
access-list foo deny any
```

With example above any intra-area paths from area 0.0.0.10 and from range 10.10.0.0/16 (for example 10.10.1.0/24 and 10.10.2.128/30) are announced into other areas as Type-3 summary-LSA's, but any others (for example 10.11.0.0/16 or 10.128.30.16/30) aren't.

This command is only relevant if the router is an ABR for the specified area.

area A.B.C.D import-list NAME**area (0-4294967295) import-list NAME**

Same as export-list, but it applies to paths announced into specified area as Type-3 summary-LSAs.

area A.B.C.D filter-list prefix NAME in**area A.B.C.D filter-list prefix NAME out****area (0-4294967295) filter-list prefix NAME in****area (0-4294967295) filter-list prefix NAME out**

Filtering Type-3 summary-LSAs to/from area using prefix lists. This command makes sense in ABR only.

area A.B.C.D authentication**area (0-4294967295) authentication**

Specify that simple password authentication should be used for the given area.

area A.B.C.D authentication message-digest**area (0-4294967295) authentication message-digest**

Specify that OSPF packets must be authenticated with MD5 HMACs within the given area. Keying material must also be configured on a per-interface basis (`ip ospf message-digest-key`).

MD5 authentication may also be configured on a per-interface basis (`ip ospf authentication message-digest`). Such per-interface settings will override any per-area authentication setting.

Interfaces

ip ospf area AREA [ADDR]

Enable OSPF on the interface, optionally restricted to just the IP address given by *ADDR*, putting it in the *AREA* area. Per interface area settings take precedence to network commands (*network A.B.C.D/M area A.B.C.D*).

If you have a lot of interfaces, and/or a lot of subnets, then enabling OSPF via this command may result in a slight performance improvement.

ip ospf authentication-key AUTH_KEY

Set OSPF authentication key to a simple password. After setting *AUTH_KEY*, all OSPF packets are authenticated. *AUTH_KEY* has length up to 8 chars.

Simple text password authentication is insecure and deprecated in favour of MD5 HMAC authentication.

ip ospf authentication message-digest

Specify that MD5 HMAC authentication must be used on this interface. MD5 keying material must also be configured. Overrides any authentication enabled on a per-area basis (*area A.B.C.D authentication message-digest*)

Note that OSPF MD5 authentication requires that time never go backwards (correct time is NOT important, only that it never goes backwards), even across resets, if ospfd is to be able to promptly reestablish adjacencies with its neighbours after restarts/reboots. The host should have system time be set at boot from an external or non-volatile source (e.g. battery backed clock, NTP, etc.) or else the system clock should be periodically saved to non-volatile storage and restored at boot if MD5 authentication is to be expected to work reliably.

ip ospf message-digest-key KEYID md5 KEY

Set OSPF authentication key to a cryptographic password. The cryptographic algorithm is MD5.

KEYID identifies secret key used to create the message digest. This ID is part of the protocol and must be consistent across routers on a link.

KEY is the actual message digest key, of up to 16 chars (larger strings will be truncated), and is associated with the given KEYID.

ip ospf cost (1-65535)

Set link cost for the specified interface. The cost value is set to router-LSA's metric field and used for SPF calculation.

ip ospf dead-interval (1-65535)

ip ospf dead-interval minimal hello-multiplier (2-20)

Set number of seconds for RouterDeadInterval timer value used for Wait Timer and Inactivity Timer. This value must be the same for all routers attached to a common network. The default value is 40 seconds.

If 'minimal' is specified instead, then the dead-interval is set to 1 second and one must specify a hello-multiplier. The hello-multiplier specifies how many Hellos to send per second, from 2 (every 500ms) to 20 (every 50ms). Thus one can have 1s convergence time for OSPF. If this form is specified, then the hello-interval advertised in Hello packets is set to 0 and the hello-interval on received Hello packets is not checked, thus the hello-multiplier need NOT be the same across multiple routers on a common link.

ip ospf hello-interval (1-65535)

Set number of seconds for HelloInterval timer value. Setting this value, Hello packet will be sent every timer value seconds on the specified interface. This value must be the same for all routers attached to a common network. The default value is 10 seconds.

This command has no effect if *ip ospf dead-interval minimal hello-multiplier (2-20)* is also specified for the interface.

When configuring a point-to-point network on an interface and the interface has a /32 address associated with then OSPF will treat the interface as being *unnumbered*.

Set explicitly network type for specified interface.

ip ospf priority (0-255)

Set RouterPriority integer value. The router with the highest priority will be more eligible to become Designated Router. Setting the value to 0, makes the router ineligible to become Designated Router. The default value is 1.

ip ospf retransmit-interval (1-65535)

Set number of seconds for RxmtInterval timer value. This value is used when retransmitting Database Description and Link State Request packets. The default value is 5 seconds.

ip ospf transmit-delay (1-65535) [A.B.C.D]

Set number of seconds for InfTransDelay value. LSAs' age should be incremented by this value when transmitting. The default value is 1 second.

ip ospf passive [A.B.C.D]

Do not speak OSPF on the interface, but do advertise the interface as a stub link in the router-LSA for this router. This allows one to advertise addresses on such connected interfaces without having to originate AS-External/Type-5 LSAs (which have global flooding scope) - as would occur if connected addresses were redistributed into OSPF (*Redistribution*). This is the only way to advertise non-OSPF links into stub areas.

ip ospf area (A.B.C.D) (0-4294967295)

Enable ospf on an interface and set associated area.

OSPF route-map

Usage of *ospfd*'s route-map support.

set metric [+|-] (0-4294967295)

Set a metric for matched route when sending announcement. Use plus (+) sign to add a metric value to an existing metric. Use minus (-) sign to subtract a metric value from an existing metric.

Redistribution

redistribute <bgp|connected|isis|kernel|ospf|rip|static|table> [metric-type (1-2)] [metric (0-16777214)]

Redistribute routes of the specified protocol or kind into OSPF, with the metric type and metric set if specified, filtering the routes using the given route-map if specified. Redistributed routes may also be filtered with distribute-lists, see *ospf distribute-list configuration*.

Redistributed routes are distributed as into OSPF as Type-5 External LSAs into links to areas that accept external routes, Type-7 External LSAs for NSSA areas and are not redistributed at all into Stub areas, where external routes are not permitted.

Note that for connected routes, one may instead use the *ip ospf passive [A.B.C.D]* configuration.

default-information originate

default-information originate metric (0-16777214)

default-information originate metric (0-16777214) metric-type (1|2)

default-information originate metric (0-16777214) metric-type (1|2) route-map WORD

default-information originate always

default-information originate always metric (0-16777214)

default-information originate always metric (0-16777214) metric-type (1|2)

default-information originate always metric (0-16777214) metric-type (1|2) route-map WORD

Originate an AS-External (type-5) LSA describing a default route into all external-routing capable areas, of the specified metric and metric type. If the ‘always’ keyword is given then the default is always advertised, even when there is no default present in the routing table.

distribute-list NAME out <kernel|connected|static|rip|isis|bgp|table>

Apply the access-list filter, NAME, to redistributed routes of the given type before allowing the routes to be redistributed into OSPF (*ospf redistribution*).

default-metric (0-16777214)

distance (1-255)

distance ospf (intra-area|inter-area|external) (1-255)

Graceful Restart

graceful-restart [grace-period (1-1800)]

Configure Graceful Restart (RFC 3623) restarting support. When enabled, the default grace period is 120 seconds.

To perform a graceful shutdown, the “graceful-restart prepare ip ospf” EXEC-level command needs to be issued before restarting the ospfd daemon.

graceful-restart helper enable [A.B.C.D]

Configure Graceful Restart (RFC 3623) helper support. By default, helper support is disabled for all neighbours. This config enables/disables helper support on this router for all neighbours. To enable/disable helper support for a specific neighbour, the router-id (A.B.C.D) has to be specified.

graceful-restart helper strict-lsa-checking

If ‘strict-lsa-checking’ is configured then the helper will abort the Graceful Restart when a LSA change occurs which affects the restarting router. By default ‘strict-lsa-checking’ is enabled”

graceful-restart helper supported-grace-time

Supports as HELPER for configured grace period.

graceful-restart helper planned-only

It helps to support as HELPER only for planned restarts. By default, it supports both planned and unplanned outages.

graceful-restart prepare ip ospf

Initiate a graceful restart for all OSPF instances configured with the “graceful-restart” command. The ospfd daemon should be restarted during the instance-specific grace period, otherwise the graceful restart will fail.

This is an EXEC-level command.

Showing Information

show ip ospf [json]

Show information on a variety of general OSPF and area state and configuration information.

show ip ospf interface [INTERFACE] [json]

Show state and configuration of OSPF the specified interface, or all interfaces if no interface is given.

show ip ospf neighbor [json]

show ip ospf neighbor INTERFACE [json]

show ip ospf neighbor detail [json]

show ip ospf neighbor INTERFACE detail [json]

Display lsa information of LSDB. Json o/p of this command covers base route information i.e all LSAs except opaque lsa info.

show ip ospf [vrf <NAME|all>] database [json]

show ip ospf [vrf <NAME|all>] database (asbr-summary|external|network|router|summary) [json]

show ip ospf [vrf <NAME|all>] database (asbr-summary|external|network|router|summary) LINK-STATE-ID [json]

show ip ospf [vrf <NAME|all>] database (asbr-summary|external|network|router|summary) LINK-STATE-ID adv-router [json]

show ip ospf [vrf <NAME|all>] database (asbr-summary|external|network|router|summary) adv-router ADV-ROUTER [json]

show ip ospf [vrf <NAME|all>] database (asbr-summary|external|network|router|summary) LINK-STATE-ID self-originate [json]

show ip ospf [vrf <NAME|all>] database (asbr-summary|external|network|router|summary) self-originate [json]

show ip ospf [vrf <NAME|all>] database max-age [json]

show ip ospf [vrf <NAME|all>] database self-originate [json]

Show the OSPF database summary.

show ip ospf route [json]

Show the OSPF routing table, as determined by the most recent SPF calculation.

show ip ospf graceful-restart helper [detail] [json]

Displays the Graceful Restart Helper details including helper config changes.

Debugging OSPF

debug ospf bfd

Enable or disable debugging for BFD events. This will show BFD integration library messages and OSPF BFD integration messages that are mostly state transitions and validation problems.

debug ospf packet (hello|dd|ls-request|ls-update|ls-ack|all) (send|recv) [detail]

Dump Packet for debugging

debug ospf ism

debug ospf ism (status|events|timers)

Show debug information of Interface State Machine

debug ospf nsm

debug ospf nsm (status|events|timers)

Show debug information of Network State Machine

debug ospf event

Show debug information of OSPF event

debug ospf nssa

Show debug information about Not So Stub Area

debug ospf lsa

debug ospf lsa (generate|flooding|refresh)

Show debug detail of Link State messages

debug ospf zebra

debug ospf zebra (interface|redistribute)

Show debug information of ZEBRA API

show debugging ospf

OSPF Configuration Examples

A simple example, with MD5 authentication enabled:

```
!
interface ge0
 ip ospf authentication message-digest
 ip ospf message-digest-key 1 md5 ABCDEFGHIJK
!
router ospf
 network 192.168.0.0/16 area 0.0.0.1
 area 0.0.0.1 authentication message-digest
```

An ABR router, with MD5 authentication and performing summarisation of networks between the areas:

```
!
log syslog
!
interface ge0
 ip ospf authentication message-digest
 ip ospf message-digest-key 1 md5 ABCDEFGHIJK
!
interface ge1
 ip ospf passive
!
interface ge2
 ip ospf authentication message-digest
 ip ospf message-digest-key 2 md5 XYZ12345
!
router ospf
 ospf router-id 192.168.0.1
 redistribute connected
```

(continues on next page)

(continued from previous page)

```

network 192.168.0.0/24 area 0.0.0.0
network 10.0.0.0/16 area 0.0.0.0
network 192.168.1.0/24 area 0.0.0.1
area 0.0.0.0 authentication message-digest
area 0.0.0.0 range 10.0.0.0/16
area 0.0.0.0 range 192.168.0.0/24
area 0.0.0.1 authentication message-digest
area 0.0.0.1 range 10.2.0.0/16
!
```

1.4.7 OSPFv3

ospf6d is a daemon support OSPF version 3 for IPv6 network. OSPF for IPv6 is described in [RFC 2740](#).

OSPF6 router

router ospf6 [*vrf NAME*]

ospf6 router-id *A.B.C.D*

Set router's Router-ID.

timers throttle spf (*0-600000*) (*0-600000*) (*0-600000*)

This command sets the initial *delay*, the *initial-holdtime* and the *maximum-holdtime* between when SPF is calculated and the event which triggered the calculation. The times are specified in milliseconds and must be in the range of 0 to 600000 milliseconds.

The *delay* specifies the minimum amount of time to delay SPF calculation (hence it affects how long SPF calculation is delayed after an event which occurs outside of the holdtime of any previous SPF calculation, and also serves as a minimum holdtime).

Consecutive SPF calculations will always be separated by at least 'hold-time' milliseconds. The hold-time is adaptive and initially is set to the *initial-holdtime* configured with the above command. Events which occur within the holdtime of the previous SPF calculation will cause the holdtime to be increased by *initial-holdtime*, bounded by the *maximum-holdtime* configured with this command. If the adaptive hold-time elapses without any SPF-triggering event occurring then the current holdtime is reset to the *initial-holdtime*.

```

router ospf6
timers throttle spf 200 400 10000
```

In this example, the *delay* is set to 200ms, the initial holdtime is set to 400ms and the *maximum holdtime* to 10s. Hence there will always be at least 200ms between an event which requires SPF calculation and the actual SPF calculation. Further consecutive SPF calculations will always be separated by between 400ms to 10s, the hold-time increasing by 400ms each time an SPF-triggering event occurs within the hold-time of the previous SPF calculation.

auto-cost reference-bandwidth *COST*

This sets the reference bandwidth for cost calculations, where this bandwidth is considered equivalent to an OSPF cost of 1, specified in Mbits/s. The default is 100Mbit/s (i.e. a link of bandwidth 100Mbit/s or higher will have a cost of 1. Cost of lower bandwidth links will be scaled with reference to this cost).

This configuration setting **MUST** be consistent across all routers within the OSPF domain.

maximum-paths (1-64)

Use this command to control the maximum number of parallel routes that OSPFv3 can support. The default is 64.

write-multiplier (1-100)

Use this command to tune the amount of work done in the packet read and write threads before relinquishing control. The parameter is the number of packets to process before returning. The default value of this parameter is 20.

clear ipv6 ospf6 process [vrf NAME]

This command clears up the database and routing tables and resets the neighborhood by restarting the interface state machine. This will be helpful when there is a change in router-id and if user wants the router-id change to take effect, user can use this cli instead of restarting the ospf6d daemon.

ASBR Summarisation Support in OSPFv3

External routes in OSPFv3 are carried by type 5/7 LSA (external LSAs). External LSAs are generated by ASBR (Autonomous System Boundary Router). Large topology database requires a large amount of router memory, which slows down all processes, including SPF calculations. It is necessary to reduce the size of the OSPFv3 topology database, especially in a large network. Summarising routes keeps the routing tables smaller and easier to troubleshoot.

External route summarization must be configured on ASBR. Stub area do not allow ASBR because they don't allow type 5 LSAs.

An ASBR will inject a summary route into the OSPFv3 domain.

Summary route will only be advertised if you have at least one subnet that falls within the summary range.

Users will be allowed an option in the CLI to not advertise range of ipv6 prefixes as well.

The configuration of ASBR Summarisation is supported using the CLI command

summary-address X:X::X:X/

M [tag (1-4294967295)] [{metric (0-16777215) | metric-type (1-2)}]

This command will advertise a single External LSA on behalf of all the prefixes falling under this range configured by the CLI. The user is allowed to configure tag, metric and metric-type as well. By default, tag is not configured, default metric as 20 and metric-type as type-2 gets advertised. A summary route is created when one or more specific routes are learned and removed when no more specific route exist. The summary route is also installed in the local system with Null0 as next-hop to avoid leaking traffic.

no summary-address X:X::X:X/

M [tag (1-4294967295)] [{metric (0-16777215) | metric-type (1-2)}]

This command can be used to remove the summarisation configuration. This will flush the single External LSA if it was originated and advertise the External LSAs for all the existing individual prefixes.

summary-address X:X::X:X/M no-advertise

This command can be used when user do not want to advertise a certain range of prefixes using the no-advertise option. This command when configured will flush all the existing external LSAs falling under this range.

no summary-address X:X::X:X/M no-advertise

This command can be used to remove the previous configuration. When configured, it will resume originating external LSAs for all the prefixes falling under the configured range.

aggregation timer (5-1800)

The summarisation command takes effect after the aggregation timer expires. By default the value of this timer is 5 seconds. User can modify the time after which the external LSAs should get originated using this command.

no aggregation timer (5-1800)

This command removes the timer configuration. It reverts back to default 5 second timer.

show ipv6 ospf6 summary-address [detail] [json]

This command can be used to see all the summary-address related information. When detail option is used, it shows all the prefixes falling under each summary-configuration apart from other information.

OSPF6 area

area A.B.C.D range X:X::X:X/M [<advertise|not-advertise|cost (0-16777215)>]

area (0-4294967295) range X:X::X:X/M [<advertise|not-advertise|cost (0-16777215)>]

Summarize a group of internal subnets into a single Inter-Area-Prefix LSA. This command can only be used at the area boundary (ABR router).

By default, the metric of the summary route is calculated as the highest metric among the summarized routes. The *cost* option, however, can be used to set an explicit metric.

The *not-advertise* option, when present, prevents the summary route from being advertised, effectively filtering the summarized routes.

area A.B.C.D nssa [no-summary]

area (0-4294967295) nssa [no-summary] [default-information-originate [metric-type (1-2)] [metric (0-16777215)]]

Configure the area to be a NSSA (Not-So-Stubby Area).

The following functionalities are implemented as per RFC 3101:

1. Advertising Type-7 LSA into NSSA area when external route is redistributed into OSPFv3.
2. Processing Type-7 LSA received from neighbor and installing route in the route table.
3. Support for NSSA ABR functionality which is generating Type-5 LSA when backbone area is configured. Currently translation of Type-7 LSA to Type-5 LSA is enabled by default.
4. Support for NSSA Translator functionality when there are multiple NSSA ABR in an area.

An NSSA ABR can be configured with the *no-summary* option to prevent the advertisement of summaries into the area. In that case, a single Type-3 LSA containing a default route is originated into the NSSA.

NSSA ABRs and ASBRs can be configured with *default-information-originate* option to originate a Type-7 default route into the NSSA area. In the case of NSSA ASBRs, the origination of the default route is conditioned to the existence of a default route in the RIB that wasn't learned via the OSPF protocol.

area A.B.C.D export-list NAME

area (0-4294967295) export-list NAME

Filter Type-3 summary-LSAs announced to other areas originated from intra- area paths from specified area.

```
router ospf6
  area 0.0.0.10 export-list foo
  !
  ipv6 access-list foo permit 2001:db8:1000::/64
  ipv6 access-list foo deny any
```

With example above any intra-area paths from area 0.0.0.10 and from range 2001:db8::/32 (for example 2001:db8:1::/64 and 2001:db8:2::/64) are announced into other areas as Type-3 summary-LSA's, but any others (for example 2001:200::/48) aren't.

This command is only relevant if the router is an ABR for the specified area.

area A.B.C.D import-list NAME

area (0-4294967295) import-list NAME

Same as export-list, but it applies to paths announced into specified area as Type-3 summary-LSAs.

area A.B.C.D filter-list prefix NAME in

area A.B.C.D filter-list prefix NAME out

area (0-4294967295) filter-list prefix NAME in

area (0-4294967295) filter-list prefix NAME out

Filtering Type-3 summary-LSAs to/from area using prefix lists. This command makes sense in ABR only.

OSPF6 interface

ipv6 ospf6 area <A.B.C.D|(0-4294967295)>

Enable OSPFv3 on the interface and add it to the specified area.

ipv6 ospf6 cost COST

Sets interface's output cost. Default value depends on the interface bandwidth and on the auto-cost reference bandwidth.

ipv6 ospf6 hello-interval HELLOINTERVAL

Sets interface's Hello Interval. Default 10

ipv6 ospf6 dead-interval DEADINTERVAL

Sets interface's Router Dead Interval. Default value is 40.

ipv6 ospf6 retransmit-interval RETRANSMITINTERVAL

Sets interface's Rxmt Interval. Default value is 5.

ipv6 ospf6 priority PRIORITY

Sets interface's Router Priority. Default value is 1.

ipv6 ospf6 transmit-delay TRANSMITDELAY

Sets interface's Inf-Trans-Delay. Default value is 1.

ipv6 ospf6 network (broadcast|point-to-point)

Set explicitly network type for specified interface.

OSPF6 route-map

Usage of *ospfd6*'s route-map support.

set metric [+|-](0-4294967295)

Set a metric for matched route when sending announcement. Use plus (+) sign to add a metric value to an existing metric. Use minus (-) sign to subtract a metric value from an existing metric.

Redistribute routes to OSPF6

redistribute <bgp|connected|isis|kernel|ripng|static|table> [metric-type (1-2)] [metric (0-16777214)] [

Redistribute routes of the specified protocol or kind into OSPFv3, with the metric type and metric set if specified, filtering the routes using the given route-map if specified.

default-information originate [{always|metric (0-16777214)|metric-type (1-2)|route-map WORD}]

The command injects default route in the connected areas. The always argument injects the default route regardless of it being present in the router. Metric values and route-map can also be specified optionally.

Graceful Restart

graceful-restart [grace-period (1-1800)]

Configure Graceful Restart (RFC 5187) restarting support. When enabled, the default grace period is 120 seconds.

To perform a graceful shutdown, the “graceful-restart prepare ipv6 ospf” EXEC-level command needs to be issued before restarting the ospf6d daemon.

graceful-restart helper enable [A.B.C.D]

Configure Graceful Restart (RFC 5187) helper support. By default, helper support is disabled for all neighbours. This config enables/disables helper support on this router for all neighbours. To enable/disable helper support for a specific neighbour, the router-id (A.B.C.D) has to be specified.

graceful-restart helper strict-lsa-checking

If ‘strict-lsa-checking’ is configured then the helper will abort the Graceful Restart when a LSA change occurs which affects the restarting router. By default ‘strict-lsa-checking’ is enabled”

graceful-restart helper supported-grace-time (10-1800)

Supports as HELPER for configured grace period.

graceful-restart helper planned-only

It helps to support as HELPER only for planned restarts. By default, it supports both planned and unplanned outages.

graceful-restart prepare ipv6 ospf

Initiate a graceful restart for all OSPFv3 instances configured with the “graceful-restart” command. The ospf6d daemon should be restarted during the instance-specific grace period, otherwise the graceful restart will fail.

This is an EXEC-level command.

Showing OSPF6 information

show ipv6 ospf6 [vrf <NAME|all>] [json]

Show information on a variety of general OSPFv3 and area state and configuration information. JSON output can be obtained by appending ‘json’ to the end of command.

show ipv6 ospf6 [vrf <NAME|all>] database [<detail|dump|internal>] [json]

This command shows LSAs present in the LSDB. There are three view options. These options helps in viewing all the parameters of the LSAs. JSON output can be obtained by appending ‘json’ to the end of command. JSON option is not applicable with ‘dump’ option.

... clicmd:: show ipv6 ospf6 [vrf <NAME|all>] database <router|network|inter-prefix|inter-router|as-external|group-membership|type-7|link|intra-prefix> [json]

These options filters out the LSA based on its type. The three views options works here as well. JSON output can be obtained by appending 'json' to the end of command.

show ipv6 ospf6 [vrf <NAME|all>] database adv-router A.B.C.D linkstate-id A.B.C.D [json]

The LSAs additionally can also be filtered with the linkstate-id and advertising-router fields. We can use the LSA type filter and views with this command as well and visa-versa. JSON output can be obtained by appending 'json' to the end of command.

show ipv6 ospf6 [vrf <NAME|all>] database self-originated [json]

This command is used to filter the LSAs which are originated by the present router. All the other filters are applicable here as well.

show ipv6 ospf6 [vrf <NAME|all>] interface [json]

To see OSPF interface configuration like costs. JSON output can be obtained by appending "json" in the end.

show ipv6 ospf6 [vrf <NAME|all>] neighbor [json]

Shows state and chosen (Backup) DR of neighbor. JSON output can be obtained by appending 'json' at the end.

show ipv6 ospf6 [vrf <NAME|all>] interface traffic [json]

Shows counts of different packets that have been received and transmitted by the interfaces. JSON output can be obtained by appending "json" at the end.

show ipv6 route ospf6

This command shows internal routing table.

show ipv6 ospf6 zebra [json]

Shows state about what is being redistributed between zebra and OSPF6.

JSON output can be obtained by appending "json" at the end.

show ipv6 ospf6 [vrf <NAME|all>] redistribute [json]

Shows the routes which are redistributed by the router. JSON output can be obtained by appending 'json' at the end.

show ipv6 ospf6 [vrf <NAME|all>] route [<intra-area|inter-area|external-1|external-2|X:X::X:X|X:X::X:X/M|detail|summary>] [json]

This command displays the ospfv3 routing table as determined by the most recent SPF calculations. Options are provided to view the different types of routes. Other than the standard view there are two other options, detail and summary. JSON output can be obtained by appending 'json' to the end of command.

show ipv6 ospf6 [vrf <NAME|all>] route X:X::X:X/M match [detail] [json]

The additional match option will match the given address to the destination of the routes, and return the result accordingly.

show ipv6 ospf6 [vrf <NAME|all>] interface [IFNAME] prefix [detail|<X:X::X:X|X:X::X:X/M> [<match|detail>]] [json]

This command shows the prefixes present in the interface routing table. Interface name can also be given. JSON output can be obtained by appending 'json' to the end of command.

show ipv6 ospf6 [vrf <NAME|all>] spf tree [json]

This commands shows the spf tree from the recent spf calculation with the calling router as the root. If json is appended in the end, we can get the tree in JSON format. Each area that the router belongs to has it's own JSON object, with each router having "cost", "isLeafNode" and "children" as arguments.

show ipv6 ospf6 graceful-restart helper [detail] [json]

This command shows the graceful-restart helper details including helper configuration parameters.

OSPFv3 Debugging

The following debug commands are supported:

debug ospf6 abr

Toggle OSPFv3 ABR debugging messages.

debug ospf6 asbr

Toggle OSPFv3 ASBR debugging messages.

debug ospf6 border-routers

Toggle OSPFv3 border router debugging messages.

debug ospf6 flooding

Toggle OSPFv3 flooding debugging messages.

debug ospf6 interface

Toggle OSPFv3 interface related debugging messages.

debug ospf6 lsa

Toggle OSPFv3 Link State Advertisements debugging messages.

debug ospf6 lsa aggregation

Toggle OSPFv3 Link State Advertisements summarization debugging messages.

debug ospf6 message

Toggle OSPFv3 message exchange debugging messages.

debug ospf6 neighbor

Toggle OSPFv3 neighbor interaction debugging messages.

debug ospf6 nssa

Toggle OSPFv3 Not So Stubby Area (NSSA) debugging messages.

debug ospf6 route

Toggle OSPFv3 routes debugging messages.

debug ospf6 spf

Toggle OSPFv3 Shortest Path calculation debugging messages.

debug ospf6 zebra

Toggle OSPFv3 zebra interaction debugging messages.

debug ospf6 graceful-restart

Toggle OSPFv3 graceful-restart helper debugging messages.

OSPF6 Configuration Examples

Example of ospf6d configured on one interface and area:

```
interface ge0
  ipv6 ospf6 area 0.0.0.0
  ipv6 ospf6 instance-id 0
!
router ospf6
  ospf6 router-id 212.17.55.53
```

(continues on next page)

(continued from previous page)

```
area 0.0.0.0 range 2001:770:105:2::/64
!
```

Larger example with policy and various options set:

```
debug ospf6 neighbor state
!
interface ge0
  ipv6 ospf6 area 0.0.0.0
  ipv6 ospf6 cost 1
  ipv6 ospf6 hello-interval 10
  ipv6 ospf6 dead-interval 40
  ipv6 ospf6 retransmit-interval 5
  ipv6 ospf6 priority 0
  ipv6 ospf6 transmit-delay 1
  ipv6 ospf6 instance-id 0
!
interface loopback0
  ipv6 ospf6 cost 1
  ipv6 ospf6 hello-interval 10
  ipv6 ospf6 dead-interval 40
  ipv6 ospf6 retransmit-interval 5
  ipv6 ospf6 priority 1
  ipv6 ospf6 transmit-delay 1
  ipv6 ospf6 instance-id 0
!
router ospf6
  router-id 255.1.1.1
  redistribute static route-map static-ospf6
!
!
ipv6 prefix-list test-prefix seq 1000 deny any
!
route-map static-ospf6 permit 10
  match ipv6 address prefix-list test-prefix
  set metric-type type-2
  set metric 2000
!
```

1.4.8 RIP

RIP – Routing Information Protocol is widely deployed interior gateway protocol. RIP was developed in the 1970s at Xerox Labs as part of the XNS routing protocol. RIP is a distance-vector protocol and is based on the Bellman-Ford algorithms. As a distance-vector protocol, RIP router send updates to its neighbors periodically, thus allowing the convergence to a known topology. In each update, the distance to any given network will be broadcast to its neighboring router.

ripd supports RIP version 2 as described in RFC2453 and RIP version 1 as described in RFC1058.

RIP netmask

The netmask features of *ripd* support both version 1 and version 2 of RIP. Version 1 of RIP originally contained no netmask information. In RIP version 1, network classes were originally used to determine the size of the netmask. Class A networks use 8 bits of mask, Class B networks use 16 bits of masks, while Class C networks use 24 bits of mask. Today, the most widely used method of a network mask is assigned to the packet on the basis of the interface that received the packet. Version 2 of RIP supports a variable length subnet mask (VLSM). By extending the subnet mask, the mask can be divided and reused. Each subnet can be used for different purposes such as large to middle size LANs and WAN links. FRR *ripd* does not support the non-sequential netmasks that are included in RIP Version 2.

In a case of similar information with the same prefix and metric, the old information will be suppressed. Ripd does not currently support equal cost multipath routing.

RIP Configuration

router rip

The *router rip* command is necessary to enable RIP. To disable RIP, use the *no router rip* command. RIP must be enabled before carrying out any of the RIP commands.

Disable RIP.

network NETWORK

Set the RIP enable interface by NETWORK. The interfaces which have addresses matching with NETWORK are enabled.

This group of commands either enables or disables RIP interfaces between certain numbers of a specified network address. For example, if the network for 10.0.0.0/24 is RIP enabled, this would result in all the addresses from 10.0.0.0 to 10.0.0.255 being enabled for RIP. The *no network* command will disable RIP for the specified network.

network IFNAME

Set a RIP enabled interface by IFNAME. Both the sending and receiving of RIP packets will be enabled on the port specified in the *network ifname* command. The *no network ifname* command will disable RIP on the specified interface.

neighbor A.B.C.D

Specify RIP neighbor. When a neighbor doesn't understand multicast, this command is used to specify neighbors. In some cases, not all routers will be able to understand multicasting, where packets are sent to a network or a group of addresses. In a situation where a neighbor cannot process multicast packets, it is necessary to establish a direct link between routers. The neighbor command allows the network administrator to specify a router as a RIP neighbor. The *no neighbor a.b.c.d* command will disable the RIP neighbor.

Below is very simple RIP configuration. Interface *eth0* and interface which address match to *10.0.0.0/8* are RIP enabled.

```
!  
router rip  
network 10.0.0.0/8  
network eth0  
!
```

passive-interface (IFNAME|default)

This command sets the specified interface to passive mode. On passive mode interface, all receiving packets are processed as normal and ripd does not send either multicast or unicast RIP packets except to RIP neighbors specified with *neighbor* command. The interface may be specified as *default* to make ripd default to passive on all interfaces.

The default is to be passive on all interfaces.

ip split-horizon

Control split-horizon on the interface. Default is *ip split-horizon*. If you don't perform split-horizon on the interface, please specify *no ip split-horizon*.

RIP Version Control

RIP can be configured to send either Version 1 or Version 2 packets. The default is to send RIPv2 while accepting both RIPv1 and RIPv2 (and replying with packets of the appropriate version for REQUESTS / triggered updates). The version to receive and send can be specified globally, and further overridden on a per-interface basis if needs be for send and receive separately (see below).

It is important to note that RIPv1 cannot be authenticated. Further, if RIPv1 is enabled then RIP will reply to REQUEST packets, sending the state of its RIP routing table to any remote routers that ask on demand. For a more detailed discussion on the security implications of RIPv1 see *RIP Authentication*.

version VERSION

Set RIP version to accept for reads and send. VERSION can be either 1 or 2.

Disabling RIPv1 by specifying version 2 is STRONGLY encouraged, *RIP Authentication*. This may become the default in a future release.

Default: Send Version 2, and accept either version.

ip rip send version VERSION

VERSION can be 1, 2, or 1 2.

This interface command overrides the global rip version setting, and selects which version of RIP to send packets with, for this interface specifically. Choice of RIP Version 1, RIP Version 2, or both versions. In the latter case, where 1 2 is specified, packets will be both broadcast and multicast.

Default: Send packets according to the global version (version 2)

ip rip receive version VERSION

VERSION can be 1, 2, or 1 2.

This interface command overrides the global rip version setting, and selects which versions of RIP packets will be accepted on this interface. Choice of RIP Version 1, RIP Version 2, or both.

Default: Accept packets according to the global setting (both 1 and 2).

How to Announce RIP route

redistribute <bgp|connected|isis|kernel|ospf|sharp|static|table> [metric (0-16)] [route-map WORD]

Redistribute routes from other sources into RIP.

If you want to specify RIP only static routes:

default-information originate

route A.B.C.D/M

This command is specific to FRR. The *route* command makes a static route only inside RIP. This command should be used only by advanced users who are particularly knowledgeable about the RIP protocol. In most cases, we recommend creating a static route in FRR and redistributing it in RIP using *redistribute static*.

Filtering RIP Routes

RIP routes can be filtered by a distribute-list.

distribute-list [prefix] LIST <in|out> IFNAME

You can apply access lists to the interface with a *distribute-list* command. If prefix is specified LIST is a prefix-list. If prefix is not specified then LIST is the access list name. *in* specifies packets being received, and *out* specifies outgoing packets. Finally if an interface is specified it will be applied against a specific interface.

The *distribute-list* command can be used to filter the RIP path. *distribute-list* can apply access-lists to a chosen interface. First, one should specify the access-list. Next, the name of the access-list is used in the distribute-list command. For example, in the following configuration eth0 will permit only the paths that match the route 10.0.0.0/8

```
!  
router rip  
  distribute-list private in eth0  
!  
access-list private permit 10 10.0.0.0/8  
access-list private deny any  
!
```

distribute-list can be applied to both incoming and outgoing data.

RIP Metric Manipulation

RIP metric is a value for distance for the network. Usually *ripd* increment the metric when the network information is received. Redistributed routes' metric is set to 1.

default-metric (1-16)

This command modifies the default metric value for redistributed routes. The default value is 1. This command does not affect connected route even if it is redistributed by *redistribute connected*. To modify connected route's metric value, please use *redistribute connected metric* or *route-map offset-list* also affects connected routes.

offset-list ACCESS-LIST (in|out)

offset-list ACCESS-LIST (in|out) IFNAME

RIP distance

Distance value is used in zebra daemon. Default RIP distance is 120.

distance (1-255)

Set default RIP distance to specified value.

distance (1-255) A.B.C.D/M

Set default RIP distance to specified value when the route's source IP address matches the specified prefix.

distance (1-255) A.B.C.D/M ACCESS-LIST

Set default RIP distance to specified value when the route's source IP address matches the specified prefix and the specified access-list.

RIP route-map

Usage of *ripd*'s route-map support.

Optional argument route-map MAP_NAME can be added to each *redistribute* statement.

```
redistribute static [route-map MAP_NAME]
redistribute connected [route-map MAP_NAME]
.....
```

Cisco applies route-map *_before_* routes will exported to rip route table. In current FRR's test implementation, *ripd* applies route-map after routes are listed in the route table and before routes will be announced to an interface (something like output filter). I think it is not so clear, but it is draft and it may be changed at future.

Route-map statement (*Route Maps*) is needed to use route-map functionality.

match interface WORD

This command match to incoming interface. Notation of this match is different from Cisco. Cisco uses a list of interfaces - NAME1 NAME2 ... NAMEN. Ripd allows only one name (maybe will change in the future). Next - Cisco means interface which includes next-hop of routes (it is somewhat similar to "ip next-hop" statement). Ripd means interface where this route will be sent. This difference is because "next-hop" of same routes which sends to different interfaces must be different. Maybe it'd be better to made new matches - say "match interface-out NAME" or something like that.

match ip address WORD

match ip address prefix-list WORD

Match if route destination is permitted by access-list.

match ip next-hop WORD

match ip next-hop prefix-list WORD

Match if route next-hop (meaning next-hop listed in the rip route-table as displayed by "show ip rip") is permitted by access-list.

match metric (0-4294967295)

This command match to the metric value of RIP updates. For other protocol compatibility metric range is shown as (0-4294967295). But for RIP protocol only the value range (0-16) make sense.

set ip next-hop A.B.C.D

This command set next hop value in RIPv2 protocol. This command does not affect RIPv1 because there is no next hop field in the packet.

set metric (0-4294967295)

Set a metric for matched route when sending announcement. The metric value range is very large for compatibility with other protocols. For RIP, valid metric values are from 1 to 16.

RIP Authentication

RIPv2 allows packets to be authenticated via either an insecure plain text password, included with the packet, or via a more secure MD5 based HMAC (keyed-Hashing for Message Authentication), RIPv1 can not be authenticated at all, thus when authentication is configured *ripd* will discard routing updates received via RIPv1 packets.

However, unless RIPv1 reception is disabled entirely, *RIP Version Control*, RIPv1 REQUEST packets which are received, which query the router for routing information, will still be honoured by *ripd*, and *ripd* WILL reply to such packets. This allows *ripd* to honour such REQUESTs (which sometimes is used by old equipment and very simple devices to bootstrap their default route), while still providing security for route updates which are received.

In short: Enabling authentication prevents routes being updated by unauthenticated remote routers, but still can allow routes (I.e. the entire RIP routing table) to be queried remotely, potentially by anyone on the internet, via RIPv1.

To prevent such unauthenticated querying of routes disable RIPv1, *RIP Version Control*.

ip rip authentication mode md5

Set the interface with RIPv2 MD5 authentication.

ip rip authentication mode text

Set the interface with RIPv2 simple password authentication.

ip rip authentication string STRING

RIP version 2 has simple text authentication. This command sets authentication string. The string must be shorter than 16 characters.

ip rip authentication key-chain KEY-CHAIN

Specify Keyed MD5 chain.

```
!  
key chain test  
  key 1  
    key-string test  
!  
interface eth1  
  ip rip authentication mode md5  
  ip rip authentication key-chain test  
!
```

RIP Timers

timers basic UPDATE TIMEOUT GARBAGE

RIP protocol has several timers. User can configure those timers' values by *timers basic* command.

The default settings for the timers are as follows:

- The update timer is 30 seconds. Every update timer seconds, the RIP process is awakened to send an unsolicited Response message containing the complete routing table to all neighboring RIP routers.
- The timeout timer is 180 seconds. Upon expiration of the timeout, the route is no longer valid; however, it is retained in the routing table for a short time so that neighbors can be notified that the route has been dropped.
- The garbage collect timer is 120 seconds. Upon expiration of the garbage-collection timer, the route is finally removed from the routing table.

The *timers basic* command allows the the default values of the timers listed above to be changed.

Show RIP Information

To display RIP routes.

show ip rip

Show RIP routes.

The command displays all RIP routes. For routes that are received through RIP, this command will display the time the packet was sent and the tag information. This command will also display this information for routes redistributed into RIP.

show ip rip status

The command displays current RIP status. It includes RIP timer, filtering, version, RIP enabled interface and RIP peer information.

```

ripd> **show ip rip status**
Routing Protocol is "rip"
  Sending updates every 30 seconds with +/-50%, next due in 35 seconds
  Timeout after 180 seconds, garbage collect after 120 seconds
  Outgoing update filter list for all interface is not set
  Incoming update filter list for all interface is not set
  Default redistribution metric is 1
  Redistributing: kernel connected
  Default version control: send version 2, receive version 2
    Interface  Send  Recv
Routing for Networks:
  eth0
  eth1
  1.1.1.1
  203.181.89.241
Routing Information Sources:
  Gateway      BadPackets BadRoutes  Distance Last Update

```

RIP Debug Commands

Debug for RIP protocol.

debug rip events

Shows RIP events. Sending and receiving packets, timers, and changes in interfaces are events shown with *ripd*.

debug rip packet

Shows display detailed information about the RIP packets. The origin and port number of the packet as well as a packet dump is shown.

debug rip zebra

This command will show the communication between *ripd* and *zebra*. The main information will include addition and deletion of paths to the kernel and the sending and receiving of interface information.

show debugging rip

Shows all information currently set for *ripd* debug.

Sample configuration

```
debug rip events
debug rip packet

router rip
network 11.0.0.0/8
network eth0
route 10.0.0.0/8
distribute-list private-only in eth0

access-list private-only
permit 10.0.0.0/8 any
deny any any
```

1.4.9 RIPng

ripngd supports the RIPng protocol as described in [RFC 2080](#). It's an IPv6 reincarnation of the RIP protocol.

Invoking ripngd

There are no *ripngd* specific invocation options. Common options can be specified (common-invocation-options).

ripngd Configuration

Currently *ripngd* supports the following commands:

router ripng

Enable RIPng.

flush_timer TIME

Set flush timer.

network NETWORK

Set RIPng enabled interface by NETWORK.

network IFNAME

Set RIPng enabled interface by IFNAME.

route NETWORK

Set RIPng static routing announcement of NETWORK.

ripngd Terminal Mode Commands

```
show ip ripng
```

```
show debugging ripng
```

```
debug ripng events
```

```
debug ripng packet
```

```
debug ripng zebra
```

ripngd Filtering Commands

RIPng routes can be filtered by a distribute-list.

distribute-list [prefix] LIST <in|out> IFNAME

You can apply access lists to the interface with a *distribute-list* command. If prefix is specified LIST is a prefix-list. If prefix is not specified then LIST is the access list name. *in* specifies packets being received, and *out* specifies outgoing packets. Finally if an interface is specified it will be applied against a specific interface.

The *distribute-list* command can be used to filter the RIPNG path. *distribute-list* can apply access-lists to a chosen interface. First, one should specify the access-list. Next, the name of the access-list is used in the *distribute-list* command. For example, in the following configuration eth0 will permit only the paths that match the route 10.0.0.0/8

```
!
router ripng
  distribute-list private in ge0
!
access-list private
  permit 10.0.0.0/8 any
  deny any any
!
```

distribute-list can be applied to both incoming and outgoing data.

Sample configuration

```
debug ripng events
debug ripng packet

router ripng
  network ge0
  route 3ffe:506::0/32
  distribute-list local-only out sit1

ipv6 access-list local-only
  permit 3ffe:506::0/32 any
  deny any any
```

1.4.10 STATIC

STATIC is a daemon that handles the installation and deletion of static routes.

Static Route Commands

Static routing is a very fundamental feature of routing technology. It defines a static prefix and gateway.

```
ip route NETWORK GATEWAY table TABLENO nexthop-vrf VRFNAME DISTANCE vrf VRFNAME
```

```
ipv6 route NETWORK from SRCPREFIX GATEWAY table TABLENO nexthop-vrf VRFNAME DISTANCE vrf VRFNAME
```

NETWORK is destination prefix with a valid v4 or v6 network based upon initial form of the command. GATEWAY is gateway for the prefix it currently must match the v4 or v6 route type specified at the start of the command. GATEWAY can also be treated as an interface name. If the interface name is `null0` then zebra installs a blackhole route. TABLENO is an optional parameter for namespaces that allows you to create the route in a specified table associated with the vrf namespace. table will be rejected if you are not using namespace based vrfs. `nexthop-vrf` allows you to create a leaked route with a nexthop in the specified VRFNAME vrf VRFNAME allows you to create the route in a specified vrf. `nexthop-vrf` cannot be currently used with namespace based vrfs currently as well. The v6 variant allows the installation of a static source-specific route with the SRCPREFIX sub command. These routes are currently supported on Linux operating systems only, and perform AND matching on packet's destination and source addresses in the kernel's forwarding path. Note that destination longest-prefix match is "more important" than source LPM, e.g. `2001:db8:1::/64 from 2001:db8::/48` will win over `2001:db8::/48 from 2001:db8:1::/64` if both match.

Multiple nexthop static route

To create multiple nexthops to the same NETWORK, just reenter the same network statement with different nexthop information.

```
ip route 10.0.0.1/32 10.0.0.2
ip route 10.0.0.1/32 10.0.0.3
ip route 10.0.0.1/32 eth0
```

If there is no route to 10.0.0.2 and 10.0.0.3, and interface eth0 is reachable, then the last route is installed into the kernel.

If zebra has been compiled with multipath support, and both 10.0.0.2 and 10.0.0.3 are reachable, zebra will install a multipath route via both nexthops, if the platform supports this.

```
router> show ip route
S> 10.0.0.1/32 [1/0] via 10.0.0.2 inactive
   via 10.0.0.3 inactive
*      is directly connected, eth0
```

```
ip route 10.0.0.0/8 10.0.0.2
ip route 10.0.0.0/8 10.0.0.3
ip route 10.0.0.0/8 null0 255
```

This will install a multihop route via the specified next-hops if they are reachable, as well as a high-distance blackhole route, which can be useful to prevent traffic destined for a prefix to match less-specific routes (e.g. default) should the specified gateways not be reachable. E.g.:

```

router> show ip route 10.0.0.0/8
Routing entry for 10.0.0.0/8
  Known via "static", distance 1, metric 0
    10.0.0.2 inactive
    10.0.0.3 inactive

Routing entry for 10.0.0.0/8
  Known via "static", distance 255, metric 0
  directly connected, Null0

```

Also, if the user wants to configure a static route for a specific VRF, then a specific VRF configuration mode is available. After entering into that mode with `vrf VRF` the user can enter the same route command as before, but this time, the route command will apply to the VRF.

```

# case with VRF
configure
vrf r1-cust1
  ip route 10.0.0.0/24 10.0.0.2
exit-vrf

```

1.4.11 PIM

PIM – Protocol Independent Multicast

pimd supports pim-sm as well as igmp v2 and v3. pim is vrf aware and can work within the context of vrf's in order to do S,G mrouting.

ip pim rp A.B.C.D A.B.C.D/M

In order to use pim, it is necessary to configure a RP for join messages to be sent to. Currently the only methodology to do this is via static rp commands. All routers in the pim network must agree on these values. The first ip address is the RP's address and the second value is the matching prefix of group ranges covered. This command is vrf aware, to configure for a vrf, enter the vrf submode.

ip pim register-accept-list PLIST

When pim receives a register packet the source of the packet will be compared to the prefix-list specified, PLIST, and if a permit is received normal processing continues. If a deny is returned for the source address of the register packet a register stop message is sent to the source.

ip pim spt-switchover infinity-and-beyond

On the last hop router if it is desired to not switch over to the SPT tree. Configure this command. This command is vrf aware, to configure for a vrf, enter the vrf submode.

ip pim ecmp

If pim has the a choice of ECMP nexthops for a particular RPF, pim will cause S,G flows to be spread out amongst the nexthops. If this command is not specified then the first nexthop found will be used. This command is vrf aware, to configure for a vrf, enter the vrf submode.

ip pim ecmp rebalance

If pim is using ECMP and an interface goes down, cause pim to rebalance all S,G flows across the remaining nexthops. If this command is not configured pim only modifies those S,G flows that were using the interface that went down. This command is vrf aware, to configure for a vrf, enter the vrf submode.

ip pim join-prune-interval (1-65535)

Modify the join/prune interval that pim uses to the new value. Time is specified in seconds. This command is vrf

aware, to configure for a vrf, enter the vrf submode. The default time is 60 seconds. If you enter a value smaller than 60 seconds be aware that this can and will affect convergence at scale.

ip pim keep-alive-timer (1-65535)

Modify the time out value for a S,G flow from 1-60000 seconds. If choosing a value below 31 seconds be aware that some hardware platforms cannot see data flowing in better than 30 second chunks. This command is vrf aware, to configure for a vrf, enter the vrf submode.

ip pim packets (1-255)

When processing packets from a neighbor process the number of packets incoming at one time before moving on to the next task. The default value is 3 packets. This command is only useful at scale when you can possibly have a large number of pim control packets flowing. This command is vrf aware, to configure for a vrf, enter the vrf submode.

ip pim register-suppress-time (1-65535)

Modify the time that pim will register suppress a FHR will send register notifications to the kernel. This command is vrf aware, to configure for a vrf, enter the vrf submode.

ip pim send-v6-secondary

When sending pim hello packets tell pim to send any v6 secondary addresses on the interface. This information is used to allow pim to use v6 nexthops in it's decision for RPF lookup. This command is vrf aware, to configure for a vrf, enter the vrf submode.

ip pim ssm prefix-list WORD

Specify a range of group addresses via a prefix-list that forces pim to never do SM over. This command is vrf aware, to configure for a vrf, enter the vrf submode.

ip multicast rpf-lookup-mode WORD

Modify how PIM does RPF lookups in the zebra routing table. You can use these choices:

longer-prefix

Lookup the RPF in both tables using the longer prefix as a match

lower-distance

Lookup the RPF in both tables using the lower distance as a match

mrrib-only

Lookup in the Multicast RIB only

mrrib-then-urib

Lookup in the Multicast RIB then the Unicast Rib, returning first found. This is the default value for lookup if this command is not entered

urib-only

Lookup in the Unicast Rib only.

ip igmp generate-query-once [version (2-3)]

Generate IGMP query (v2/v3) on user requirement. This will not depend on the existing IGMP general query timer. If no version is provided in the cli, it will be considered as default v2 query. This is a hidden command.

ip igmp watermark-warn (1-65535)

Configure watermark warning generation for an igmp group limit. Generates warning once the configured group limit is reached while adding new groups. 'no' form of the command disables the warning generation. This command is vrf aware. To configure per vrf, enter vrf submode.

PIM Interface Configuration

PIM interface commands allow you to configure an interface as either a Receiver or a interface that you would like to form pim neighbors on. If the interface is in a vrf, enter the interface command with the vrf keyword at the end.

ip pim active-active

Turn on pim active-active configuration for a Vxlan interface. This command will not do anything if you do not have the underlying ability of a mlag implementation.

ip pim bsm

Tell pim that we would like to use this interface to process bootstrap messages. This is enabled by default. 'no' form of this command is used to restrict bsm messages on this interface.

ip pim unicast-bsm

Tell pim that we would like to allow interface to process unicast bootstrap messages. This is enabled by default. 'no' form of this command is used to restrict processing of unicast bsm messages on this interface.

ip pim drpriority (1-4294967295)

Set the DR Priority for the interface. This command is useful to allow the user to influence what node becomes the DR for a lan segment.

ip pim hello (1-65535) (1-65535)

Set the pim hello and hold interval for a interface.

ip pim

Tell pim that we would like to use this interface to form pim neighbors over. Please note that this command does not enable the reception of IGMP reports on the interface. Refer to the next *ip igmp* command for IGMP management.

ip pim use-source A.B.C.D

If you have multiple addresses configured on a particular interface and would like pim to use a specific source address associated with that interface.

ip igmp

Tell pim to receive IGMP reports and Query on this interface. The default version is v3. This command is useful on a LHR.

ip igmp join A.B.C.D [A.B.C.D]

Join multicast group or source-group on an interface.

ip igmp query-interval (1-65535)

Set the IGMP query interval that PIM will use.

ip igmp query-max-response-time (1-65535)

Set the IGMP query response timeout value. If an report is not returned in the specified time we will assume the S,G or *,G has timed out.

ip igmp version (2-3)

Set the IGMP version used on this interface. The default value is 3.

ip multicast boundary oil WORD

Set a pim multicast boundary, based upon the WORD prefix-list. If a pim join or IGMP report is received on this interface and the Group is denied by the prefix-list, PIM will ignore the join or report.

ip igmp last-member-query-count (1-255)

Set the IGMP last member query count. The default value is 2. 'no' form of this command is used to to configure back to the default value.

ip igmp last-member-query-interval (1-65535)

Set the IGMP last member query interval in deciseconds. The default value is 10 deciseconds. 'no' form of this command is used to to configure back to the default value.

ip mroute INTERFACE A.B.C.D [A.B.C.D]

Set a static multicast route for a traffic coming on the current interface to be forwarded on the given interface if the traffic matches the group address and optionally the source address.

See also:

PIM BFD Configuration

PIM Multicast RIB

In order to influence Multicast RPF lookup, it is possible to insert into zebra routes for the Multicast RIB. These routes are only used for RPF lookup and will not be used by zebra for insertion into the kernel *or* for normal rib processing. As such it is possible to create weird states with these commands. Use with caution. Most of the time this will not be necessary.

ip mroute A.B.C.D/M A.B.C.D (1-255)

Insert into the Multicast Rib Route A.B.C.D/M with specified nexthop. The distance can be specified as well if desired.

ip mroute A.B.C.D/M INTERFACE (1-255)

Insert into the Multicast Rib Route A.B.C.D/M using the specified INTERFACE. The distance can be specified as well if desired.

Multicast Source Discovery Protocol (MSDP) Configuration

MSDP can be setup in different ways:

- **MSDP meshed-group:** where all peers are connected with each other creating a fully meshed network. SAs (source active) messages are not forwarded in this mode because the origin is able to send SAs to all members.
This setup is commonly used with anycast.
- **MSDP peering:** when there is one or more peers that are not fully meshed. SAs may be forwarded depending on the result of filtering and RPF checks.
This setup is commonly consistent with BGP peerings (for RPF checks).
- **MSDP default peer:** there is only one peer and all SAs will be forwarded there.

Note: MSDP default peer and SA filtering is not implemented.

Commands available for MSDP:

ip msdp timers (1-65535) (1-65535) [(1-65535)]

Configure global MSDP timers.

First value is the keep-alive interval. This configures the interval in seconds between keep-alive messages. The default value is 60 seconds. It should be less than the remote hold time.

Second value is the hold-time. This configures the interval in seconds before closing a non responding connection. The default value is 75. This value should be greater than the remote keep alive time.

Third value is the connection retry interval and it is optional. This configures the interval between connection attempts. The default value is 30 seconds.

ip msdp mesh-group WORD member A.B.C.D

Create or update a mesh group to include the specified MSDP peer.

ip msdp mesh-group WORD source A.B.C.D

Create or update a mesh group to set the source address used to connect to peers.

ip msdp peer A.B.C.D source A.B.C.D

Create a regular MSDP session with peer using the specified source address.

Show PIM Information

All PIM show commands are vrf aware and typically allow you to insert a specified vrf command if information is desired about a specific vrf. If no vrf is specified then the default vrf is assumed. Finally the special keyword 'all' allows you to look at all vrfs for the command. Naming a vrf 'all' will cause great confusion.

show ip igmp interface

Display IGMP interface information.

show ip igmp [vrf NAME] join [json]

Display IGMP static join information for a specific vrf. If "vrf all" is provided, it displays information for all the vrfs present.

show ip igmp groups

Display IGMP groups information.

show ip igmp groups retransmissions

Display IGMP group retransmission information.

show ip igmp sources

Display IGMP sources information.

show ip igmp sources retransmissions

Display IGMP source retransmission information.

show ip igmp statistics

Display IGMP statistics information.

show ip multicast

Display various information about the interfaces used in this pim instance.

show ip mroute [vrf NAME] [A.B.C.D [A.B.C.D]] [fill] [json]

Display information about installed into the kernel S,G mroutes. If one address is specified we assume it is the Group we are interested in displaying data on. If the second address is specified then it is Source Group. The keyword *fill* says to fill in all assumed data for test/data gathering purposes.

show ip mroute [vrf NAME] count [json]

Display information about installed into the kernel S,G mroutes and in addition display data about packet flow for the mroutes for a specific vrf.

show ip mroute vrf all count [json]

Display information about installed into the kernel S,G mroutes and in addition display data about packet flow for the mroutes for all vrfs.

show ip mroute [vrf NAME] summary [json]

Display total number of S,G mroutes and number of S,G mroutes installed into the kernel for a specific vrf.

show ip mroute vrf all summary [json]

Display total number of S,G mroutes and number of S,G mroutes installed into the kernel for all vrfs.

show ip msdp mesh-group

Display the configured mesh-groups, the local address associated with each mesh-group, the peer members included in each mesh-group, and their status.

show ip msdp peer

Display information about the MSDP peers. That includes the peer address, the local address used to establish the connection to the peer, the connection status, and the number of active sources.

show ip pim assert

Display information about asserts in the PIM system for S,G mroutes.

show ip pim assert-internal

Display internal assert state for S,G mroutes

show ip pim assert-metric

Display metric information about assert state for S,G mroutes

show ip pim assert-winner-metric

Display winner metric for assert state for S,G mroutes

show ip pim group-type

Display SSM group ranges.

show ip pim interface

Display information about interfaces PIM is using.

show ip pim mlag [vrf NAME|all] interface [detail|WORD] [json]

Display mlag interface information.

show ip pim join

Display information about PIM joins received. If one address is specified then we assume it is the Group we are interested in displaying data on. If the second address is specified then it is Source Group.

show ip pim local-membership

Display information about PIM interface local-membership.

show ip pim mlag summary [json]

Display mlag information state that PIM is keeping track of.

show ip pim neighbor

Display information about PIM neighbors.

show ip pim nexthop

Display information about pim nexthops that are being used.

show ip pim nexthop-lookup

Display information about a S,G pair and how the RPF would be chosen. This is especially useful if there are ECMP's available from the RPF lookup.

show ip pim rp-info

Display information about RP's that are configured on this router.

show ip pim rpf

Display information about currently being used S,G's and their RPF lookup information. Additionally display some statistics about what has been happening on the router.

show ip pim secondary

Display information about an interface and all the secondary addresses associated with it.

show ip pim state

Display information about known S,G's and incoming interface as well as the OIL and how they were chosen.

show ip pim [vrf NAME] upstream [A.B.C.D [A.B.C.D]] [json]

Display upstream information about a S,G mroute. Allow the user to specify sub Source and Groups that we are only interested in.

show ip pim upstream-join-desired

Display upstream information for S,G's and if we desire to join the multicast tree

show ip pim upstream-rpf

Display upstream information for S,G's and the RPF data associated with them.

show ip pim [vrf NAME] mlag upstream [A.B.C.D [A.B.C.D]] [json]

Display upstream entries that are synced across MLAG switches. Allow the user to specify sub Source and Groups address filters.

show ip pim mlag summary

Display PIM MLAG (multi-chassis link aggregation) session status and control message statistics.

show ip pim bsr

Display current bsr, its uptime and last received bsm age.

show ip pim bsrp-info

Display group-to-rp mappings received from E-BSR.

show ip pim bsm-database

Display all fragments of stored bootstrap message in user readable format.

mtrace A.B.C.D [A.B.C.D]

Display multicast traceroute towards source, optionally for particular group.

show ip multicast count [vrf NAME] [json]

Display multicast data packets count per interface for a vrf.

show ip multicast count vrf all [json]

Display multicast data packets count per interface for all vrf.

See also:

multicast-rib-commands

PIM Debug Commands

The debugging subsystem for PIM behaves in accordance with how FRR handles debugging. You can specify debugging at the enable CLI mode as well as the configure CLI mode. If you specify debug commands in the configuration cli mode, the debug commands can be persistent across restarts of the FRR pimd if the config was written out.

debug igmp

This turns on debugging for IGMP protocol activity.

debug mtrace

This turns on debugging for mtrace protocol activity.

debug mroute

This turns on debugging for PIM interaction with kernel MFC cache.

debug pim events

This turns on debugging for PIM system events. Especially timers.

debug pim nht

This turns on debugging for PIM nexthop tracking. It will display information about RPF lookups and information about when a nexthop changes.

debug pim packet-dump

This turns on an extraordinary amount of data. Each pim packet sent and received is dumped for debugging purposes. This should be considered a developer only command.

debug pim packets

This turns on information about packet generation for sending and about packet handling from a received packet.

debug pim trace

This traces pim code and how it is running.

debug pim bsm

This turns on debugging for BSR message processing.

debug pim zebra

This gathers data about events from zebra that come up through the ZAPI.

PIM Clear Commands

Clear commands reset various variables.

clear ip interfaces

Reset interfaces.

clear ip igmp interfaces

Reset IGMP interfaces.

clear ip mroute

Reset multicast routes.

clear ip mroute [vrf NAME] count

When this command is issued, reset the counts of data shown for packet count, byte count and wrong interface to 0 and start count up from this spot.

clear ip pim interfaces

Reset PIM interfaces.

clear ip pim oil

Rescan PIM OIL (output interface list).

clear ip pim [vrf NAME] bsr-data

This command will clear the BSM scope data struct. This command also removes the next hop tracking for the bsr and resets the upstreams for the dynamically learnt RPs.

PIM EVPN configuration

To use PIM in the underlay for overlay BUM forwarding associate a multicast group with the L2 VNI. The actual configuration is based on your distribution. Here is an ifupdown2 example:

```
auto vx-10100
iface vx-10100
    vxlan-id 10100
    bridge-access 100
    vxlan-local-tunnelip 27.0.0.11
    vxlan-mcastgrp 239.1.1.100
```

Note: PIM will see the vxlan-mcastgrp configuration and auto configure state to properly forward BUM traffic.

PIM also needs to be configured in the underlay to allow the BUM MDT to be setup. This is existing PIM configuration:

- Enable pim on the underlay L3 interface via the “ip pim” command.
- Configure RPs for the BUM multicast group range.
- Ensure the PIM is enabled on the lo of the VTEPs and the RP.

1.5 NAT

1.5.1 NAT

Network Address Translation is a method of changing packet IP addresses. SoodarOS uses PNAT variation, which changes Port and Address.

NAT Static Mapping

Define a static mapping for address translation.

Address only NAT

In this mode, only the address is translated to the given address. Depending on flow direction(whether it’s in2out or out2in), the source or destination of the packet is changed.

When a packet containing a *source* same as *local address* is passing through an *input* interface, its *source* is replaced with *global address*. When a packet containing a *destination* same as *global address* is passing through an *output* interface, its *destination* is replaced with *local address*.

ip nat inside source static A.B.C.D A.B.C.D

Add a new static map entry to the NAT static table. The first IP is a local address, and the second is a global address.

Example :

```
soodar(config)# ip nat inside source static 192.168.1.10 85.20.1.1
soodar(config)# interface ge0
soodar(config-if)# ip nat inside
```

(continues on next page)

(continued from previous page)

```
soodar(config)# interface ge1
soodar(config-if)# ip nat outside
```

Define a static map entry that translates every ingress traffic from *ge0* sourced from *192.168.1.10* to *85.20.1.1* (Also known as *Source NAT*). Every packet coming from *ge1*, which is destined to *85.20.1.1*, is also translated to *192.168.1.10*

```
soodar(config)# ip nat inside source static 85.20.1.1 192.168.1.10
soodar(config)# interface ge0
soodar(config-if)# ip nat outside
soodar(config)# interface ge1
soodar(config-if)# ip nat inside
```

Define a static map entry that translates every ingress traffic from *ge0* destined to *192.168.1.10* to *85.20.1.1* (Also known as *Destination NAT*). Every packet coming from *ge1*, which is sourced from *85.20.1.1*, is also translated to *192.168.1.10*

Protocol NAT

Sometimes we need to be more specific about our NAT and translate a specified protocol on a defined port. So when defining an entry, we introduce the protocol and desired ports. All other aspects of this entry(including behavior) are simple *Address only NAT*.

ip nat inside source static <tcp|udp> A.B.C.D (1-65535) A.B.C.D (1-65535)

Add a new static map entry to the NAT static table. The first IP is a local address, and the number following is its port. The second IP is a global address, and the number following is its port.

Example :

```
soodar(config)# ip nat inside source static tcp 192.168.1.10 444 85.20.1.1 666
soodar(config)# interface ge0
soodar(config-if)# ip nat inside
soodar(config)# interface ge1
soodar(config-if)# ip nat outside
```

Define a static map entry that translates every ingress traffic from *ge0* sourced from *192.168.1.10:444* to *85.20.1.1:666* (Also known as *Source NAT*). Every packet coming from *ge1*, which is destined to *85.20.1.1:666*, is also translated to *192.168.1.10:444*

```
soodar(config)# ip nat inside source static tcp 85.20.1.1 666 192.168.1.10 444
soodar(config)# interface ge0
soodar(config-if)# ip nat outside
soodar(config)# interface ge1
soodar(config-if)# ip nat inside
```

Define a static map entry that translates every ingress traffic from *ge0* destined to *192.168.1.10:444* to *85.20.1.1:666* (Also known as *Destination NAT*). Every packet coming from *ge1*, which is sourced from *85.20.1.1:666*, is also translated to *192.168.1.10:444*

Dynamic NAT

In dynamic NAT, every packet's source outgoing from an *input* interface and destined to an *output* interface is translated to an IP, provided by IP pool.

For every *source translation*, a new session is created, and its state is kept. So the packets coming from an *output* interface and having a matched session, its destination is changed with respect to the session's information.

NAT IP pool

A pool of available IP addresses to use as a NAT IP.

ip nat pool PNAT44 A.B.C.D [A.B.C.D]

Add an IP(or an IP range if the second IP is provided) to a nat pool named PNAT44

Example :

```
soodar(config)# ip nat pool p1 1.1.1.1
soodar(config)# ip nat pool p2 2.1.1.1 2.1.1.10
```

The first command is to create *p1* nat pool and add IP *1.1.1.1* to it. the second one adds *2.1.1.1* to *2.1.1.10* to *p2* nat pool.

Put interface behind NAT

ip nat inside

Define an interface as a NAT inside interface.

ip nat outside

Define an interface as a NAT outside interface.

NAT Forwarding

When a packet arrives to an inside or an outside interface, Dataplane looks for a translation to use or create. If none is found, the packet is dropped. Admin can change this behavior and instead of dropping them, forward them like normal packets on non-NAT enabled interfaces.

ip nat forwarding

Enable NAT forwarding feature on device.

Debugging

Debugging logs can be set in case of need.

debug nat44 event

log data plane installation processes and results

show ip nat statistics

show statistics about translations and current NAT configuration

```
soodar# show ip nat statistics
Total active translations: 4 (1 static, 3 dynamic)
Outside interfaces:
  ge1
Inside interfaces:
  ge0
NAT Forwarding: Disabled
```

show ip nat translations

Show current active translations

```
soodar# show ip nat translations
Pro      Inside Local      Inside Global      Outside Local      Outside Global
-----
---          1.1.1.10          200.2.3.3          ---                ---
ICMP      1.1.1.10:48       200.2.3.3:48       2.1.1.10:48       2.1.1.10:48
TCP       1.1.1.10:46122    200.2.3.3:46122    2.1.1.10:5201     2.1.1.10:5201
TCP       1.1.1.10:46120    200.2.3.3:46120    2.1.1.10:5201     2.1.1.10:5201
ICMP      1.1.1.10:45       200.2.3.3:63327    2.1.1.10:45       2.1.1.10:45

Total number of translations: 4
```

Example configuration

```
soodar(config)# int ge0
soodar(config-if)# ip nat outside
soodar(config)# int ge2
soodar(config-if)# ip nat inside
soodar(config)# ip nat pool nat1 200.1.2.1
```

1.6 Qos

1.6.1 QoS

Class Map

A class map is a set of rules to classify traffic.

Define Class Map

Class maps operate in two modes:

- Match all modes. Requires all circumstances be fulfilled
- Just matching a criterion is enough to classify the class as defined.

```
class-map match-all CNAME
```

Create a match all class map and enter in class map config mode

class-map match-any CNAME

Create a match any class map and enter in class map config mode

no class-map CNAM

Removes a class map

Example :

```
n1(config)# class-map match-all cmap1
n1(config-cmap)#
```

Define matching criteria

As said, a class map is a tool to classify traffic. so we need to define criteria. The keyword `match` is used to define a rule for matching. A packet could be matched against its source, destination, etc.

match any

Every packet is accepted.

no match any

Negate match any command and remove it from criteria

match access-list ACL

Note: Only permit rules in ACL are considered.

match source-address A.B.C.D/M**match destination-address A.B.C.D/M****match source-address X:X::X:X/M****match destination-address X:X::X:X/M****match dscp (0-63)**

Match against packet DSCP value

match protocol (0-63)

Match against packet protocol number

Example :

```
n1(config-cmap)# match destination-address 200.1.2.2
n1(config-cmap)# match access-list acl1
```

Policy Map

A policy map is a set of traffic policies attached to an interface. Currently, the only policy available is *traffic policing*. Policy map uses class maps as a base and defines policies based on the class map.

Define Policy Map

policy-map NAME

Create a policy map

Define a new policy

class CNAME

Enter class map policy config mode

police BPS [NORMALBURST [MAXBURST]] conform-action ACTION exceed-action ACTION [violate-action ACTION]

Define a police policy for entered class map. In the above command, BPS is the average bitrate of this traffic class.

NORMALBURST and MAXBURST are token buckets' sizes.

ACTIONS are : *transmit*, *drop* and *set-dscp-transmit*. and the conditions are *conform*, *exceed* and *violate* (which is optional).

transmit and *drop* actions, work as their names suggest. The *set-dscp-transmit* action allows the traffic to be passed. But the DSCP value of the packet is changed.

conform condition, is when data burst, is below the NORMALBURST rate. The *exceed* condition is when the data burst is between NORMALBURST and MAXBURST.

violate condition, is when data burst, is over *MAXBURST* rate. When a *violate-action* is not defined, the algorithm is just a single token bucket algorithm and only *conform* (below NORMALBURST) and *exceed* (over NORMALBURST) occurs.

Example :

```
n1(config)# policy-map pmap1
n1(config-pmap)# class cmap1
n1(config-pmap-c)# police 100K conform-action transmit exceed-action drop
n1(config-pmap)# class cmap2
n1(config-pmap-c)# police 10K conform-action transmit exceed-action set-dscp-
->transmit 24 violate-action drop
```

Apply to interface

Currently a policy map can be applied to just ingress traffic.

service-policy PMAP in

Example :

```
n1(config-if)# service-policy pmap1 in
```


Show commands

show policy-map [NAME]

Example :

```
n1(config)# do sh policy-map pmap1

Policy Map pmap1
  Class cmap
    Police CIR 102400 (bps) CB 25600 (byte) EB 35840 (byte)
    Conform Action : Transmit
    Exceed Action : Drop
```

Debugging logs can be set in case of need.

debug qos event

log data plane installation processes and results

1.7 Access Control List

1.7.1 IP Access List

Soodar router is shipped with a rich *ip access list* set of tools. It supports *standard ACLs* and *extended ACLs* in a named manner. An access list uses a *first match* approach. That means the first entry that matches is selected as the result, and the whole process of evaluation is terminated.

Define an ACL

To define an *ipv4* access list, issue the following command:

ip access-list ACL4

ACL4 is access list name.

Example :

```
soodar(config)# ip access-list ACL_TEST
soodar(config-nacl)#
```

For *ipv6* access list, the command uses *ipv6* name.

ipv6 access-list ACL6

Example :

```
soodar(config)# ipv6 access-list ACL6_TEST
soodar(config-ipv6-acl)#
```

Delete an ACL

Use `no` command to delete an ACL

```
no ip access-list ACL4
```

```
no ipv6 access-list ACL6
```

Remark

You can include comments or remark about the IP access list

```
remark LINE ..
```

Adds a remark for the access list. The remark indicates the purpose of the access list.

Define an entry

Rules(or entries) can be defined in access-list configuration mode

Since access lists use *first match* approach, entries have priorities. It is by default sequential(the first entry has the highest priority), and behavior can be changed by using *sequence numbers*

To enter the ACL config mode, it is just required to enter ACL's name.

```
soodar(config)# ip access-list ACL_TEST
soodar(config-nacl)# permit any
```

An access list can contain both the standard and extended ACL rules.

```
(1-4294967295) <deny|permit> <any|A.B.C.D/M>
```

Standard ACL entry rule. It is limited to controlling traffic only based on the source IP address.

```
(1-4294967295) <deny|permit> <any|A.B.C.D/M> <any|A.B.C.D/M> [exact-match]
```

Create a simple IPv4 entry. Matches against all IP packets. if `exact-match` is entered, the prefixes are also checked and should be the same(192.168.1.1/24 is not matched 192.168.1.1/16). The first input is the entry sequence number. The following input is the action done when entry is matched. Then we have *source* and *destination* prefixes. Instead of specifying each address, the user can input `any` to match every address.

Example :

```
soodar(config)# ip access-list TEST_ACL1
soodar(config-nacl)# deny any 10.1.16.68/32
soodar(config-nacl)# permit any any
```

Note: It's the best practice to add a `permit any` rule as the latest entry because by default if a packet doesn't match against non of the entries, it will be dropped.

```
(1-4294967295) <deny|permit> <any|X:X::X:X/M>
```

Standard ACL entry rule. It is limited to controlling traffic only based on the source IPv6 address.

```
(1-4294967295) <deny|permit> <any|X:X::X:X/M> <any|X:X::X:X/M> [exact-match]
```

Create a simple IPv6 entry. Matches against all IP packets. If `exact-match` is entered, the prefixes are also checked and should be the same (`fd00:12::1/64` is not matched with `fd00:12::1/96`). The first input is the entry sequence number. The following input is the action done when entry is matched. Then we have *source* and *destination* prefixes. Instead of specifying each address, the user can input `any` to match every address.

Example :

```
soodar(config)# ipv6 access-list TEST_ACLV6
soodar(config-ipv6-acl)# deny any 2001::1:2:1/64 exact-match
soodar(config-ipv6-acl)# permit any any
```

```
(1-4294967295) <deny|permit> PROTOSERVICE <any|A.B.C.D/M> <any|A.B.C.D/M> [exact-match]
```

```
(1-4294967295) <deny|permit> PROTOSERVICE <any|X:X::X:X/M> <any|X:X::X:X/M> [exact-match]
```

Create an IP entry based on service or protocol.

Example :

```
soodar(config)# ip access-list SSH_DENY
soodar(config-nacl)# deny ssh any any
soodar(config-nacl)# permit any
soodar(config-nacl)# ipv6 access-list SSH6_DENY
soodar(config-ipv6-acl)# deny ssh any any
soodar(config-ipv6-acl)# permit any
```

Deny any ``SSH`` connection. This entry creates a rule which denies *TCP*
↪ connection to port *22* from the source.

```
::
```

```
ip access-list TEST_ACL1 deny tcp any le 65535 any eq 22
```

```
(1-4294967295) <deny|permit> tcp <any|A.B.C.D/M> SRC_PORT <any|A.B.C.D/M> DST_PORT [TCP FLAGS] [exact-match]
```

```
(1-4294967295) <deny|permit> tcp <any|X:X::X:X/M> SRC_PORT <any|X:X::X:X/M> DST_PORT [TCP FLAGS] [exact-match]
```

A TCP connection entry. It filters based on address prefix and port number and, if specified, by TCP flags. Port number is defined by using *operators* or *ranges*. Operators include operator name and an integer in [0-65535]. Operator names include `eq` (equal), `lt` (lower than) and `gt` (greater than), and `range`. The range is defined by two integers in [0-65535]. Instead of entering a port number, one can use the names of well-known TCP services. Supported TCP flags are *fin*, **syn**, **rst**, **psh**, **ack**, and *urg*. These flags behave as a *match all* filter(All named flags should be in a packet for entry to be accepted)|br|

```
soodar(config)# ip access-list PERMIT_TRUSTED
soodar(config-nacl)# permit tcp 10.0.0.0/8 lt 1000 any
soodar(config)# ip access-list DENY_FROM_HTTP_TO_HTTPS
soodar(config-nacl)# deny tcp 10.0.0.0/8 range 80 443 any
soodar(config-nacl)# permit any any

soodar(config)# ipv6 access-list PERMIT_TRUSTED6
soodar(config-ipv6-acl)# permit tcp fc00::/8 lt 1000 any
soodar(config)# ipv6 access-list DENY_FROM_HTTP_TO_HTTPS6
```

(continues on next page)

(continued from previous page)

```
soodar(config-nacl)# deny tcp fc00::/8 range 80 443 any
soodar(config-nacl)# permit any any
```

In fact the DENY_FROM_HTTP_TO_HTTPS could be rewritten like this:

```
soodar(config)# deny tcp 10.0.0.0/8 range http https any
soodar(config)# permit any any
```

```
(1-4294967295) <deny|permit> udp <any|A.B.C.D/M> SRC_PORT <any|A.B.C.D/
M> DST_PORT [exact-match]
```

```
(1-4294967295) <deny|permit> udp <any|X:X::X:X/M> SRC_PORT <any|X:X::X:X/
M> DST_PORT [exact-match]
```

```
soodar(config)# ip access-list DENY_DNS
soodar(config-nacl)# deny udp any eq domain any
```

Deny any DNS service

```
(1-4294967295) <deny|permit> icmp <any|A.B.C.D/M> <any|A.B.C.D/
M> ICMP_TYPE_CODES [exact-match]"
```

```
(1-4294967295) <deny|permit> icmp <any|X:X::X:X/M> <any|X:X::X:X/
M> ICMPV6_TYPE_CODES [exact-match]"
```

ICMP_TYPE_CODES is Well known ICMP message code type to match. ICMPV6_TYPE_CODES is Well known ICMPv6 message code type to match. They can be defined by their name(like echo-reply) or their *code* and *type* values.

Negate an entry

Just use no form of command

Example in config mode:

```
soodar(config)# ip access-list ACL_TEST
soodar(config-nacl)# no 100
soodar(config-nacl)# no 10 deny tcp 10.0.0.0/8 eq www 64.233.185.113/32
soodar(config-nacl)# no deny udp any 8.8.8.8 eq 53
```

You can negate an entry by using its sequence number, its definition or both of them

ACL Resequencing

By default, the ACL sequence number starts from 10 and increases with a 10 step factor. To change this behavior use the following command

```
ip access-list resequence ACL4 (1-2147483647) (1-2147483647)
```

```
ipv6 access-list resequence ACL6 (1-2147483647) (1-2147483647)
```

Resequencing all access list entries. The first number is the beginning, and the second is the step.

Apply ACL

An ACL is applied to the ingress or egress traffic of an interface.

ip access-group ACL4 in

ipv6 traffic-group ACL6 in

Apply an IPv4/IPv6 ACL to the interface's input traffic.

The negating form, detaches an ACL from interface's input.

Example :

```
soodar(config)# interface ge3
soodar(config-if)# ip access-group IN_ACL in
soodar(config-if)# ipv6 traffic-group IN_ACL6 in
```

ip access-group ACL4 out

ipv6 traffic-group ACL6 out

Apply an IPv4/IPv6 ACL to the interface's output traffic

The negating form, detaches an ACL from interface's output.

ip access-group ACL4 in out

ipv6 traffic-group ACL6 in out

Apply ACL to both ways of traffic. The negating form, detaches an ACL from interface.

Debug

show ip access-list [NAME] [json]

show ipv6 access-list [NAME] [json]

Example :

```
n1# show ip access-list
IP access list TESTACL1
 10 permit tcp 1.1.1.10/32 eq 200 2.1.1.0/24 ge 5060 tcp-flag-mask 0 tcp-flag-
↪value 0
```

show ip access-list interfaces

Show interfaces' access-lists and their direction.

Debugging logs can be set in case of need.

[no] debug acl event

log data plane installation processes and results

1.8 VRF

1.8.1 VRF

Define a VRF

vrf (VRF_NAME)

Define a new VRF

Example :

```
n1(config)# vrf vrf-green
```

Add an interface to VRF

ip vrf forwarding NAME

Add interface to VRF NAME

no ip vrf forwarding [NAME]

Add interface to VRF default

Note: When adding/removing interface to VRF, make sure no valid IP is set on it

Example:

```
n1(config)# int ge3
n1(config-if)# ip vrf forwarding vrf-green
n1(config-if)# ip address 200.1.2.20/24
```

VRF Configuration examples

VRF Trunking

Example :

```
n1(config)# int ge1.100
n1(config-if)# encapsulation dot1q 100
n1(config-if)# ip vrf forwarding vrf-green
n1(config-if)# ip address 200.1.2.20/24
n1(config)# int ge2
n1(config-if)# rewrite tag push 1 dot1q 300
```

Dynamic routing in VRF

Example:

```
soodar3(config)# router ospf vrf vrf-green
soodar3(config-router)# network 200.2.3.0/24 area 0
soodar3(config-router)# network 3.2.1.0/24 area 0
soodar3(config-if) # end
```

VRF FIB

Example:

```
soodar1# sh ip ospf vrf vrf-green route
soodar1# sh ip fib vrf vrf-green
soodar1# sh ip fib vrf all
```

Display VRF info

show vrf

Example:

```
n1# sh vrf
vrf vrf-blue id 5 table 300
```

Logging

Debugging logs can be set in case of need.

[no] debug vrf event

logs data plane installation processes and results

1.9 MPLS

1.9.1 MPLS

Enable MPLS on interface

mpls ip

mpls ipv6

Example :

```
soodar(config)# int ge0
soodar(config-if)# mpls ip
soodar(config)# int ge3
soodar(config-if)# mpls ipv6
```

Note: LDP router-id and discovery transport-address should be set before enabling MPLS.

1.10 Security

1.10.1 Tunnels

SoodarOS support many Layer 2 and Layer 3 tunnels, including: GRE, IPIP, VXLAN and VPLS

Layer 3 Tunnels

Layer 3 Tunnels Includes:

- GRE
- IPIP

Create L3 Tunnel

interface tunnel [vrf VRF] (0-1023)

Create a new tunnel with instance number input.

tunnel source <A.B.C.D|X:X::X:X>

tunnel destination <A.B.C.D|X:X::X:X>

tunnel vrf VRF

Lookup for tunnel destination in VRF's FIB.

tunnel mode ipip

Set tunnel mode to IP-IP

tunnel mode ipip multipoint

Set tunnel mode to IP-IP multipoint

tunnel mode ipsec

Set tunnel mode to IPSec mode. An IPSec tunnel is an IP-IP tunnel that should always be protected.

tunnel mode gre

tunnel mode gre multipoint

Set tunnel mode to GRE MP.

Note: In multipoint mode, destination should not be set. Use `nhrp` instead.

tunnel protection ipsec profile IPSECPROFILE

Protect tunnel with IPSec. see *Profile*

Warning: Currently, the protection mode is only supported in P2P tunnels.

Note: When a tunnel is in protected mode, It is put in shutdown mode until the IPSec SAs are established.

Note: When IPSec SAs protecting a tunnel are gone, the tunnel immediately shuts down. Reestablishing SAs make tunnel available again.

Logging

Debugging logs can be set in case of need.

debug tunnel event

log data plane installation processes and results

GRE configuration example

In the first peer we have:

```
soodar1(config)# interface tunnel 10
soodar1(config-if)# tunnel source 200.1.2.1
soodar1(config-if)# tunnel destination 200.1.2.2
soodar1(config-if)# tunnel mode gre
soodar1(config-if)# ip address 192.168.1.1/32
```

In the second peer we have:

```
soodar2(config)# interface tunnel 10
soodar2(config-if)# tunnel source 200.1.2.2
soodar2(config-if)# tunnel destination 200.1.2.1
soodar2(config-if)# tunnel mode gre
soodar2(config-if)# ip address 192.168.1.2/32
```

And then, we add IP routes:

```
soodar1(config)# ip route 2.1.1.0/24 tunnel10
```

```
soodar2(config)# ip route 1.1.1.0/24 tunnel10
```

GRE-MP configuration example

Currently, only NHRP static mapping is available.

In the first peer we have:

```
soodar1(config)# interface tunnel 10
soodar1(config-if)# tunnel source 200.1.2.1
soodar1(config-if)# tunnel mode gre multipoint
soodar1(config-if)# ip address 192.168.1.1/32
soodar1(config-if)# ip nhrp map 192.168.1.2 200.1.2.2
```

In the second peer we have:

```
soodar2(config)# interface tunnel 10
soodar2(config-if)# tunnel source 200.1.2.2
soodar2(config-if)# tunnel mode gre multipoint
soodar2(config-if)# ip address 192.168.1.2/32
soodar2(config-if)# ip nhrp map 192.168.1.1 200.1.2.1
```

And then, we add IP routes:

```
soodar1(config)# ip route 2.1.1.0/24 192.168.1.2
```

```
soodar2(config)# ip route 1.1.1.0/24 192.168.1.1
```

VXLAN

Virtual Extensible LAN (VXLAN) is a proposed encapsulation protocol for running an overlay network on existing Layer 3 infrastructure.

interface nve (0-1000000000)

Create an NVE interface with instance

Example :

```
soodar(config)# interface nve 40
```

source-ip <A.B.C.D|X:X::X:X>

Set NVE source IP

ingress-replication A.B.C.D

Set NVE destination IP

member vni (1-16777214)

Associate NVE to VNI number.

Note: For now, each NVE interface can associate to 1 VNI

member vni (1-16777214) associate-vrf

Associate NVE to VNI number and VRF that use this VNI number. Now tunnel lookup its *ingress-replication's* path from the VRF that shares the same VNI with the tunnel.

Note: Each VRF can associate to 1 VNI

Example :

```
soodar(config)# interface nve 10
soodar(config-if)# source-ip 200.1.3.1
soodar(config-if)# ingress-replication 156.25.4.89
soodar(config-if)# member vni 40
soodar(config-if)# bridge-group 120
soodar(config-if)# int ge0
soodar(config-if)# no shutdown
soodar(config-if)# bridge-group 120
```

```

soodar(config)# vrf green
soodar(config-vrf)# vni 40
soodar(config)# int ge1
soodar(config-if)# ip vrf forwarding green
soodar(config-if)# ip address 200.1.3.1/24
soodar(config)# interface nve 10
soodar(config-if)# source-ip 200.1.2.1
soodar(config-if)# ingress-replication 200.1.3.3
soodar(config-if)# member vni 40 associate-vrf
soodar(config-if)# bridge-group 120
soodar(config-if)# int ge0
soodar(config-if)# no shutdown
soodar(config-if)# bridge-group 120

```

Logging

Debugging logs can be set in case of need.

debug vxlan event

log data plane installation processes and results

VPLS

Virtual Private LAN Service(VPLS) is a method to extend LANs on the network. SoodarOS Supports VPLS on an MPLS core network. First, we need to create a `mpls-tunnel` interface to achieve this. This interface acts as a pseudowire by adding another *MPLS label* to its passing traffic. Using a TLDP(Targeted LDP) session, the `tunnel label` can be negotiated between two routers.

Note: To use VPLS, the connection should be full-mesh. If three router `r1`, `r2` and `r3` are going to form a VPLS, 3 connection is needed: `r1-r2`, `r2-r3` and `r1-r3`

interface mpls-tunnel

Creates a `mpls-tunnel` interface

l2vpn NAME type vpls

Create an L2VPN using VPLS technology

member pseudowire PW

Add a `mpls-tunnel` to this L2VPN and enter member pseudowire configuration mode. PW is `mpls-tunnel`'s name

neighbor lsr-id A.B.C.D

Target's LSR-ID of this pseudowire.

Note: We should have a route to target's LSR-ID to establish a targeted session.

pw-id (1-4294967295)

An ID to distinguish pseudowires. If PW-IDs differ, the session will not be established.

Example :

```
soodar(config)# interface ge3
soodar(config-if)# bridge-group 200
soodar(config-if)# no shutdown
soodar(config)# interface mpls-tunnel0
soodar(config-if)# bridge-group 200 split-horizon group 100
soodar(config-if)# no shutdown
soodar(config)# interface mpls-tunnel1
soodar(config-if)# bridge-group 200 split-horizon group 100
soodar(config-if)# no shutdown
soodar(config)# mpls ldp
soodar(config-ldp)# router-id 222.1.1.1
soodar(config)# l2vpn exemplary-vpls type vpls
soodar(config-l2vpn)# member pseudowire mpls-tunnel0
soodar(config-l2vpn-pw)# neighbor lsr-id 222.7.7.7
soodar(config-l2vpn-pw)# pw-id 170
soodar(config-l2vpn)# member pseudowire mpls-tunnel1
soodar(config-l2vpn-pw)# neighbor lsr-id 222.14.14.14
soodar(config-l2vpn-pw)# pw-id 1140
```

Note: Note how mpls-tunnels share the same split-horizon group id. It's to prevent loops in packets(since bridge flooding is enabled and our topology is full-mesh).

Logging

Debugging logs can be set in case of need.

debug vpls event

log data plane installation processes and results

1.10.2 PKI

Public Key Infrastructure manages certificates for supporting IPsec protocol. This includes: - RSA key generation. - Import Certificate Authorities. - PKCS#10 Certificate Signing Request(CSR).

Note: All PKI actions are permanent jobs; It does not appear in running config but is preserved after the router reboot.

Note: Currently, no certificate revocation method is supported.

Key Generation

A pair of private/public keys are used for issuing certificate requests or used in other protocols.

crypto key generate rsa label NAME modulus (2048|4096)

Generate a new RSA key pair and store it as NAME. The key modulus can be determined(default is 2048).

crypto key generate x25519 label LABEL

Generate a new X25519 key pair and store it as LABEL.

crypto key generate rawraw label LABEL bytes (32-1024)

Generate Raw bytes and store them as LABEL. The number of generated bytes can be set(default is 32).

crypto key generate ssh modulus (2048|4096)

Generate a new RSA keypair to be used by SSH

Importing a CA

First, to import a CA, we need to define a trustpoint. A trustpoint is a CA(and optionally a general-purpose certificate signed by that CA). After defining trustpoint, authentication is needed to import the CA. This certificate could be self-signed, and the SSH terminal is the input(SoodarOS administrator should copy/paste the certificate).

Note: All inputs/outputs(including certificate, CSR and ...) are in PEM format

crypto pki trustpoint NAME

Create a new trustpoint

crypto pki authenticate TP

Authenticate the trustpoint TP and write its CA to non-volatile memory.

Example :

```
n1(config)# crypto pki trustpoint root-ca
n1(config)# crypto pki authenticate root-ca
Enter the base 64 encoded CA certificate
End with a blank line or the word "quit" on a line by itself

-----BEGIN CERTIFICATE-----
MIIDSzCCAjOgAwIBAgIIQMT8Qv03sXYwDQYJKoZIhvcNAQELBQAwNTELMakGA1UE
BhMCSVIXEzARBgNVBAoTC1RlbXAgQ29ycC4xETAPBgNVBAMTCHRlbXAuY29tMB4X
DTIxMDEyMDExNDIzNFoXDTI0MDEyMDExNDIzNFowNTELMakGA1UEBhMCSVIXEzAR
BgNVBAoTC1RlbXAgQ29ycC4xETAPBgNVBAMTCHRlbXAuY29tMIIBIjANBgkqhkiG
9w0BAQEFAAOCAQ8AMIIBCgKCAQEAY1KPgdCS6BB7PCdeggnsf6NjW4KBxeG6H18R
lOHYoTBM1R3QrvCrgpgoZv3DtGR8T6Ch0/HdL1GdFJ7RcJqZPbaxdepqI08SZG4VD
CcZbI0dCNgKWD+ja00vgyfcK2cXKY70bdyUuJLwNvSvPEPhzH1UNx7kfBdvGn2Vg
s/XyYhsn3xc6ioODT+HUAAd2WvBIOzd+RUo0yANJRkbPnLPgpNEiE1wG6Bj6orjR
ajnC8SYt5XGqD0DX7JGi7bELHw0JGdDk1acr9GQyJwVobDYCKDTuW4ELDSs+2GIK
E76rmlAGrJGy3po2itVbmMprhbTl3E0pxPz178qkG/r0i41UXQIDAQABO18wXTAP
BgNVHRMBAf8EBTADAQH/MA4GA1UdDwEB/wQEAwIBBjAdBgNVHQ4EFgQU7CsuL8vJ
o0kfANvQjVQkaR4K/WQwGwYDVR0RBQwEoIQb3RoZXIuZG9tYW1uLmNvbTANBgkq
hkiG9w0BAQsFAAOCAQEAE8iOUjW8+BNBCfyyfcQ0okd7UuK/0DE40wEXVRpMzyv
4IoLNNz5SmWBZo5WdtkIUfGmC9l18uRsBpIcqHOR8ZSRkjswtOFn+C5KxNXum1pQ
cLmNpxn2ecsr2K2qW6IRfig8cQwzpFe3c59zFf13gKdr6g0B+1px/hMBdhyaUn6A
```

(continues on next page)

(continued from previous page)

```

9uXtvgeCzAqdJehpo12IKNnYeL+GrfHcFe7R7BRLD2XzoAgjFR48w24h3FbrxM8I
1jqEwbvnGT7FECGZbyKGBEM/dY1gbVD19GTJlaZ8z3HrHdaRFvCYgAqFLTvtU8Q+
lq+EWiCSMRlPPx10iLDdbxRw2JIjdF7XIsU3WGhtw==
-----END CERTIFICATE-----
Updating certificates in /etc/ssl/certs...
1 added, 0 removed; done.
Running hooks in /etc/ca-certificates/update.d...
done.

n1# show crypto pki certificate root-ca
Trustpoint: root-ca
CA:
  subject: "C=IR, O=Temp Corp., CN=temp.com"
  issuer:  "C=IR, O=Temp Corp., CN=temp.com"
  validity: not before Jan 20 15:12:34 2021, not valid yet (valid in 58 seconds)
            not after  Jan 20 15:12:34 2024, ok (expires in 1095 days)
  serial:  40:c4:fc:42:fd:37:b1:76
  altNames: other.domain.com
  flags:   CA CRLSign self-signed
  subjKeyId: ec:2b:2e:2f:cb:c9:a3:49:1f:00:db:d0:8d:54:24:69:1e:0a:fd:64
  pubkey:   RSA 2048 bits
  keyid:   cf:d8:04:82:62:b9:f1:a9:84:75:56:e7:1b:5b:ac:4a:c8:ba:ae:21
  subjkey:  ec:2b:2e:2f:cb:c9:a3:49:1f:00:db:d0:8d:54:24:69:1e:0a:fd:64
  Fingerprint: 954E9105EEE221C7BCDF351BBA0184E950F82C75

```

Generate a certificate and CSR

Users can request a certificate signing and import that certificate. To do this, a trustpoint needs to have these parameters set: 1. Certificate's SN(and optionally some SANs) 2. A RSA key pair to create and sign the CSR. 3. An enrollment method. Currently, only the SSH terminal(copy and paste) method is available and could be skipped. After setting up trustpoint, and authenticating it, a CSR should be generated. If terminal enrollment is used, the PKCS#10 format CSR is printed on the screen, and SoodarOS administrator needs to copy it and sign it by a CA. To import this signed certificate, an authentication for this trustpoint is needed.

subject-name LINE...

Certificate SN setting

subject-alt-name LINE

Certificate SAN setting

Note: Enter the command multiple times to set multiple SANs. Up to 100 SANs are supported.

no subject-alt-name LINE

Remove a SAN from trustpoint.

rsakeypair KEY

Use previously-generated key pair KEY to sign CSR

enrollment terminal pem

Enroll via terminal(copy and paste), including PEM encapsulation boundaries.

crypto pki enroll TP

Generate a Certificate Signing Request for trustpoint TP. If terminal enrollment is used, the PKCS#10 format CSR is printed on the screen

crypto pki import TP certificate

Import the trustpoint TP's general-purpose certificate and write it to non-volatile memory.

Note: Imported general-purpose certificate should be signed by the same CA that the trustpoint is authenticated, or else, it fails to import.

Example :

```
n1(config)# crypto key generate rsa label mycert-key modulus 2048
n1# show crypto key mycert-key
Keypair Label: mycert-key
  Algorithm:  RSA
  Modulus:    2048 bits
  Subject key: fcc893035eda7e736d0a612bad1d000612c87724
  Key ID:     E5611192FEAD3FDFA877A0BAC5F336480A8C2D97
n1(config)# crypto pki trustpoint mycert
n1(ca-trustpoint)# subject-name C=IR, O=My Org, CN=my.org
n1(ca-trustpoint)# subject-alt-name other.my.org
n1(ca-trustpoint)# subject-alt-name other2.my.com
n1(ca-trustpoint)# rsakeypair mycert-key
n1(config)# crypto pki authenticate mycert
Enter the base 64 encoded CA certificate
End with a blank line or the word "quit" on a line by itself

-----BEGIN CERTIFICATE-----
MIIDODCCAiCgAwIBAgIIM7DVFqEvgxgwDQYJKoZIhvcNAQELBQAwOjELMAkGA1UE
BhMCQ0gxZzARBgNVBAoTCnN0cm9uZ1N3YW4xZjAUBgNVBAMTDXN0cm9uZ1N3YW4g
Q0EwHhcNMjAxMTEzMjE0TEZwWcNMjMxMTEzMjE0TEZwWjA6MQswCQYDVQQGEwJD
SDEtMBEGA1UEChMKc3Ryb25uU3djbWJEWMBQGA1UEAxMNc3Ryb25uU3dhibiBDQTC
ASiIwDQYJKoZIhvcNAQEBBQADggEPADCCAQoCggEBANjhd9ZFscs403TcnXWfy/cr
wXnVCxev6g5XecHG0A+ja0S6MyJowjJU/CY5S8/LWKIB1KfHdswDT0LaPodnKw8e
RVGwAFQSYb80ymUeHBYzxxfhqcCjYu0qWdb2Tf9yVadkt//qW5n2F78j3prFlZ4o
pbG1sLhACY+729iJxB7dg5DKXxECBzSiMo2dScZpQKuAdiev4g7TmEH0u3MUa9zU
CzIhoqjzEJ1wF4YC7Y6BZxQU4c04RZGctaOmKRUT0NfVgBqseJHsJVZSCDFud/lS
48tDmQ08GULFNFlFAeGwCUnLle2sorsB+zjfQrJQJBtE/RuoKZ3ODK+ZwGH8wHEC
AwEAAANCMEEAwDwYDVR0TAQH/BAUwAwEB/zAOBgNVHQ8BAf8EBAMCAQYwHQYDVR00
BBYEFNET3aeJu4082kUYI8TpeBK4w61sMA0GCSqGSIb3DQEBCwUAA4IBAQC2ciJ
D197+CIwL/DveAJf7Bt0cMD2lPwY4hsHUyHridX2B/t6EM00ujWPouSeBYjLbZ7s
akHwh3G9Yx4w1S+k+du5AbkQHmNyiGe04rul+tCg7FzouxFtKEcD6T707DnSEkP+
iA9mLeKxCK3P4vGY2H9x6McqZ1aM55xmdEbvD3QhUMLePBk4aMVky0r4yWRQgUPB
oBqRVSEvthOyXEWtPkqxY720/5IQmHDSncBP/D+wiC2wQsYQZhmDoN6d740qkcBr
HMWDCUM1b8RFVBTekIKvkqQ14BgvPve099E+P6rrNhdxRA8BwmnNyMvrd81Z1FDU/
J+XkIuPRfz33v000
-----END CERTIFICATE-----
Updating certificates in /etc/ssl/certs...
1 added, 0 removed; done.
Running hooks in /etc/ca-certificates/update.d...
done.
```

(continues on next page)

(continued from previous page)

```
n1(ca-trustpoint)# enrollment terminal pem
n1(config)# crypto pki enroll mycert
-----BEGIN CERTIFICATE REQUEST-----
MIICrTCCAZUCAwLzELMAkGA1UEBhMCSVIxZDZANBgNVBAoTBk15IE9yZzEPMA0G
A1UEAxMGbXkub3JnMIIIBIjANBgkqhkiG9w0BAQEFAAOCAQ8AMIIBCgKCAQEAtvWm
Xi+CtKrJndPw09hPOnT08DSDIJqi3GdcNDVRcdKb/FB+/C++Vyb2vOLNICxCmRJH
RnoZKPnWqRHwyHeVCNr+Da+bFYHXd4LyaZtCzEoUrmULMyBWGmbUfUlfFpOCa4yq
28qV1BjYXEm93X56XIaT/WpqXELihJC2nnBPxhkLHA80fLmQPZdOzytrjeJt1Rvn
I/PpI+OzEN9/pUvGLv29wzfzUN2T9WGdIY/SJuyafQ2972juRA20TTSsMSOxM4fuj
Mk116RixYvHCd454gehPKOqMUHbXKZ7tQXPADFtiQIqNqBMz4AlT40Wn3GsODV8Y
AtJ9U0vhmMW1iTHC2wIDAQABoDkwNwYJKoZIHvcNAQkOMSowKDAmBgNVHREEHzAd
ggxvdGhlci5teS5vcmeCDW90aGVyMi5teS5jb20wDQYJKoZIhvcNAQELBQADggEB
AKwvB+bPTMpU2t3HE6CA0mLA9ufc9EqWx2YCTyddTJ8Qp7xhdXywbB64R5Um/mqy
x7lMEyS69pZzTMivm28piIEplSdjKSiHmRpVZsXGWvhpz1alqA6h5IaWlm9s3Bga
YKbmaC0uEsuhXnAxFBPtbwWSaGN0u5kKtkwZXMxKv4gVktbrdZfZ2uJR2CiZu1q
yb7u47MeZF4xfcuvFZCuUjllmpFXMLXjYuNywJP6U/i1DpSG07mDYcnEfs9Ku/o/
gdNBahSspRtBV0x4QtN4bGZ0MDEn5cEBuWcN4dnNbE30dn70NKaNe1DhdKQ/1UxQ
qyIP+5tc2i8GoJsL9wyWJIo=
-----END CERTIFICATE REQUEST-----
```

```
n1(config)# crypto pki import mycert certificate
Enter the base 64 encoded CA certificate
End with a blank line or the word "quit" on a line by itself
```

```
-----BEGIN CERTIFICATE-----
MIIDMTCAhmgAwIBAgIIIVmyRIVfPsKowDQYJKoZIhvcNAQELBQAwNTELMakGA1UE
BhMCSVIxZDZANBgNVBAoTC1RlbnAgQ29ycC4xETAPBgNVBAMTCHRlbXAuY29tMB4X
DTIxMDEyMDEyNDgzN1oXDTI0MDEyMDEyNDgzN1owLzELMAkGA1UEBhMCSVIxZDZAN
BgNVBAoTBk15IE9yZzEPMA0GA1UEAxMGbXkub3JnMIIIBIjANBgkqhkiG9w0BAQEF
AAOCAQ8AMIIBCgKCAQEAtvWmXi+CtKrJndPw09hPOnT08DSDIJqi3GdcNDVRcdKb
/FB+/C++Vyb2vOLNICxCmRJHRnoZKPnWqRHwyHeVCNr+Da+bFYHXd4LyaZtCzEoU
rmULMyBWGmbUfUlfFpOCa4yq28qV1BjYXEm93X56XIaT/WpqXELihJC2nnBPxhkL
HA80fLmQPZdOzytrjeJt1RvnI/PpI+OzEN9/pUvGLv29wzfzUN2T9WGdIY/SJuyaf
Q2972juRA20TTSsMSOxM4fujMk116RixYvHCd454gehPKOqMUHbXKZ7tQXPADFti
QIqNqBMz4AlT40Wn3GsODV8YAAtJ9U0vhmMW1iTHC2wIDAQABo0swSTAFBgNVHSM
E GDAWgBTsKy4vy8mjSR8A29CNVCRpHgr9ZDAmBgNVHREEHzAdggxvdGhlci5teS5v
cmeCDW90aGVyMi5teS5jb20wDQYJKoZIhvcNAQELBQADggEBAGbt3R0FyA48FWUh
eoud1zh6ujrg0PgfJ0hAMnWaln8nXdhMjJJvOI/MZtcyl7fghXr1Asr2M9I3KMxh
BbBefCci5+94g+QucP/R0v5/fzFpiV8gRYXD8o7UWYyanQG5SUYTCdpr5vXxVbEW
FXp3Yk1HBYXDe09AK9AGwRVFHTkaaPze8U5FyJpbrjDZuD/cbkN41Fn+lw49Jah0
cVqYXyY84rHjvq98081NsittSa4QUqBNo8nUXYj+yLuNiV39Zh1pWz1/kugy0yR
mvrqC3irZGXeJbSLDaAT1LdJhiu2Axc7EjwKxcNK+GiXyN/B/7JJrWLL0u6xaA9L
ezbvqQw=
```

```
-----END CERTIFICATE-----
```

```
Installed successfully
```

```
n1# show crypto pki certificate mycert
Trustpoint: n1Cert
CA:
  subject: "C=IR, O=Temp Corp., CN=temp.com"
  issuer:  "C=IR, O=Temp Corp., CN=temp.com"
```

(continues on next page)

(continued from previous page)

```

validity: not before Jan 20 15:12:34 2021, ok
          not after Jan 20 15:12:34 2024, ok (expires in 1094 days)
serial:   40:c4:fc:42:fd:37:b1:76
altNames: other.domain.com
flags:    CA CRLSign self-signed
subjKeyId: ec:2b:2e:2f:cb:c9:a3:49:1f:00:db:d0:8d:54:24:69:1e:0a:fd:64
pubkey:   RSA 2048 bits
keyid:    cf:d8:04:82:62:b9:f1:a9:84:75:56:e7:1b:5b:ac:4a:c8:ba:ae:21
subjkey:  ec:2b:2e:2f:cb:c9:a3:49:1f:00:db:d0:8d:54:24:69:1e:0a:fd:64
Fingerprint: 954E9105EEE221C7BCDF351BBA0184E950F82C75

```

General Purpose Certificate:

```

subject: "C=IR, O=My Org, CN=my.org"
issuer:  "C=IR, O=Temp Corp., CN=temp.com"
validity: not before Jan 20 15:18:36 2021, ok
          not after Jan 20 15:18:36 2024, ok (expires in 1094 days)
serial:   56:6c:91:21:57:cf:b0:aa
altNames: other.my.org, other2.my.com
flags:
authkeyId: ec:2b:2e:2f:cb:c9:a3:49:1f:00:db:d0:8d:54:24:69:1e:0a:fd:64
subjKeyId: fc:c8:93:03:5e:da:7e:73:6d:0a:61:2b:ad:1d:00:06:12:c8:77:24
pubkey:   RSA 2048 bits
keyid:    e5:61:11:92:fe:ad:3f:df:a8:77:a0:ba:c5:f3:36:48:0a:8c:2d:97
subjkey:  fc:c8:93:03:5e:da:7e:73:6d:0a:61:2b:ad:1d:00:06:12:c8:77:24
Keypair:  mycert-key
Fingerprint: D51636591648DBDE21FEEFA4C6DF4B38A96502B5

```

Self-signed Trustpoints

Self-signed certificates are available to generate in SoodarOS PKI system. Set the enrollment method of trustpoint to selfsigned, and you are good to go. A self-signed certificate can't be imported or authenticated. Enrolling this ``trustpoint`` generates the certificate.

Example :

```

n1(config)# crypto key generate rsa label self-signed-key
n1(config)# crypto pki trustpoint self-signed-tp
n1(ca-trustpoint)# enrollment selfsigned
n1(ca-trustpoint)# rsakeypair self-signed-key
n1(ca-trustpoint)# subject-name C=IR, O=Independent Ltd., CN=self.indie.com
n1(config)# crypto pki enroll self-signed-tp
n1# show crypto pki certificate self-signed-tp
Trustpoint: self-signed-tp
CA:
  subject: "C=IR, O=Independent Ltd., CN=self.indie.com"
  issuer:  "C=IR, O=Independent Ltd., CN=self.indie.com"
  validity: not before Jan 20 15:45:09 2021, ok
            not after Jan 20 15:45:09 2024, ok (expires in 1094 days)
  serial:   15:9a:3b:16:34:f9:79:49
  flags:    CA CRLSign self-signed
  subjKeyId: 33:74:e2:a1:5e:d1:49:bf:c7:bf:f7:23:4c:c6:53:a0:07:56:24:09

```

(continues on next page)

(continued from previous page)

```
pubkey: RSA 2048 bits
keyid: bd:12:cd:f2:1a:b7:d2:27:82:26:db:51:01:d2:60:0d:48:24:bf:3d
subjkey: 33:74:e2:a1:5e:d1:49:bf:c7:bf:f7:23:4c:c6:53:a0:07:56:24:09
Fingerprint: 89177619D312F1AEFAC0A5C8B9DE5E0196B56F16
```

Removing a private key

Admin can remove unused private keys. Removing is done securely by shredding and zeroing the key file.

crypto key zeroize RSAKEY

Shred a key pair.

Note: Removing a key makes the ``trustpoint``s using them invalid. It's the admin's duty to take care of this situation and remove unused keys or remove all certificates depending on that key.

Removing a trustpoint

Admin can remove a trustpoint. This action removes the CA and general-purpose certificate(if available) and updates the system CA database.

no crypto pki trustpoint TPNAME

Viewing installed Certificates and keys

After installing a certificate, one can see that certificate with a show command.

show crypto pki certificate [CA]

Show available certificates on device. If CA name is not provided, all certificates on the system are shown.

Example :

```
n1# show crypto pki certificate mycert
Trustpoint: n1Cert
CA:
subject: "C=IR, O=Temp Corp., CN=temp.com"
issuer: "C=IR, O=Temp Corp., CN=temp.com"
validity: not before Jan 20 15:12:34 2021, ok
          not after Jan 20 15:12:34 2024, ok (expires in 1094 days)
serial: 40:c4:fc:42:fd:37:b1:76
altNames: other.domain.com
flags: CA CRLSign self-signed
subjkeyId: ec:2b:2e:2f:cb:c9:a3:49:1f:00:db:d0:8d:54:24:69:1e:0a:fd:64
pubkey: RSA 2048 bits
keyid: cf:d8:04:82:62:b9:f1:a9:84:75:56:e7:1b:5b:ac:4a:c8:ba:ae:21
subjkey: ec:2b:2e:2f:cb:c9:a3:49:1f:00:db:d0:8d:54:24:69:1e:0a:fd:64
Fingerprint: 954E9105EEE221C7BCDF351BBA0184E950F82C75

General Purpose Certificate:
subject: "C=IR, O=My Org, CN=my.org"
```

(continues on next page)

(continued from previous page)

```

issuer: "C=IR, O=Temp Corp., CN=temp.com"
validity: not before Jan 20 15:18:36 2021, ok
          not after Jan 20 15:18:36 2024, ok (expires in 1094 days)
serial: 56:6c:91:21:57:cf:b0:aa
altNames: other.my.org, other2.my.com
flags:
authkeyId: ec:2b:2e:2f:cb:c9:a3:49:1f:00:db:d0:8d:54:24:69:1e:0a:fd:64
subjkeyId: fc:c8:93:03:5e:da:7e:73:6d:0a:61:2b:ad:1d:00:06:12:c8:77:24
pubkey: RSA 2048 bits
keyid: e5:61:11:92:fe:ad:3f:df:a8:77:a0:ba:c5:f3:36:48:0a:8c:2d:97
subjkey: fc:c8:93:03:5e:da:7e:73:6d:0a:61:2b:ad:1d:00:06:12:c8:77:24
Keypair: mycert-key
Fingerprint: D51636591648DBDE21FEEFA4C6DF4B38A96502B5

```

show crypto key [[KEY] [json]] [ssh]

Show key information. If a key name is not provided, all keys on the system are shown. Output can be JSON(except SSH)

Example :

```

n1# show crypto key mycert-key-rsa
Keypair Label: mycert-key-rsa
  Algorithm: RSA
  Modulus: 2048 bits
  Subject key: FCC893035EDA7E736D0A612BAD1D000612C87724
  Key ID: E5611192FEAD3FDFA877A0BAC5F336480A8C2D97
n1# show crypto key x25519-key
Keypair Label: x25519-key
  Algorithm: X25519
  Public key: DEE5089576AD02780EFEF6908034E6BD471C2C6DF7FE68FC77F12C5DFCDB9D59
  Public key base64: 3uUilXatAng0/vaQgDTmvUccLG33/mj8d/EsXfzbnVk=
n1# show crypto key raw-key
Keypair Label: raw-key
  Algorithm: Raw
  Length: 256 bits
n1# show crypto key json
{
  "keys":[
    {
      "label":"mycert-key-rsa",
      "algorithm":"RSA",
      "modulus":2048,
      "subject_key":"FCC893035EDA7E736D0A612BAD1D000612C87724",
      "key_id":"E5611192FEAD3FDFA877A0BAC5F336480A8C2D97"
    },
    {
      "label":"x25519-key",
      "algorithm":"X25519",
      "public_key":"DEE5089576AD02780EFEF6908034E6BD471C2C6DF7FE68FC77F12C5DFCDB9D59
↵"
    },
    {

```

(continues on next page)

(continued from previous page)

```
"label": "raw-key",  
"algorithm": "RAW",  
"length": 256  
}  
]  
}
```

1.10.3 Wireguard

WireGuard is a communication protocol and free and open-source software that implements encrypted virtual private networks, and was designed with ease of use, high-speed performance, and low attack surface.

SoodarOS supports Wireguard both as a wireguard server and as a wireguard client.

Interface

To start a wireguard tunnel, first, a wireguard interface should be created.

interface wireguard (0-1023)

Create a wireguard interface instance.

wireguard source A.B.C.D

Set wireguard tunnel source. Use 0.0.0.0 to automatically select source IP.

wireguard private-key X25519KEY

Use x25519 key with X25519KEY label as wireguard private key.

wireguard port (1000-65535)

Wireguard's UDP listens port. If not provided, use 51820 as the port.

Server

Each wireguard server instance can have multiple peers. Each peer consists of its public-key and allowed IPs(IP ranges that should be routed via tunnel).

wireguard peer PEER

Create a wireguard peer named PEER

public-key LINE [base64]

Peer's x25519 public key in hexadecimal or base64

allowed-ip A.B.C.D/M

Add A.B.C.D/M to peer's allowed IP ranges.

Note: multiple ranges can be added by issuing allowed-ip command multiple times.

no allowed-ip [A.B.C.D/M]

Remove A.B.C.D/M from peer's allowed IP ranges. If run without any input, remove all allowed IPs.

vrf VRF

Lookup peer destination in VRF's FIB.

description LINE ...

Add a description about peer.

Client

A wireguard client instance has only one peer, and its peer is the server. This peer should have public-key, allowed IPs(IP ranges that should be routed via tunnel), the server address and its listening port.

endpoint A.B.C.D port (1000-65535)

Set/remove peer's endpoint address and port.

Modes

Wireguard acts as a static source for routing tables. Each `allowed-IP` entry adds a static route to FIB, and there is no means of adding routes dynamically(for example, by using an OSPF process). A new mode of operation is added to add dynamic routing support to wireguard. This mode is called `routing mode` and supports running dynamic routing protocols. In this mode, `allowed-IPs` are no longer used, and all routes are dynamically learned from neighbors.

Note: Each peer is considered a neighbor, and to work correctly, it is needed to add peer's wireguard interface IP as an `allowed-IP`

Note: Wireguard interface in routing mode acts like a node in a point to multipoint network.

wireguard mode <normal|routing>

Set wireguard interface operation mode.

Debug

Admin can see wireguard status by using `show wireguard` command.

show wireguard [(1-1024) PEER] [json]

Show wireguard status. If the instance is not indicated, show all wireguards and their peers' status. Users can specify which instance and which peer of that instance is in their interest. By adding `json` option to the command, output transforms to JSON.

```
server# show wireguard
Wireguard 10
  Mode: Normal
  Source: 200.1.3.1
  Key: key1
  Public key: 7D61BA2FA556FD7B4AA0D54114575DF6FBC5AB9B96337C4A438E85CDFC77ED7C
  Public-key Base64: fWG6L6VW/XtKoNVBFFdd9vvFq5uWM3xKQ46Fzfx37Xw=
  Port: 5100

Peer n3:
  Public key: 950A6657CDE2193C786FF4771A46318AB86B9CB60BA071E344E8C094EBEEF662
  Public-key Base64: lQpmV83iGTx4b/R3GkYxirhrnLYLoHHjROjA10vu9mI=
  Current Endpoint: 200.1.3.3
  Current Source: 200.1.3.1
```

(continues on next page)

(continued from previous page)

```
Persistent keepalive: 25
Description: Tehran
Allowed IPs:
- 3.1.1.0/24
Wireguard 20
Source: 200.1.2.1
Key: key2
Public key: DF6DEA63D7F5E11F9115C1CAA08D78FAFE6BA003739952B8094BC7AE744D235A
Public-key Base64: 323qY9f14R+RFcHKoI14+v5roANzmVK4CUvHrnRNI1o=
Port: 5100

Peer n2:
Public key: 1D819A6950BBC16F04D86FBF8AA660434AEE12D77888E2F534641E9E7C51EEE2
Public-key Base64: HYGaaVC7wW8E2G+/iqZgQ0ruEtd4iOL1NGQennxR7uI=
Persistent keepalive: 25
Allowed IPs:
- 2.1.1.0/24
server# show wireguard 20
Wireguard 20
Mode: Normal
Source: 200.1.2.1
Key: key2
Public key: DF6DEA63D7F5E11F9115C1CAA08D78FAFE6BA003739952B8094BC7AE744D235A
Public-key Base64: 323qY9f14R+RFcHKoI14+v5roANzmVK4CUvHrnRNI1o=
Port: 5100

Peer n2:
Public key: 1D819A6950BBC16F04D86FBF8AA660434AEE12D77888E2F534641E9E7C51EEE2
Public-key Base64: HYGaaVC7wW8E2G+/iqZgQ0ruEtd4iOL1NGQennxR7uI=
Persistent keepalive: 25
Allowed IPs:
- 2.1.1.0/24
n3# show wireguard 10 server
Wireguard 10
Peer server:
Public key: 7D61BA2FA556FD7B4AA0D54114575DF6FBC5AB9B96337C4A438E85CDFC77ED7C
Public-key Base64: fWG6L6VW/XtKoNVBFFdd9vvFq5uWM3xKQ46Fzfx37Xw=
Endpoint: 200.1.3.1
Current Endpoint: 200.1.2.2
Current Source: 200.1.2.1
Persistent keepalive: 25
Port: 5100
Allowed IPs:
- 1.1.1.0/24
server# show wireguard json
{
  "wireguards": [
    {
      "instance": 10,
      "mode": "normal",
      "source": "200.1.3.1",
      "key": "temp",
```

(continues on next page)

(continued from previous page)

```

"public_key": "7D61BA2FA556FD7B4AA0D54114575DF6FBC5AB9B96337C4A438E85CDFC77ED7C",
"port": 5100,
"peers": [
  {
    "name": "n3",
    "public_key": "950A6657CDE2193C786FF4771A46318AB86B9CB60BA071E344E8C094EBEEF662
↪",
    "endpoint": "0.0.0.0",
    "current_endpoint": "200.1.3.3",
    "current_source": "200.1.3.1",
    "keepalive": 25,
    "port": 0,
    "vrf": "default",
    "description": "Tehran",
    "allowed_ips": [
      "3.1.1.0/24"
    ]
  }
],
{
  "instance": 20,
  "mode": "normal",
  "source": "200.1.2.1",
  "key": "temp",
  "public_key": "DF6DEA63D7F5E11F9115C1CAA08D78FAFE6BA003739952B8094BC7AE744D235A",
  "port": 5100,
  "peers": [
    {
      "name": "n2",
      "public_key": "1D819A6950BBC16F04D86FBF8AA660434AEE12D77888E2F534641E9E7C51EEE2
↪",
      "endpoint": "0.0.0.0",
      "keepalive": 25,
      "port": 0,
      "vrf": "default",
      "description": "",
      "allowed_ips": [
        "2.1.1.0/24"
      ]
    }
  ]
}
]
}
}

```

```
show wireguard [(1-1024) PEER] stats [json]
```

```

n1# show wireguard stats
Wireguard 10
Peer n2:
  Packets received: 0 packets, 0 bytes

```

(continues on next page)

(continued from previous page)

```

Packets transmitted: 36 packets, 5328 bytes

Peer n1:
  Packets received: 0 packets, 0 bytes
  Packets transmitted: 0 packets, 0 bytes

Peer n3:
  Packets received: 27 packets, 1676 bytes
  Packets transmitted: 25 packets, 1568 bytes
n1# show wireguard 10 n3 stats
Wireguard 10
Peer n3:
  Packets received: 36 packets, 2196 bytes
  Packets transmitted: 31 packets, 1880 bytes
n1# show wireguard 10 n3 stats json
{
  "wireguards":[
    {
      "instance":10,
      "peers":[
        {
          "name":"n3",
          "rx_packets":36,
          "rx_bytes":2196,
          "tx_packets":31,
          "tx_bytes":1880
        }
      ]
    }
  ]
}

```

Example

In the following scenario, we want to establish a wireguard server with 3 clients.

First, we create an x25519 private key in the server:

```

server(config)# crypto key generate x25519 label server-key
server# show crypto key server-key
Keypair Label: server-key
  Algorithm: X25519
  Public key: D889D845BEED407332B486A1C0A36D310781DD6BE2BB48855636125F16FC8142

```


Then we set up wireguard interface:

```

server(config)# interface wireguard 10
server(config-if)# wireguard source 200.1.1.1
server(config-if)# wireguard private-key server-key
server(config-if)# wireguard port 51820

```

Now we need to set up peers:

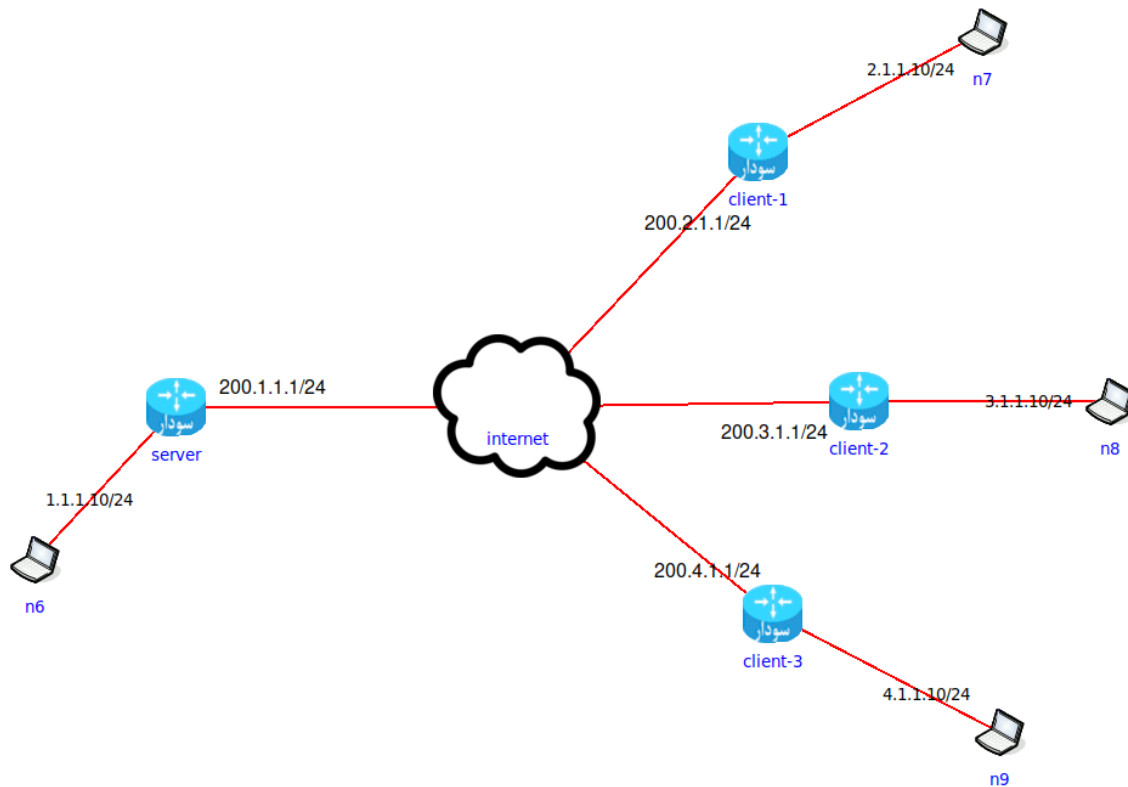

```

client-1(config)# crypto key generate x25519 label client1-key
client-1# show crypto key client1-key
Keypair Label: client1-key
  Algorithm:  X25519
  Public key:  85DC0E1B1E8FA87B544863BD44FB7809B85853E4B1FF16E0EFAC70990BA17467
client-1(config)# interface wireguard 1
client-1(config-if)# wireguard private-key client1-key
client-1(config-if)# wireguard source 200.2.1.1
client-1(config-if)# wireguard port 51820
client-1(config-if)# wireguard peer server
client-1(config-wg-peer)# allowed-ip 1.1.1.0/24
client-1(config-wg-peer)# public-key
↳D889D845BEED407332B486A1C0A36D310781DD6BE2BB48855636125F16FC8142
client-1(config-wg-peer)# endpoint 200.1.1.1 port 51820

```

We do the same thing for the remaining two clients.

Now that peers are set up, we add peer information to the server:

```

server(config)# interface wireguard 10
server(config-if)# wireguard peer client-1
server(config-wg-peer)# allowed-ip 0.0.0.0/0
server(config-wg-peer)# public-key
↳85DC0E1B1E8FA87B544863BD44FB7809B85853E4B1FF16E0EFAC70990BA17467
server(config-if)# wireguard peer client-2
server(config-wg-peer)# allowed-ip 0.0.0.0/0

```

(continues on next page)


(continued from previous page)

```
server(config-wg-peer)# public-key
↳ 5A0882D0D6B757692FDCDFC7BB2413042A333F96EECEE34B69D0E2D7107C7672
server(config-if)# wireguard peer client-3
server(config-wg-peer)# allowed-ip 0.0.0.0/0
server(config-wg-peer)# public-key
↳ 87BC5D410DCDED2D5A9CC443053AC2888947E9724C247CE1FCBE40E12A400293
```

Now on the first packet from each client to 1.1.1.0/24, the tunnel establishes.

Example With OSPF

In the following scenario, we want to establish a wireguard server with 3 clients.

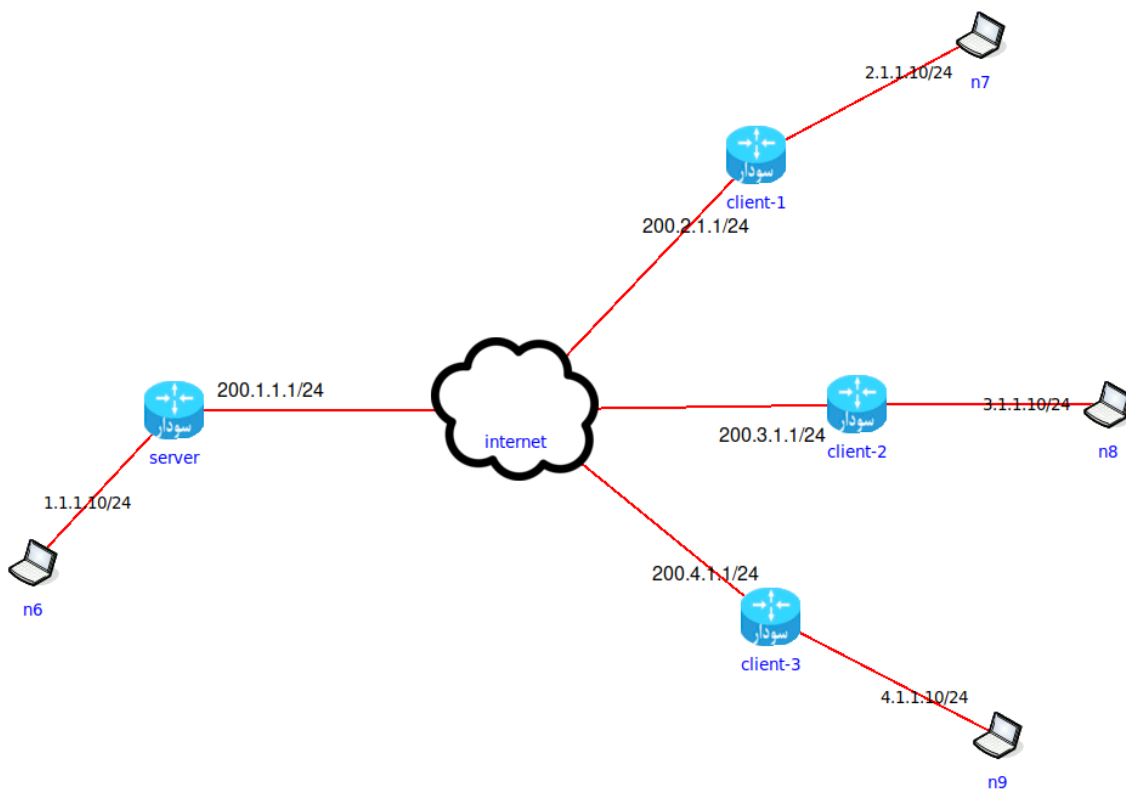

First, we create an x25519 private key in the server:

```
server(config)# crypto key generate x25519 label server-key
server# show crypto key server-key
Keypair Label: server-key
Algorithm: X25519
Public key: D889D845BEED407332B486A1C0A36D310781DD6BE2BB48855636125F16FC8142
```

Then we set up wireguard interface:

```
server(config)# interface wireguard 10
server(config-if)# wireguard source 200.1.1.1
```

(continues on next page)

(continued from previous page)

```
server(config-if)# wireguard private-key server-key
server(config-if)# wireguard port 51820
server(config-if)# ip address 10.0.0.1/32
```

Now we need to set up peers:

```
client-1(config)# crypto key generate x25519 label client1-key
client-1# show crypto key client1-key
Keypair Label: client1-key
  Algorithm:   X25519
  Public key:  85DC0E1B1E8FA87B544863BD44FB7809B85853E4B1FF16E0EFAC70990BA17467
client-1(config)# interface wireguard 1
client-1(config-if)# wireguard private-key client1-key
client-1(config-if)# wireguard source 200.2.1.1
client-1(config-if)# wireguard port 51820
client-1(config-if)# wireguard peer server
client-1(config-if)# wireguard mode routing
client-1(config-if)# ip address 10.0.0.2/32
client-1(config-wg-peer)# allowed-ip 10.0.0.1/32
client-1(config-wg-peer)# public-key_
↪D889D845BEED407332B486A1C0A36D310781DD6BE2BB48855636125F16FC8142
client-1(config-wg-peer)# endpoint 200.1.1.1 port 51820
```

We do the same thing for the remaining two clients.

Now that peers are set up, we add peer information to the server:

```
server(config)# interface wireguard 10
server(config-if)# wireguard peer client-1
server(config-wg-peer)# allowed-ip 10.0.0.2/32
server(config-wg-peer)# public-key_
↪85DC0E1B1E8FA87B544863BD44FB7809B85853E4B1FF16E0EFAC70990BA17467
server(config-if)# wireguard peer client-2
server(config-wg-peer)# allowed-ip 10.0.0.3/32
server(config-wg-peer)# public-key_
↪5A0882D0D6B757692FDCDFC7BB2413042A333F96EECEE34B69D0E2D7107C7672
server(config-if)# wireguard peer client-3
server(config-wg-peer)# allowed-ip 10.0.0.4/32
server(config-wg-peer)# public-key_
↪87BC5D410DCDED2D5A9CC443053AC2888947E9724C247CE1FCBE40E12A400293
```

To start the OSPF process run following commands on all routers

```
server(config)# router ospf
server(config-router)# redistribute connected
server(config-router)# interface wireguard10
server(config-if)# ip ospf network point-to-multipoint
server(config-if)# ip ospf area 0
```

1.10.4 IKEv2

IKEv2(Internet Key Exchange version 2) is a protocol that establishes and handles SAs(Security Association). Usually, these SAs are used with IPSec(in fact, IKEv2 is based on IPSec).

Like IPSec, IKEv2 uses a modular CLI for configuration.

crypto ikev2 dpd (1-3600)

Set IKEv2 dead peer detection parameters. The first parameter indicates how often a liveness check is performed.

IKEv2 proposal

A proposal consists of a suite of encryption/ HMAC algorithms for IKEv2 SA creation. Along with the IPSec transform set, they define the IKEv2/IPSec algorithm suite, and it's the first thing that is negotiated in IKEv2.

crypto ikev2 proposal IKEPOSAL

Create a new IKEV2 proposal named IKEPOSAL

encryption ALGORITHM

Use ALGORITHM as an encryption algorithm for IKEv2 SA creation and negotiation.

integrity ALGORITHM

Use ALGORITHM as HMAC algorithm for IKEv2 SA creation and negotiation.

group GROUP

Use GROUP as Diffie-Hellman group.

Example :

```
soodar(config)# crypto ikev2 proposal sample-proposal
soodar(config-ikev2-proposal)# encryption aes-192
soodar(config-ikev2-proposal)# integrity sha1-96
soodar(config-ikev2-proposal)# group 28
```

IKEv2 keyring

As the name suggests, this struct holds the identity of peers, their address, and authentication materials.

crypto ikev2 keyring IKEKEYRING

Create a new IKEV2 keyring named IKEKEYRING

peer PEER

Create a new peer in keyring as PEER

pre-shared-key LINE

Set peer's PSK value for authentication

identity address <A.B.C.D|X:X::X:X>

Use an address as the peer's identity. This identity is used in negotiation and by the other peer to identify the other.

identity fqdn FQDN

Use an FQDN as the peer's identity. This identity is used in negotiation and by the other peer to identify the other.

identity email MAIL

Use a mail address as the peer's identity. This identity is used in negotiation and by the other peer to identify the other.

Example :

```
soodar(config)# crypto ikev2 keyring keyring-1
soodar(config-ikev2-keyring)# peer PC-1
soodar(config-ikev2-keyring-peer)# identity email home@sweet.home
soodar(config-ikev2-keyring-peer)# pre-shared-key 123@321
soodar(config-ikev2-keyring)# peer PC-2
soodar(config-ikev2-keyring-peer)# identity address 1.1.1.1
soodar(config-ikev2-keyring-peer)# pre-shared-key ITSAHARDPASSWD!!
```

IKEv2 profile

Main struct of IKEv2.

match address local A.B.C.D

Send IKEv2 packets using this address. If it's not set, the packets can use any IP address available on the router.

Note: It's a good practice to set local addresses explicitly. It can prevent problems caused by changes in routes, leading to a change in the source IP address of packets and being rejected by an IKEv2 peer.

identity local address <A.B.C.D|X:X::X:X>

Define an address as the local identity. During the IKEv2 session, the router introduces himself by this identity to its peer.

identity local fqdn FQDN

Define an FQDN as the local identity. During the IKEv2 session, the router introduces himself by this identity to its peer.

identity local email MAIL

Define a mail address as the local identity. During the IKEv2 session, the router introduces himself by this identity to its peer.

authentication local rsa-sig

Use RSA Digital Signature as authentication method during init.

Note: The chosen certificate to use is the one that has the same SAN as local identity

authentication local pre-share

Use Shared Key Message Integrity Code as authentication method during init.

authentication remote rsa-sig

Expect RSA Digital Signature from the peer as authentication method during init.

authentication remote pre-share

Expect Shared Key Message Integrity Code from the peer as authentication method during init.

match identity remote address <A.B.C.D|X:X::X:X>

The expected remote identity. Other information about this peer is looked up in keyring.

match identity remote fqdn FQDN

The expected remote identity. Other information about this peer is looked up in keyring.

match identity remote email EMAIL

The expected remote identity. Other information about this peer is looked up in keyring.

match certificate

Match against DN fields and values as peer identity. using wildcards are allowed

Note: The peer should use RSA Digital Signature as authentication method, and it should use its DN as identity.

Example:

```
soodar(config-ikev2-profile)# match certificate C=IR, CN=*.temp.ir
```

Match against all peers that have DN as their identity and this certificate is issued from Iran and is a sub-domain of temp.ir

keyring local IKEKEYRING

Use keyring IKEKEYRING for peer lookup.

proposal IKEPOSAL

Use IKEPOSAL for IKEv2 SA.

lifetime <120-86400>

Set IKEv2 profile lifetime. Cause a rekey action to take place when the life timer exceeds.

Example :

```
soodar(config)# crypto ikev2 profile VPN
soodar(config-ikev2-profile)# identity local 192.168.1.1
soodar(config-ikev2-profile)# match identity remote home@sweet.home
soodar(config-ikev2-profile)# keyring local keyring-1
soodar(config-ikev2-profile)# proposal sample-proposal
```

1.10.5 IPsec

Transform set

Define authentication and encryption algorithms

crypto ipsec transform-set IPSECTS ah hmac HMAC_ALG

Use AH mode

crypto ipsec transform-set IPSECTS esp {hmac HMAC_ALG |cipher CIPHER_ALG}

Use ESP mode. HMAC algorithm is not needed/ignored when using GCM cipher algorithms.

mode transport

In transport mode, the Original IP header is not changed. Only AH or ESP header is added.

mode tunnel

A new IP header is added in tunnel mode in front of the original IP header.

Example :

```
soodar(config)# crypto ipsec transform-set ipsec-tunnel-TS esp hmac sha-96 cipher_
↪ aes-192
soodar(cfg-crypto-trans)# mode transport
```

Profile

Store encryption/decryption keys.

There are two ways of establishing SAs for IPSec: using static pre-defined keys and IKEv2 profiles. One should choose just one method, and using 2 methods yields inconsistency.

crypto ipsec profile IPSECPROFILE

Create a new profile IPSECPROFILE.

set transform-set IPSECTS

Note: An IPSec profile without Transform set is useless.

set ikev2 profile IKEPROFILE

Set profile's IKEv2 profile to establish an IKEv2 session and SAs.

Note: An IKEv2 profile should be exclusive to one profile. And a profile using an IKEv2 profile should be bound to a tunnel and can't be used on two tunnels. So for each tunnel, we need an IKEv2 profile and an IPSec profile.

set security-association lifetime second (120-28800)

When using IKEv2, set SA rekeying criterion as time.

Note: IPSec SAs are installed when the IPSec profile protects a tunnel.

Example: Setup an IPSec profile using IKEv2 and PSK

```
soodar1(config)# crypto ikev2 proposal PROPOSAL
soodar1(config-ikev2-proposal)# integrity sha-96
soodar1(config-ikev2-proposal)# encryption des
soodar1(config-ikev2-proposal)# group 28
soodar1(config-ikev2-proposal)# crypto ikev2 keyring KEY-1
soodar1(config-ikev2-keyring)# peer PC-1
soodar1(config-ikev2-keyring-peer)# address 200.1.2.1
soodar1(config-ikev2-keyring-peer)# idnetity email pc1@local.net
soodar1(config-ikev2-keyring-peer)# pre-shared-key PSKPASS
soodar1(config-ikev2-keyring-peer)# crypto ikev2 profile profile-ike
soodar1(config-ikev2-profile)# identity local address 9.9.9.9
soodar1(config-ikev2-profile)# match identity remote email pc1@local.net
soodar1(config-ikev2-profile)# keyring local KEY-1
soodar1(config-ikev2-profile)# proposal PROPOSAL
soodar1(config)# crypto ipsec profile ipsec-transport-profile
soodar1(ipsec-profile)# set transform-set ipsec-tunnel-TS
soodar1(ipsec-profile)# set ikev2 profile profile-ike
```

and in the other router:

```
soodar2(config)# crypto ikev2 proposal PROPOSAL
soodar2(config-ikev2-proposal)# integrity sha-96
soodar2(config-ikev2-proposal)# encryption des
soodar2(config-ikev2-proposal)# group 28
soodar2(config-ikev2-proposal)# crypto ikev2 keyring KEY-1
soodar2(config-ikev2-keyring)# peer PC-2
soodar2(config-ikev2-keyring-peer)# idnetity address 9.9.9.9
soodar2(config-ikev2-keyring-peer)# pre-shared-key PSKPASS
soodar2(config-ikev2-keyring-peer)# crypto ikev2 profile profile-ike
soodar2(config-ikev2-profile)# identity local email pc1@local.net
soodar2(config-ikev2-profile)# match identity remote address 9.9.9.9
soodar2(config-ikev2-profile)# keyring local KEY-1
soodar2(config-ikev2-profile)# proposal PROPOSAL
soodar2(config)# crypto ipsec profile ipsec-transport-profile
soodar2(ipsec-profile)# set transform-set ipsec-tunnel-TS
soodar2(ipsec-profile)# set ikev2 profile profile-ike
```

Example: Setup an IPSec profile using IKEv2 and RSA-Sig

We have 2 routers, soodar1 and soodar2. We have a valid CA and a signed certificate for authentication on each of them. soodar1's certificate has n1.local.net as SAN, `` and `` soodar2's certificate has n2.local.net as SAN:

```
soodar1(config)# crypto ikev2 proposal PROPOSAL
soodar1(config-ikev2-proposal)# integrity sha-384
soodar1(config-ikev2-proposal)# encryption aes
soodar1(config-ikev2-proposal)# group 28
soodar1(config)# crypto ikev2 profile profile-ike
soodar1(config-ikev2-profile)# identity local fqdn n1.local.net
soodar1(config-ikev2-profile)# lifetime 2400
soodar1(config-ikev2-profile)# match identity remote fqdn n2.local.net
soodar1(config-ikev2-profile)# authentication local rsa-sig
soodar1(config-ikev2-profile)# authentication remote rsa-sig
soodar1(config-ikev2-profile)# proposal PROPOSAL
soodar1(config)# crypto ipsec profile ipsec-transport-profile
soodar1(ipsec-profile)# set transform-set ipsec-tunnel-TS
soodar1(ipsec-profile)# set ikev2 profile profile-ike
```

and in the other router:

```
soodar2(config)# crypto ikev2 proposal PROPOSAL
soodar2(config-ikev2-proposal)# integrity sha-384
soodar2(config-ikev2-proposal)# encryption aes
soodar2(config-ikev2-proposal)# group 28
soodar2(config)# crypto ikev2 profile profile-ike
soodar2(config-ikev2-profile)# identity local fqdn n2.local.net
soodar2(config-ikev2-profile)# lifetime 2400
soodar2(config-ikev2-profile)# match identity remote fqdn n1.local.net
soodar2(config-ikev2-profile)# authentication local rsa-sig
soodar2(config-ikev2-profile)# authentication remote rsa-sig
soodar2(config-ikev2-profile)# proposal PROPOSAL
```

(continues on next page)

(continued from previous page)

```
soodar2(config)# crypto ipsec profile ipsec-transport-profile
soodar2(ipsec-profile)# set transform-set ipsec-tunnel-TS
soodar2(ipsec-profile)# set ikev2 profile profile-ike
```

Troubleshooting

To track ipsec/ikev2 profiles state and their initiation state, users can view logs(for initiation state/errors) and SA details.

Logging

Debugging logs can be set in case of need.

debug ipsec event

log data plane installation processes and results

debug ipsec vici json

log all incoming VICI messages as json

debug ipsec vici detail

log all incoming VICI messages as json and raw

To view IPSec detailed logs, use *show log ipsec* command to view StrongSwan logs.

Show commands

To view current state of ipsec SAs or IKEv2 SAs the following commands are provided in the router:

show crypto ikev2 sa [detailed] [json]

Shows installed IKEv2 SAs details

```
soodar# show crypto ikev2 sa
```

Profile ike-n1-n2

```
Status:      ESTABLISHED
Local:       200.1.2.1
Remote:     200.1.2.2/500
Encr:       AES_CBC-128
Hash:       HMAC_SHA2_384_192
DH Grp:     ECP_256_BP
Life/Active Time: 240/190 sec
```

```
soodar# show crypto ikev2 sa detailed
```

Profile ike-n1-n2

```
Status:      ESTABLISHED
Local:       200.1.2.1
Remote:     200.1.2.2/500
Encr:       AES_CBC-128
Hash:       HMAC_SHA2_384_192
DH Grp:     ECP_256_BP
```

(continues on next page)

(continued from previous page)

```

Life/Active Time: 240/195 sec
Local ID:         n1.local.net
Remote ID:        n2.local.net
Local SPI:        8b545f20ca649813
Remote SPI:       8b545f20ca649813
Configured DPD:  10 sec
Rekey in:        33 sec

```

```

soodar# show crypto ikev2 sa json
[
  {
    "name": "ike-n1-n2",
    "id": "3",
    "state": "ESTABLISHED",
    "dpd": 10,
    "lifetime": 240,
    "local-host": "200.1.2.1",
    "local-port": "500",
    "local-id": "n1.local.net",
    "remote-host": "200.1.2.2",
    "remote-port": "500",
    "remote-id": "n2.local.net",
    "initiator": false,
    "initiator-spi": "39afd77a4c51edc0",
    "responder-spi": "39afd77a4c51edc0",
    "established": "218",
    "rekey-time": "21",
    "encr-alg": "AES_CBC-128",
    "integ-alg": "HMAC_SHA2_384_192",
    "prf-alg": "PRF_HMAC_SHA2_384",
    "dh-group": "ECP_256_BP",
    "child-sas": [
      {
        "name": "ipsec-n1-n2",
        "id": "13",
        "state": "INSTALLED",
        "mode": "TUNNEL",
        "protocol": "ESP",
        "spi-in": "ccb6c76d",
        "spi-out": "c6ccd9e1",
        "encr-alg": "AES_CBC-128",
        "integ-alg": "HMAC_SHA2_256_128",
        "bytes-in": "0",
        "packets-in": "0",
        "bytes-out": "0",
        "packets-out": "0",
        "rekey-time": "32",
        "life-time": "45",
        "install-time": "21"
      }
    ]
  }
]

```

(continues on next page)

(continued from previous page)

]

show crypto ipsec sa [detailed] [json]

Shows installed IPSec SAs details

soodar# show crypto ipsec sa

Profile ipsec-n1-n2

```
Status:          INSTALLED
IKEv2 Profile:   ike-n1-n2
Mode:           TUNNEL
Protocol:       ESP
Encr:           AES_CBC-128
Hash:           HMAC_SHA2_256_128
Life/Active Time: 66/32 sec
```

soodar# show crypto ipsec sa detailed

Profile ipsec-n1-n2

```
Status:          INSTALLED
IKEv2 Profile:   ike-n1-n2
Mode:           TUNNEL
Protocol:       ESP
Encr:           AES_CBC-128
Hash:           HMAC_SHA2_256_128
Life/Active Time: 66/32 sec
Bytes Decrypted: 0
Packets Decrypted: 0
Bytes Encrypted: 0
Packets Encrypted: 0
Inbound SPI:    c322afbc
Outbound SPI:   c9211ed0
Rekey in:       25 sec
```

soodar# show crypto ipsec sa json

```
[
  {
    "name": "ike-n1-n2",
    "id": "4",
    "state": "ESTABLISHED",
    "dpd": 10,
    "lifetime": 240,
    "local-host": "200.1.2.1",
    "local-port": "500",
    "local-id": "n1.local.net",
    "remote-host": "200.1.2.2",
    "remote-port": "500",
    "remote-id": "n2.local.net",
    "initiator": false,
    "initiator-spi": "9fc4c36e3ecc04ca",
    "responder-spi": "9fc4c36e3ecc04ca",
```

(continues on next page)

(continued from previous page)

```

"established": "133",
"rekey-time": "85",
"encr-alg": "AES_CBC-128",
"integ-alg": "HMAC_SHA2_384_192",
"prf-alg": "PRF_HMAC_SHA2_384",
"dh-group": "ECP_256_BP",
"child-sas": [
  {
    "name": "ipsec-n1-n2",
    "id": "16",
    "state": "INSTALLED",
    "mode": "TUNNEL",
    "protocol": "ESP",
    "spi-in": "c93bfde8",
    "spi-out": "caaea224",
    "encr-alg": "AES_CBC-128",
    "integ-alg": "HMAC_SHA2_256_128",
    "bytes-in": "0",
    "packets-in": "0",
    "bytes-out": "0",
    "packets-out": "0",
    "rekey-time": "48",
    "life-time": "56",
    "install-time": "10"
  }
]
}
]

```

1.11 L2 Features

1.11.1 L2 Abilities

ARP Table

An ARP table is a database of received ARP messages. It contains a group of mappings between IP addresses and MAC addresses. Each ARP entry has four fields: L3 Address (IP Address), L2 Address (MAC Address), Interface, and State.

Entry States are:

- Permanent: This entry never expires and doesn't need verification.
- Noarp: Normally expires but doesn't need verification.
- Reachable: Verified and will normally expire.
- Stale: Still usable but needs verification.
- Delay: ARP request is scheduled.
- Probe: ARP request is sending.
- Incomplete: First ARP request sent.

show ip arp [IFNAME]

Show current system ARP table, possibly only for IFNAME interface.

Example:

clear ip arp [IFNAME A.B.C.D]

Clear all ARP table entries or just the given IP address from the given interface.

VLAN

VLAN allows user to segment a LAN into different broadcast domains.

Subinterfaces

To create a VLAN, first we need a subinterface

interface IFNAME.(0-4095)

Creates a subinterface on interface IFNAME.

Example :

```
soodar(config)# interface ge1.100
```

encapsulation dot1q (1-4094) [exact] [second-dot1q (1-4094)]

Encapsulate packets with one(or two, if specified) VLAN tags. Drop the input packets that do not have the same tag. If **exact** is specified, input packets must have the same number of VLAN tags as the configuration.

Note: Although we can add two tags, it's a good practice to use dot1ad encapsulation for this purpose since dot1q was designed for one tag, and adding two tags, heavily depends on router implementation and its configuration.

Note: A subinterface before this command is not ready to use and can't be added to bridges.

encapsulation dot1ad (1-4094) dot1q (1-4094)

Use Q-in-Q encapsulation mode to add two tags.

encapsulation default

All packets with VLAN IDs not matched to other subinterfaces are sent to this subinterface

Example :

```
soodar(config)# interface ge1.100
soodar(config-if)# encapsulation dot1q 100
soodar(config-if)# ip address 200.1.2.20/24
soodar(config-if)# interface ge1.200
soodar(config-if)# encapsulation default
```

Tag rewrite

An interface can be set up to add or remove(and in the future, translate) VLAN tags.

rewrite tag push <1|2> <dot1q|dot1ad> (0-4095) [(0-4095)]

Push 1 or 2 tags to ingress traffic. The no form negates all changes caused by this command.

Note: if dot1ad is used, only the first tag is dot1ad and the second tag is dot1q

rewrite tag pop <1|2>

Pop 1 or 2 tags from ingress traffic. The no form negates all changes caused by this command.

Example :

```
soodar(config)# int ge2
soodar(config-if)# rewrite tag push 1 dot1q 300
```

Bridge

A bridge is a tool for connecting two segments of LAN.

Add an interface to a bridge

bridge-group (1-65535) [split-horizon group (0-255)]

Add an interface to a bridge-group. The bridge-group is identified by a number. When a new packet arrives at the interface, if the destination MAC address is not available in the bridge-group MAC table, the packet is flooded to all interfaces in the same bridge-group(except the one from which it was received and the ones who share the same split-horizon group with interface). A split-horizon group of 0 means the interface is not in any split-horizon group and is the default value for SHG.

Example : .. code-block:: frr

```
n1(config-if)# bridge-group 600 split-horizon group 2
```

Debugging bridge

show bridge (1-65535)

Example :

```
n1(config)# do sh bridge 600
|-----|
| Domain | Interface | Split-Horizon Group | BVI |
|-----+-----+-----+-----|
| 600    | loopback4 | 0                    | *   |
|-----+-----+-----+-----|
|        | ge1       | 0                    | -   |
|-----+-----+-----+-----|
```

Monitoring traffic

To monitor incoming/outgoing traffics of the device interfaces, SoodarOS provides 2 tools:

- SPAN
- Trace

SPAN

The Switch Port ANalyzer. It mirrors the source interfaces input to the destination interface.

Configuration

Each monitor session can have multiple source interfaces. But only one destination interface.

monitor session (1-66) source interface INTERFACE [both|rx|tx]

Add interface INTERFACE to session. By default, both traffics are mirrored. But one can change the behavior by implying RX, TX, or both. The no form removes an interface from the monitor session.

Note: A session is not established unless a valid destination is available.

monitor session (1-66) destination interface INTERFACE

Add interface INTERFACE as session's destination port

Example :

```
soodar(config)# monitor session 12 source interface ge0
soodar(config)# monitor session 12 destination interface ge3
soodar(config)# interface ge3
soodar(config-if)# no shutdown
```

Note: Since the exact packet is mirrored on port(without changing anything), it's crucial that the interface in the receiver side is in promiscuous mode

Trace

A capturing tool to save traffics as pcap and export them for further analyzes.

monitor capture start

Start capturing traffic. User can provide the interface to be captured(default all interfaces traffics are captured), the direction of traffic to be captured(in, out or both) and limit the number of captured packets(default is 100).

monitor capture stop

Stop the current capturing process and save captured pcap.

Note: Currently only one capture is stored in memory. So starting a new capture will overwrite the previous one.

monitor capture export scp:

Export the stored capture pcap to a remote server.

Note: *scp* URI is: *scp:[user]:[password]@[host]:[address]*

monitor dispatch-trace start

Start capturing traffic with Dataplane debugging info(viewable by wireshark). The only parameters settable by admin is the limit of captured packets

Note: Each incoming/outgoing packet could produce 2 or more dispatch-trace packets. This is because each step is individually stored in pcap.

Warning: Generated pcaps in this way could become very huge in size(hundreds of megabytes and more).

Warning: Using this trace could cause performance degradation(and in rare cases instability of system).

monitor dispatch-trace stop

Stop current dispatch tracing process and save result as a pcap file.

monitor dispatch-trace export scp:

Export the stored dispatch trace pcap to a remote server.

Logging

Debugging logs can be set in case of need.

debug vlan event

log data plane installation processes and results

debug bridge event

log data plane installation processes and results

debug span event

log data plane installation processes and results

1.11.2 LACP

Link Aggregation Control Protocol is an L2-layer protocol to aggregate two or more interfaces traffic. It also introduces link redundancy.

Bundle interface

As the name suggests, it's an interface resulting from bonding interfaces.

interface bundle-ether (1-65535)

Create a bundle-ether interface with the given bundle id

set mode <rr|xor|active-backup|broadcast|lacp> <l2|l23|l34>

Set bundle-ether interface action mode. The first input determines the bonding algorithm, and the second is the load-balancing algorithm. LB is available on LACP and XOR bonding algorithms.

rr is *round-robin*. Packets are sent through slave interfaces in a round-robin manner.

In **active-backup** mode, all packets are sent through the first available interface and reserved.

bradcast mode sends all packets through all slave interfaces.

xor and **lacp** mode are the same. Packets are sent via different slaves based on determined flows.

l2 load balancing, classify packet to flows by their source and destination MAC addresses.

l23 load balancing, classify packet to flows by source and destination MAC addresses and source and destination IP addresses.

l34 load balancing, classify packet to flows by their source and destination IP addresses, protocol and if available, TCP/UDP source and destination port number.

Default values are LACP using Layer3-Layer4 load balancing.

Enslave an interface

bundle id (1-65535)

Enslave an interface to the bundle interface with the given ID. The **no** form detaches an interface from the bundle.

Note: Slave interface should be up.

Note: Slave interfaces should not have any valid IPs any subinterface and should not be in a bridge group.

Note: Subinterfaces should be created on **bundle-ether** interfaces.

Example :

```
soodar(config)# interface ge0
soodar(config-if)# bridge-group 100
soodar(config-if)# quit
soodar(config)# interface ge1
soodar(config-if)# ip address 10.0.0.1/16
soodar(config-if)# quit
soodar(config)# interface bundle-ether 55
soodar(config-if)# set mode lacp l23
soodar(config-if)# ip address 192.168.1.22/24
soodar(config-if)# quit
soodar(config)# interface ge0
```

(continues on next page)

(continued from previous page)

```
soodar(config-if)# no shutdown
soodar(config-if)# no bridge-group 100
soodar(config-if)# bundle id 55
soodar(config-if)# quit
soodar(config)# interface ge0
soodar(config-if)# no ip address 10.0.0.1/16
soodar(config-if)# bundle id 55
```

Logging

Debugging logs can be set in case of need.

debug bond event

log data plane installation processes and results

INDICES AND TABLES

- genindex
- search

BIBLIOGRAPHY

- [Draft-IETF-uttaro-idr-bgp-persistence] <<https://tools.ietf.org/id/draft-uttaro-idr-bgp-persistence-04.txt>>
- [Draft-IETF-agrewal-idr-accept-own-nexthop] <<https://tools.ietf.org/id/draft-agrewal-idr-accept-own-nexthop-00.txt>>
- [Draft-IETF-idr-link-bandwidth] <<https://tools.ietf.org/html/draft-ietf-idr-link-bandwidth>>
- [Draft-IETF-mohanty-bess-ebgp-dmz] <<https://tools.ietf.org/html/draft-mohanty-bess-ebgp-dmz>>
- [bgp-route-osci-cond] McPherson, D. and Gill, V. and Walton, D., “Border Gateway Protocol (BGP) Persistent Route Oscillation Condition”, IETF RFC3345
- [stable-flexible-ibgp] Flavel, A. and M. Roughan, “Stable and flexible iBGP”, ACM SIGCOMM 2009
- [ibgp-correctness] Griffin, T. and G. Wilfong, “On the correctness of iBGP configuration”, ACM SIGCOMM 2002

Symbols

- (1-4294967295) <deny|permit> PROTOSERVICE
 - <any|A.B.C.D/M> <any|A.B.C.D/M>
 - [exact-match]
 - configuration command, 191
 - (1-4294967295) <deny|permit> PROTOSERVICE
 - <any|X:X::X:X/M> <any|X:X::X:X/M>
 - [exact-match]
 - configuration command, 191
 - (1-4294967295) <deny|permit>
 - <any|A.B.C.D/M>
 - configuration command, 190
 - (1-4294967295) <deny|permit>
 - <any|A.B.C.D/M> <any|A.B.C.D/M>
 - [exact-match]
 - configuration command, 190
 - (1-4294967295) <deny|permit>
 - <any|X:X::X:X/M>
 - configuration command, 190
 - (1-4294967295) <deny|permit>
 - <any|X:X::X:X/M> <any|X:X::X:X/M>
 - [exact-match]
 - configuration command, 190
 - (1-4294967295) <deny|permit> icmp
 - <any|A.B.C.D/M> <any|A.B.C.D/M>
 - ICMP_TYPE_CODES [exact-match]"
 - configuration command, 192
 - (1-4294967295) <deny|permit> icmp
 - <any|X:X::X:X/M> <any|X:X::X:X/M>
 - ICMPV6_TYPE_CODES [exact-match]"
 - configuration command, 192
 - (1-4294967295) <deny|permit> tcp
 - <any|A.B.C.D/M> SRC_PORT
 - <any|A.B.C.D/M> DST_PORT [TCP FLAGS]
 - [exact-match]
 - configuration command, 191
 - (1-4294967295) <deny|permit> tcp
 - <any|X:X::X:X/M> SRC_PORT
 - <any|X:X::X:X/M> DST_PORT [TCP FLAGS] [exact-match]
 - configuration command, 191
 - (1-4294967295) <deny|permit> udp
 - <any|A.B.C.D/M> SRC_PORT
 - <any|A.B.C.D/M> DST_PORT
 - [exact-match]
 - configuration command, 192
 - (1-4294967295) <deny|permit> udp
 - <any|X:X::X:X/M> SRC_PORT
 - <any|X:X::X:X/M> DST_PORT
 - [exact-match]
 - configuration command, 192
 - <ip|ipv6> router isis WORD
 - configuration command, 137
 - [no] debug acl event
 - configuration command, 193
 - [no] debug ipfix event
 - configuration command, 43
 - [no] debug vrf event
 - configuration command, 195
 - [no] echo-mode
 - configuration command, 57
 - [no] minimum-ttl (*I-254*)
 - configuration command, 57
 - [no] passive-mode
 - configuration command, 57
 - [no] shutdown
 - configuration command, 57
- ## A
- address-family [ipv4 | ipv6]
 - configuration command, 130
 - advantages
 - Link-state routing protocol, 140
 - agentx
 - configuration command, 35
 - aggregate-address A.B.C.D/M
 - configuration command, 78
 - aggregate-address A.B.C.D/M as-set
 - configuration command, 78
 - aggregate-address A.B.C.D/M
 - matching-MED-only
 - configuration command, 78
 - aggregate-address A.B.C.D/M origin
 - <egp|igp|incomplete>

configuration command, 78
 aggregate-address A.B.C.D/M route-map NAME
 configuration command, 78
 aggregate-address A.B.C.D/M summary-only
 configuration command, 78
 aggregate-address A.B.C.D/M suppress-map
 NAME
 configuration command, 78
 aggregate-address X:X::X:X/M
 configuration command, 79
 aggregate-address X:X::X:X/M as-set
 configuration command, 79
 aggregate-address X:X::X:X/M
 matching-MED-only
 configuration command, 79
 aggregate-address X:X::X:X/M origin
 <egp|igp|incomplete>
 configuration command, 79
 aggregate-address X:X::X:X/M route-map NAME
 configuration command, 79
 aggregate-address X:X::X:X/M summary-only
 configuration command, 79
 aggregate-address X:X::X:X/M suppress-map
 NAME
 configuration command, 79
 aggregation timer (5-1800)
 configuration command, 159
 allowed-ip A.B.C.D/M
 configuration command, 208
 Area
 OSPF, 141
 area (0-4294967295) authentication
 configuration command, 152
 area (0-4294967295) authentication
 message-digest
 configuration command, 152
 area (0-4294967295) export-list NAME
 configuration command, 152, 160
 area (0-4294967295) filter-list prefix NAME
 in
 configuration command, 152, 161
 area (0-4294967295) filter-list prefix NAME
 out
 configuration command, 152, 161
 area (0-4294967295) import-list NAME
 configuration command, 152, 161
 area (0-4294967295) nssa
 configuration command, 151
 area (0-4294967295) nssa suppress-fa
 configuration command, 151
 area (0-4294967295) nssa [no-summary]
 [default-information-originate
 [metric-type (1-2)] [metric
 (0-16777214)]]
 configuration command, 160
 area (0-4294967295) range A.B.C.D/M
 configuration command, 150
 area (0-4294967295) range X:X::X:X/M
 [<advertise|not-advertise|cost
 (0-16777215)>]
 configuration command, 160
 area (0-4294967295) shortcut
 configuration command, 151
 area (0-4294967295) stub
 configuration command, 151
 area (0-4294967295) stub no-summary
 configuration command, 151
 area (0-4294967295) virtual-link A.B.C.D
 configuration command, 151
 area A.B.C.D authentication
 configuration command, 152
 area A.B.C.D authentication message-digest
 configuration command, 152
 area A.B.C.D default-cost (0-16777215)
 configuration command, 152
 area A.B.C.D export-list NAME
 configuration command, 152, 160
 area A.B.C.D filter-list prefix NAME in
 configuration command, 152, 161
 area A.B.C.D filter-list prefix NAME out
 configuration command, 152, 161
 area A.B.C.D import-list NAME
 configuration command, 152, 161
 area A.B.C.D nssa
 configuration command, 151
 area A.B.C.D nssa suppress-fa
 configuration command, 151
 area A.B.C.D nssa [no-summary]
 configuration command, 160
 area A.B.C.D range A.B.C.D/M
 configuration command, 150
 area A.B.C.D range IPV4_PREFIX
 not-advertise
 configuration command, 151
 area A.B.C.D range IPV4_PREFIX substitute
 IPV4_PREFIX
 configuration command, 151
 area A.B.C.D range X:X::X:X/M
 [<advertise|not-advertise|cost
 (0-16777215)>]
 configuration command, 160
 area A.B.C.D shortcut
 configuration command, 151
 area A.B.C.D stub
 configuration command, 151
 area A.B.C.D stub no-summary
 configuration command, 151
 area A.B.C.D virtual-link A.B.C.D

configuration command, 151
 area-password [clear | md5] <password>
 configuration command, 136
 attached-bit [receive ignore | send]
 configuration command, 136
 authentication local pre-share
 configuration command, 217
 authentication local rsa-sig
 configuration command, 217
 authentication remote pre-share
 configuration command, 217
 authentication remote rsa-sig
 configuration command, 217
 auto-cost reference-bandwidth (1-4294967)
 configuration command, 149
 auto-cost reference-bandwidth COST
 configuration command, 158

B

banner motd line LINE
 configuration command, 5
 bfd
 configuration command, 56
 bgp always-compare-med
 configuration command, 73
 bgp as-path access-list WORD [seq
 (0-4294967295)] permit|deny LINE
 configuration command, 87
 bgp bestpath as-path confed
 configuration command, 68
 bgp bestpath as-path multipath-relax
 configuration command, 68
 bgp bestpath bandwidth <ignore
 | skip-missing |
 default-weight-for-missing>, 126
 configuration command, 126
 bgp bestpath compare-routerid
 configuration command, 68
 bgp bestpath peer-type multipath-relax
 configuration command, 68
 bgp cluster-id A.B.C.D
 configuration command, 105
 bgp community alias NAME ALIAS
 configuration command, 91
 bgp community-list (100-500) permit|deny
 COMMUNITY
 configuration command, 91
 bgp community-list (1-99) permit|deny
 COMMUNITY
 configuration command, 91
 bgp community-list expanded NAME
 permit|deny COMMUNITY
 configuration command, 90

bgp community-list NAME permit|deny
 COMMUNITY
 configuration command, 90
 bgp community-list standard NAME
 permit|deny COMMUNITY
 configuration command, 90
 bgp dampening (1-45) (1-20000) (1-20000)
 (1-255)
 configuration command, 70
 bgp default ipv4-unicast
 configuration command, 84
 bgp default ipv4-vpn
 configuration command, 84
 bgp default ipv6-unicast
 configuration command, 84
 bgp default ipv6-vpn
 configuration command, 84
 bgp default show-hostname
 configuration command, 84
 bgp default show-nexthop-hostname
 configuration command, 84
 bgp deterministic-med
 configuration command, 73
 bgp disable-ebgp-connected-route-check
 configuration command, 70
 bgp ebgp-requires-policy
 configuration command, 69
 bgp extcommunity-list expanded NAME
 permit|deny LINE
 configuration command, 94
 bgp extcommunity-list standard NAME
 permit|deny EXTCOMMUNITY
 configuration command, 94
 bgp fast-convergence
 configuration command, 128
 bgp fast-external-failover
 configuration command, 84
 bgp graceful-restart
 configuration command, 76
 bgp graceful-restart disable
 configuration command, 76
 bgp graceful-restart preserve-fw-state
 configuration command, 75
 bgp graceful-restart rib-stale-time (1-3600)
 configuration command, 75
 bgp graceful-restart select-defer-time (0-
 3600)
 configuration command, 75
 bgp graceful-restart stalepath-time (1-4095)
 configuration command, 76
 bgp graceful-shutdown
 configuration command, 100
 bgp large-community-list expanded NAME
 permit|deny LINE

configuration command, 96
 bgp large-community-list standard NAME
 permit|deny LARGE-COMMUNITY
 configuration command, 96
 bgp listen limit <1-65535>
 configuration command, 81
 bgp listen range <A.B.C.D/M|X:X::X:X/M>
 peer-group PGNAME
 configuration command, 81
 bgp minimum-holdtime (1-65535)
 configuration command, 85
 bgp network import-check
 configuration command, 77
 bgp reject-as-sets
 configuration command, 70
 bgp route-reflector allow-outbound-policy
 configuration command, 85
 bgp router-id A.B.C.D
 configuration command, 66
 bgp shutdown [message MSG...]
 configuration command, 76
 bgp suppress-duplicates
 configuration command, 70
 bridge-group (1-65535) [split-horizon group
 (0-255)]
 configuration command, 226
 bundle id (1-65535)
 configuration command, 229

C

cache timeout active (1-604800)
 configuration command, 42
 cache timeout inactive (1-604800)
 configuration command, 42
 Call Action, 22
 call NAME
 configuration command, 26
 call WORD
 configuration command, 119
 class CNAME
 configuration command, 188
 class-map match-all CNAME
 configuration command, 186
 class-map match-any CNAME
 configuration command, 186
 clear bgp \
 configuration command, 99
 clear bgp ipv4|ipv6 \
 configuration command, 99
 clear bgp ipv4|ipv6 PEER
 configuration command, 99
 clear bgp ipv4|ipv6 PEER soft|in|out
 configuration command, 99
 clear bgp ipv4|ipv6 unicast \
 configuration command, 99
 clear bgp ipv4|ipv6 unicast PEER
 configuration command, 99
 clear bgp ipv4|ipv6 unicast PEER
 soft|in|out
 configuration command, 99
 clear command history [(0-200)]
 configuration command, 10
 clear ip arp [IFNAME A.B.C.D]
 configuration command, 225
 clear ip dhcp binding <*|A.B.C.D>
 configuration command, 46
 clear ip igmp interfaces
 configuration command, 182
 clear ip interfaces
 configuration command, 182
 clear ip mroute
 configuration command, 182
 clear ip mroute [vrf NAME] count
 configuration command, 182
 clear ip ospf [(1-65535)] neighbor
 configuration command, 150
 clear ip ospf [(1-65535)] process
 configuration command, 150
 clear ip pim interfaces
 configuration command, 182
 clear ip pim oil
 configuration command, 182
 clear ip pim [vrf NAME] bsr-data
 configuration command, 182
 clear ip prefix-list [NAME [A.B.C.D/M]]
 configuration command, 22
 clear ipv6 ospf6 process [vrf NAME]
 configuration command, 159
 clear line (0-530)
 configuration command, 5
 clear log [syslog]
 configuration command, 29
 clear route-map counter [WORD]
 configuration command, 23
 clock set TIME (1-12) (1-31) (2000-4192)
 configuration command, 38
 clock timezone TIMEZONE
 configuration command, 8
 coalesce-time (0-4294967295)
 configuration command, 81
 configuration command
 (1-4294967295) <deny|permit>
 PROTOSERVICE <any|A.B.C.D/M>
 <any|A.B.C.D/M> [exact-match], 191
 (1-4294967295) <deny|permit>
 PROTOSERVICE <any|X:X::X:X/M>
 <any|X:X::X:X/M> [exact-match], 191

```

(1-4294967295) <deny|permit>
  <any|A.B.C.D/M>, 190
(1-4294967295) <deny|permit>
  <any|A.B.C.D/M> <any|A.B.C.D/M>
  [exact-match], 190
(1-4294967295) <deny|permit>
  <any|X:X::X:X/M>, 190
(1-4294967295) <deny|permit>
  <any|X:X::X:X/M> <any|X:X::X:X/M>
  [exact-match], 190
(1-4294967295) <deny|permit> icmp
  <any|A.B.C.D/M> <any|A.B.C.D/M>
  ICMP_TYPE_CODES [exact-match]", 192
(1-4294967295) <deny|permit> icmp
  <any|X:X::X:X/M> <any|X:X::X:X/M>
  ICMPV6_TYPE_CODES [exact-match]", 192
(1-4294967295) <deny|permit>
  tcp <any|A.B.C.D/M> SRC_PORT
  <any|A.B.C.D/M> DST_PORT [TCP FLAGS]
  [exact-match], 191
(1-4294967295) <deny|permit> tcp
  <any|X:X::X:X/M> SRC_PORT
  <any|X:X::X:X/M> DST_PORT [TCP
  FLAGS] [exact-match], 191
(1-4294967295) <deny|permit>
  udp <any|A.B.C.D/M> SRC_PORT
  <any|A.B.C.D/M> DST_PORT
  [exact-match], 192
(1-4294967295) <deny|permit> udp
  <any|X:X::X:X/M> SRC_PORT
  <any|X:X::X:X/M> DST_PORT
  [exact-match], 192
<ip|ipv6> router isis WORD, 137
[no] debug acl event, 193
[no] debug ipfix event, 43
[no] debug vrf event, 195
[no] echo-mode, 57
[no] minimum-ttl (1-254), 57
[no] passive-mode, 57
[no] shutdown, 57
address-family [ipv4 | ipv6], 130
agentx, 35
aggregate-address A.B.C.D/M, 78
aggregate-address A.B.C.D/M as-set, 78
aggregate-address A.B.C.D/M
  matching-MED-only, 78
aggregate-address A.B.C.D/M origin
  <egp|igp|incomplete>, 78
aggregate-address A.B.C.D/M route-map
  NAME, 78
aggregate-address A.B.C.D/M
  summary-only, 78
aggregate-address A.B.C.D/M
  suppress-map NAME, 78
aggregate-address X:X::X:X/M, 79
aggregate-address X:X::X:X/M as-set, 79
aggregate-address X:X::X:X/M
  matching-MED-only, 79
aggregate-address X:X::X:X/M origin
  <egp|igp|incomplete>, 79
aggregate-address X:X::X:X/M route-map
  NAME, 79
aggregate-address X:X::X:X/M
  summary-only, 79
aggregate-address X:X::X:X/M
  suppress-map NAME, 79
aggregation timer (5-1800), 159
allowed-ip A.B.C.D/M, 208
area (0-4294967295) authentication, 152
area (0-4294967295) authentication
  message-digest, 152
area (0-4294967295) export-list NAME,
  152, 160
area (0-4294967295) filter-list prefix
  NAME in, 152, 161
area (0-4294967295) filter-list prefix
  NAME out, 152, 161
area (0-4294967295) import-list NAME,
  152, 161
area (0-4294967295) nssa, 151
area (0-4294967295) nssa suppress-fa, 151
area (0-4294967295) nssa [no-summary]
  [default-information-originate
  [metric-type (1-2)] [metric
  (0-16777214)]], 160
area (0-4294967295) range A.B.C.D/M, 150
area (0-4294967295) range X:X::X:X/M
  [<advertise|not-advertise|cost
  (0-16777215)>], 160
area (0-4294967295) shortcut, 151
area (0-4294967295) stub, 151
area (0-4294967295) stub no-summary, 151
area (0-4294967295) virtual-link
  A.B.C.D, 151
area A.B.C.D authentication, 152
area A.B.C.D authentication
  message-digest, 152
area A.B.C.D default-cost (0-16777215), 152
area A.B.C.D export-list NAME, 152, 160
area A.B.C.D filter-list prefix NAME in,
  152, 161
area A.B.C.D filter-list prefix NAME
  out, 152, 161
area A.B.C.D import-list NAME, 152, 161
area A.B.C.D nssa, 151
area A.B.C.D nssa suppress-fa, 151
area A.B.C.D nssa [no-summary], 160
area A.B.C.D range A.B.C.D/M, 150

```

area A.B.C.D range IPV4_PREFIX
 not-advertise, 151
 area A.B.C.D range IPV4_PREFIX
 substitute IPV4_PREFIX, 151
 area A.B.C.D range X:X::X:X/M
 [<advertise|not-advertise|cost
 (0-16777215)>], 160
 area A.B.C.D shortcut, 151
 area A.B.C.D stub, 151
 area A.B.C.D stub no-summary, 151
 area A.B.C.D virtual-link A.B.C.D, 151
 area-password [clear | md5] <password>,
 136
 attached-bit [receive ignore | send], 136
 authentication local pre-share, 217
 authentication local rsa-sig, 217
 authentication remote pre-share, 217
 authentication remote rsa-sig, 217
 auto-cost reference-bandwidth (I-4294967),
 149
 auto-cost reference-bandwidth COST, 158
 banner motd line LINE, 5
 bfd, 56
 bgp always-compare-med, 73
 bgp as-path access-list WORD [seq
 (0-4294967295)] permit|deny LINE,
 87
 bgp bestpath as-path confed, 68
 bgp bestpath as-path multipath-relax, 68
 bgp bestpath bandwidth
 <ignore | skip-missing |
 default-weight-for-missing>, 126
 bgp bestpath compare-routerid, 68
 bgp bestpath peer-type multipath-relax,
 68
 bgp cluster-id A.B.C.D, 105
 bgp community alias NAME ALIAS, 91
 bgp community-list (100-500)
 permit|deny COMMUNITY, 91
 bgp community-list (1-99) permit|deny
 COMMUNITY, 91
 bgp community-list expanded NAME
 permit|deny COMMUNITY, 90
 bgp community-list NAME permit|deny
 COMMUNITY, 90
 bgp community-list standard NAME
 permit|deny COMMUNITY, 90
 bgp dampening (1-45) (1-20000)
 (1-20000) (I-255), 70
 bgp default ipv4-unicast, 84
 bgp default ipv4-vpn, 84
 bgp default ipv6-unicast, 84
 bgp default ipv6-vpn, 84
 bgp default show-hostname, 84
 bgp default show-nexthop-hostname, 84
 bgp deterministic-med, 73
 bgp disable-ebgp-connected-route-check,
 70
 bgp ebgp-requires-policy, 69
 bgp extcommunity-list expanded NAME
 permit|deny LINE, 94
 bgp extcommunity-list standard NAME
 permit|deny EXTCOMMUNITY, 94
 bgp fast-convergence, 128
 bgp fast-external-failover, 84
 bgp graceful-restart, 76
 bgp graceful-restart disable, 76
 bgp graceful-restart preserve-fw-state,
 75
 bgp graceful-restart rib-stale-time
 (I-3600), 75
 bgp graceful-restart select-defer-time
 (0-3600), 75
 bgp graceful-restart stalepath-time
 (I-4095), 76
 bgp graceful-shutdown, 100
 bgp large-community-list expanded NAME
 permit|deny LINE, 96
 bgp large-community-list standard NAME
 permit|deny LARGE-COMMUNITY, 96
 bgp listen limit <1-65535>, 81
 bgp listen range <A.B.C.D/M|X:X::X:X/M>
 peer-group PNAME, 81
 bgp minimum-holdtime (I-65535), 85
 bgp network import-check, 77
 bgp reject-as-sets, 70
 bgp route-reflector
 allow-outbound-policy, 85
 bgp router-id A.B.C.D, 66
 bgp shutdown [message MSG...], 76
 bgp suppress-duplicates, 70
 bridge-group (1-65535) [split-horizon
 group (0-255)], 226
 bundle id (I-65535), 229
 cache timeout active (I-604800), 42
 cache timeout inactive (I-604800), 42
 call NAME, 26
 call WORD, 119
 class CNAME, 188
 class-map match-all CNAME, 186
 class-map match-any CNAME, 186
 clear bgp *, 99
 clear bgp ipv4|ipv6 *, 99
 clear bgp ipv4|ipv6 PEER, 99
 clear bgp ipv4|ipv6 PEER soft|in|out, 99
 clear bgp ipv4|ipv6 unicast *, 99
 clear bgp ipv4|ipv6 unicast PEER, 99

clear bgp ipv4|ipv6 unicast PEER
 soft|in|out, 99
clear command history [(0-200)], 10
clear ip arp [IFNAME A.B.C.D], 225
clear ip dhcp binding <*|A.B.C.D>, 46
clear ip igmp interfaces, 182
clear ip interfaces, 182
clear ip mroute, 182
clear ip mroute [vrf NAME] count, 182
clear ip ospf [(1-65535)] neighbor, 150
clear ip ospf [(1-65535)] process, 150
clear ip pim interfaces, 182
clear ip pim oil, 182
clear ip pim [vrf NAME] bsr-data, 182
clear ip prefix-list [NAME [A.B.C.D/M]],
 22
clear ipv6 ospf6 process [vrf NAME], 159
clear line (0-530), 5
clear log [syslog], 29
clear route-map counter [WORD], 23
clock set TIME (1-12) (1-31) (2000-4192),
 38
clock timezone TIMEZONE, 8
coalesce-time (0-4294967295), 81
configure [terminal], 9
continue, 26
continue N, 26
control-plane, 53
copy <sftp:|system:>
 <startup-config|pki>, 31
copy <startup-config|running-config|pki>
 <sftp:|system:>, 31
cpu main [exclusive] (1-256), 52
cpu weight (1-10000), 52-54
cpu worker [exclusive] (1-256)..., 52
cpu [exclusive] (1-256)..., 53, 54
crypto ikev2 dpd (1-3600), 216
crypto ikev2 keyring IKEKEYRING, 216
crypto ikev2 proposal IKEPOSAL, 216
crypto ipsec profile IPSECPROFILE, 219
crypto ipsec transform-set IPSECTS esp
 {hmac HMAC_ALG |cipher CIPHER_ALG},
 218
crypto ipsec transform-set IPSECTS ah
 hmac HMAC_ALG, 218
crypto key generate rawraw label LABEL
 bytes (32-1024), 201
crypto key generate rsa label NAME
 modulus (2048|4096), 201
crypto key generate ssh modulus
 (2048|4096), 201
crypto key generate x25519 label LABEL,
 201
crypto key zeroize RSAKEY, 206
crypto pki authenticate TP, 201
crypto pki enroll TP, 202
crypto pki import TP certificate, 203
crypto pki trustpoint NAME, 201
data-plane, 51
debug bfd network, 63
debug bfd peer, 64
debug bfd zebra, 64
debug bgp bestpath
 <A.B.C.D/M|X::X::X/M>, 98
debug bgp bfd, 98
debug bgp keepalives, 98
debug bgp neighbor-events, 98
debug bgp nht, 98
debug bgp update-groups, 99
debug bgp updates, 98
debug bgp zebra, 99
debug bond event, 230
debug bridge event, 228
debug dplane fib, 27
debug dplane ipsec, 27
debug eigrp packets, 135
debug eigrp transmit, 135
debug igmp, 181
debug ipsec event, 221
debug ipsec vici detail, 221
debug ipsec vici json, 221
debug isis adj-packets, 138
debug isis checksum-errors, 138
debug isis events, 138
debug isis local-updates, 138
debug isis packet-dump, 139
debug isis protocol-errors, 139
debug isis route-events, 139
debug isis snp-packets, 139
debug isis spf-events, 139
debug isis spf-statistics, 139
debug isis spf-triggers, 139
debug isis update-packets, 139
debug mpls ldp KIND, 132
debug mroute, 181
debug mtrace, 181
debug nat44 event, 185
debug ospf bfd, 156
debug ospf event, 157
debug ospf ism, 156
debug ospf ism (status|events|timers), 156
debug ospf lsa, 157
debug ospf lsa (generate|flooding|refresh), 157
debug ospf nsm, 156
debug ospf nsm (status|events|timers), 157
debug ospf nssa, 157
debug ospf packet
 (hello|dd|ls-request|ls-update|ls-ack|all)

(send|recv) [detail], 156

debug ospf zebra, 157

debug ospf zebra (*interface|redistribute*), 157

debug ospf6 abr, 164

debug ospf6 asbr, 164

debug ospf6 border-routers, 164

debug ospf6 flooding, 164

debug ospf6 graceful-restart, 164

debug ospf6 interface, 164

debug ospf6 lsa, 164

debug ospf6 lsa aggregation, 164

debug ospf6 message, 164

debug ospf6 neighbor, 164

debug ospf6 nssa, 164

debug ospf6 route, 164

debug ospf6 spf, 164

debug ospf6 zebra, 164

debug pim bsm, 182

debug pim events, 182

debug pim nht, 182

debug pim packet-dump, 182

debug pim packets, 182

debug pim trace, 182

debug pim zebra, 182

debug prefix-list NAME match
<A.B.C.D/M|X:X::X/M>
[address-mode], 21

debug qos event, 189

debug rip events, 171

debug rip packet, 171

debug rip zebra, 171

debug ripng events, 173

debug ripng packet, 173

debug ripng zebra, 173

debug service dhcp4, 27

debug service mender, 26

debug service ntpd, 26

debug service snmp, 26

debug span event, 228

debug tunnel event, 197

debug vlan event, 228

debug vpls event, 200

debug vxlan event, 199

default-information originate, 154, 167

default-information originate always, 154

default-information originate always
metric (0-16777214), 154

default-information originate always
metric (0-16777214) metric-type (1|2),
155

default-information originate always
metric (0-16777214) metric-type
(1|2) route-map WORD, 155

default-information originate metric
(0-16777214), 154

default-information originate metric
(0-16777214) metric-type (1|2), 154

default-information originate metric
(0-16777214) metric-type (1|2)
route-map WORD, 154

default-information
originate [{always|metric
(0-16777214)|metric-type
(1-2)|route-map WORD}], 162

default-metric (0-16777214), 155

default-metric (1-16), 168

default-router A.B.C.D ..., 45

delete <system:|sftp:>, 33

description LINE ..., 208

destination A.B.C.D, 42

detect-multiplier (2-255), 56

discovery hello holdtime HOLDTIME, 130

discovery hello interval INTERVAL, 130

discovery transport-address A.B.C.D |
A:B::C:D, 130

distance (1-255), 155, 168

distance (1-255) A.B.C.D/M, 68, 168

distance (1-255) A.B.C.D/M ACCESS-LIST,
168

distance (1-255) A.B.C.D/M WORD, 68

distance bgp (1-255) (1-255) (1-255), 68

distance ospf (intra-area|inter-area|external)
(1-255), 155

distribute-list NAME out
<kernel|connected|static|rip|isis|bgp|table>,
155

distribute-list [prefix] LIST <in|out>
IFNAME, 168, 173

dns-server A.B.C.D ..., 44

domain-name NAME, 45

domain-password [clear | md5]
<password>, 136

domainname DOMAINNAME, 7

dual-stack transport-connection prefer
ipv4, 130

dump bgp all PATH [INTERVAL], 99

dump bgp all-et PATH [INTERVAL], 99

dump bgp routes-mrt PATH, 99

dump bgp routes-mrt PATH INTERVAL, 99

dump bgp updates PATH [INTERVAL], 99

dump bgp updates-et PATH [INTERVAL], 99

echo receive-interval
<disabled|(10-60000)>, 56

echo transmit-interval (10-60000), 57

enable config password PASSWORD, 4

enable password PASSWORD, 3

encapsulation default, 225

encapsulation dot1ad (1-4094) dot1q
 (1-4094), 225
 encapsulation dot1q (1-4094) [exact]
 [second-dot1q (1-4094)], 225
 encryption ALGORITHM, 216
 endpoint A.B.C.D port (1000-65535), 209
 enrollment terminal pem, 202
 exec-timeout MINUTE [SECOND], 9
 find COMMAND..., 18
 flow exporter, 42
 flow monitor, 42
 flush_timer TIME, 172
 graceful-restart helper enable
 [A.B.C.D], 155, 162
 graceful-restart helper planned-only,
 155, 162
 graceful-restart helper
 strict-lsa-checking, 155, 162
 graceful-restart helper
 supported-grace-time, 155
 graceful-restart helper
 supported-grace-time (10-1800), 162
 graceful-restart prepare ip ospf, 155
 graceful-restart prepare ipv6 ospf, 162
 graceful-restart [grace-period
 (1-1800)], 155, 162
 group GROUP, 216
 hostname dynamic, 136
 hostname HOSTNAME, 7
 identity address <A.B.C.D|X:X::X:X>, 216
 identity email MAIL, 216
 identity fqdn FQDN, 216
 identity local address
 <A.B.C.D|X:X::X:X>, 217
 identity local email MAIL, 217
 identity local fqdn FQDN, 217
 import vrf VRFNAME, 98
 import|export vpn, 98
 included-address A.B.C.D A.B.C.D, 44
 ingress-replication A.B.C.D, 198
 integrity ALGORITHM, 216
 interface bundle-ether (1-65535), 229
 interface IFACE, 130
 interface IFNAME. (0-4095), 225
 interface mpls-tunnel, 199
 interface nve (0-10000000), 198
 interface tunnel [vrf VRF] (0-1023), 196
 interface wireguard (0-1023), 208
 ip access-group ACL4 in, 193
 ip access-group ACL4 in out, 193
 ip access-group ACL4 out, 193
 ip access-list ACL4, 189
 ip access-list resequence ACL4
 (1-2147483647) (1-2147483647), 192
 ip address dhcp, 46
 ip dhcp client hostname HOSTNAME, 44
 ip dhcp client request dns-nameserver, 44
 ip dhcp client request router, 44
 ip dhcp pool DHCP4POOL, 44
 ip dhcp server, 46
 ip flow monitor output, 42
 ip host NAME A.B.C.D, 7
 ip igmp, 177
 ip igmp generate-query-once [version
 (2-3)], 176
 ip igmp join A.B.C.D [A.B.C.D], 177
 ip igmp last-member-query-count (1-255),
 177
 ip igmp last-member-query-interval (1-
 65535), 177
 ip igmp query-interval (1-65535), 177
 ip igmp query-max-response-time (1-65535),
 177
 ip igmp version (2-3), 177
 ip igmp watermark-warn (1-65535), 176
 ip mroute A.B.C.D/M A.B.C.D (1-255), 178
 ip mroute A.B.C.D/M INTERFACE (1-255), 178
 ip mroute INTERFACE A.B.C.D [A.B.C.D],
 178
 ip msdp mesh-group WORD member A.B.C.D,
 179
 ip msdp mesh-group WORD source A.B.C.D,
 179
 ip msdp peer A.B.C.D source A.B.C.D, 179
 ip msdp timers (1-65535) (1-65535)
 [(1-65535)], 178
 ip multicast boundary oil WORD, 177
 ip multicast rpf-lookup-mode WORD, 176
 ip name-server A.B.C.D, 7
 ip nat forwarding, 185
 ip nat inside, 185
 ip nat inside source static <tcp|udp>
 A.B.C.D (1-65535) A.B.C.D (1-65535),
 184
 ip nat inside source static A.B.C.D
 A.B.C.D, 183
 ip nat outside, 185
 ip nat pool PNAT44 A.B.C.D [A.B.C.D],
 185
 ip ospf area (A.B.C.D|(0-4294967295)),
 154
 ip ospf area AREA [ADDR], 153
 ip ospf authentication message-digest,
 153
 ip ospf authentication-key AUTH_KEY, 153
 ip ospf bfd, 58
 ip ospf bfd profile BFDPROF, 58
 ip ospf cost (1-65535), 153

- ip ospf dead-interval (*I-65535*), 153
- ip ospf dead-interval minimal hello-multiplier (*2-20*), 153
- ip ospf hello-interval (*I-65535*), 153
- ip ospf message-digest-key KEYID md5 KEY, 153
- ip ospf passive [A.B.C.D], 154
- ip ospf priority (*0-255*), 154
- ip ospf retransmit-interval (*I-65535*), 154
- ip ospf transmit-delay (1-65535) [A.B.C.D], 154
- ip pim, 177
- ip pim active-active, 177
- ip pim bfd [profile BFDPROF], 59
- ip pim bsm, 177
- ip pim drpriority (*I-4294967295*), 177
- ip pim ecmp, 175
- ip pim ecmp rebalance, 175
- ip pim hello (1-65535) (*I-65535*), 177
- ip pim join-prune-interval (*I-65535*), 175
- ip pim keep-alive-timer (*I-65535*), 176
- ip pim packets (*I-255*), 176
- ip pim register-accept-list PLIST, 175
- ip pim register-suppress-time (*I-65535*), 176
- ip pim rp A.B.C.D A.B.C.D/M, 175
- ip pim send-v6-secondary, 176
- ip pim spt-switchover infinity-and-beyond, 175
- ip pim ssm prefix-list WORD, 176
- ip pim unicast-bsm, 177
- ip pim use-source A.B.C.D, 177
- ip prefix-list NAME (permit|deny) PREFIX [le LEN] [ge LEN], 20
- ip prefix-list NAME description DESC, 21
- ip prefix-list NAME seq NUMBER (permit|deny) PREFIX [le LEN] [ge LEN], 20
- ip rip authentication key-chain KEY-CHAIN, 170
- ip rip authentication mode md5, 170
- ip rip authentication mode text, 170
- ip rip authentication string STRING, 170
- ip rip receive version VERSION, 167
- ip rip send version VERSION, 167
- ip route NETWORK GATEWAY table TABLENO nexthop-vrf VRFNAME DISTANCE vrf VRFNAME, 174
- ip split-horizon, 167
- ip ssh client, 6
- ip ssh pubkey-chain, 5
- ip verify unicast source reachable-via [rx | any], 34
- ip vrf forwarding NAME, 194
- ipv6 access-list ACL6, 189
- ipv6 access-list resequence ACL6 (1-2147483647) (*I-2147483647*), 192
- ipv6 enable, 39
- ipv6 nd adv-interval-option, 40
- ipv6 nd dnssl domain-name-suffix [lifetime], 41
- ipv6 nd home-agent-config-flag, 40
- ipv6 nd home-agent-lifetime [(0-65520)], 40
- ipv6 nd home-agent-preference [(0-65535)], 40
- ipv6 nd managed-config-flag, 40
- ipv6 nd mtu [(1-65535)], 40
- ipv6 nd other-config-flag, 40
- ipv6 nd prefix ipv6prefix [valid-lifetime] [preferred-lifetime] [off-link] [no-autoconfig] [router-address], 39
- ipv6 nd ra-fast-retrans, 39
- ipv6 nd ra-hop-limit [(0-255)], 40
- ipv6 nd ra-interval [(1-1800)], 39
- ipv6 nd ra-interval [msec (70-1800000)], 39
- ipv6 nd ra-lifetime [(0-9000)], 40
- ipv6 nd ra-retrans-interval [(0-4294967295)], 40
- ipv6 nd rdns ipv6address [lifetime], 41
- ipv6 nd reachable-time [(1-3600000)], 40
- ipv6 nd router-preference [(high|medium|low)], 40
- ipv6 nd suppress-ra, 39
- ipv6 ospf6 area <A.B.C.D|(0-4294967295)>, 161
- ipv6 ospf6 bfd [profile BFDPROF], 59
- ipv6 ospf6 cost COST, 161
- ipv6 ospf6 dead-interval DEADINTERVAL, 161
- ipv6 ospf6 hello-interval HELLOINTERVAL, 161
- ipv6 ospf6 network (*broadcast|point-to-point*), 161
- ipv6 ospf6 priority PRIORITY, 161
- ipv6 ospf6 retransmit-interval RETRANSMITINTERVAL, 161
- ipv6 ospf6 transmit-delay TRANSMITDELAY, 161
- ipv6 route NETWORK from SRCPREFIX GATEWAY table TABLENO nexthop-vrf VRFNAME DISTANCE vrf VRFNAME, 174
- ipv6 traffic-group ACL6 in, 193
- ipv6 traffic-group ACL6 in out, 193
- ipv6 traffic-group ACL6 out, 193
- is-type [level-1 | level-1-2 |

level-2-only], 137
 isis bfd, 58
 isis bfd profile BFDPROF, 58
 isis circuit-type [level-1 | level-1-2 | level-2], 137
 isis csnp-interval (1-600) [level-1 | level-2], 137
 isis hello padding, 137
 isis hello-interval (1-600) [level-1 | level-2], 137
 isis hello-multiplier (2-100) [level-1 | level-2], 137
 isis metric [(0-255) | (0-16777215)] [level-1 | level-2], 137
 isis network point-to-point, 137
 isis passive, 138
 isis password [clear | md5] <password>, 138
 isis priority (0-127) [level-1 | level-2], 138
 isis psnp-interval (1-120) [level-1 | level-2], 138
 isis three-way-handshake, 138
 key LINE ..., 5
 keyring local IKEKEYRING, 218
 known-host <A.B.C.D|X:X::X:X|HOST>, 6
 l2vpn NAME type vpls, 199
 label vpn export (0..1048575)|auto, 98
 label WORD, 57
 lease <(0-365) (0-23) (0-59)|infinite>, 45
 license check, 47
 license generate license-request [terminal], 47
 license import license terminal, 47
 lifetime <120-86400>, 218
 line vty, 8
 list, 9
 log commands, 28
 log export removable-storage, 7
 log export ssh HOST USER PATH, 7
 log facility [FACILITY], 28
 log file [LEVEL], 27
 log monitor [LEVEL], 28
 log record-priority, 28
 log rotate max-file-life (1-1000), 27
 log rotate max-file-size SIZE, 27
 log rotate max-files (1-1000), 27
 log rotate max-retention (1-1000), 27
 log rotate max-use <SIZE|PERCENTAGE>, 27
 log syslog HOST loki [skip-host-verify] [port (100-65535)], 27
 log syslog [A.B.C.D|HOST] tcp [tls [skip-host-verify]] [port (100-65535)], 27
 log syslog [LEVEL], 27
 log timestamp precision [(0-6)], 28
 log-adjacency-changes, 136
 log-adjacency-changes [detail], 148
 login block-for TIME attempts ATTEMPT within PERIOD, 5
 login unblock <A.B.C.D|X:X::X:X|all>, 5
 lsp-gen-interval [level-1 | level-2] (1-120), 137
 lsp-mtu (128-4352), 136
 lsp-refresh-interval [level-1 | level-2] (1-65235), 137
 management-plane, 54
 match access-list ACL, 187
 match address local A.B.C.D, 217
 match alias WORD, 91
 match any, 187
 match as-path AS_PATH, 23
 match as-path WORD, 88
 match certificate, 218
 match community COMMUNITY_LIST, 24
 match community WORD exact-match [exact-match], 91
 match destination-address A.B.C.D/M, 187
 match destination-address X:X::X:X/M, 187
 match dscp (0-63), 187
 match extcommunity WORD, 95
 match identity remote address <A.B.C.D|X:X::X:X>, 217
 match identity remote email EMAIL, 218
 match identity remote fqdn FQDN, 217
 match interface WORD, 169
 match ip address ACCESS_LIST, 23
 match ip address prefix-len 0-32, 23
 match ip address prefix-list PREFIX_LIST, 23
 match ip address prefix-list WORD, 169
 match ip address WORD, 169
 match ip next-hop address IPV4_ADDR, 23
 match ip next-hop prefix-list WORD, 169
 match ip next-hop WORD, 169
 match ipv6 address ACCESS_LIST, 23
 match ipv6 address prefix-len 0-128, 23
 match ipv6 address prefix-list PREFIX_LIST, 23
 match ipv6 next-hop IPV6_ADDR, 23
 match large-community LINE [exact-match], 96
 match local-preference METRIC, 24
 match metric (0-4294967295), 169
 match metric METRIC, 24
 match peer A.B.C.D|X:X::X:X, 117
 match peer INTERFACE_NAME, 24

match peer IPV4_ADDR, 24
 match peer IPV6_ADDR, 24
 match protocol (0-63), 187
 match source-address A.B.C.D/M, 187
 match source-address X:X::X:X/M, 187
 match source-instance NUMBER, 24
 match source-protocol PROTOCOL_NAME, 24
 match tag TAG, 24
 max-lsp-lifetime [level-1 | level-2]
 (360-65535), 137
 max-metric router-lsa administrative, 149
 max-metric router-lsa
 [on-startup|on-shutdown] (5-86400),
 149
 maximum-paths (1-128), 68
 maximum-paths (1-64), 150, 158
 maximum-paths ibgp (1-128)
 [equal-cluster-length], 68
 member pseudowire PW, 199
 member vni (1-16777214), 198
 member vni (1-16777214) associate-vrf,
 198
 memory heap main SIZE, 52
 memory heap stats SIZE, 52
 memory max SIZE, 52, 54, 55
 memory packet-buffer count (16384-
 1049776), 53
 memory packet-buffer size (2048-65536), 53
 metric-style [narrow | transition |
 wide], 136
 mode transport, 218
 mode tunnel, 218
 monitor capture export scp:, 227
 monitor capture start, 227
 monitor capture stop, 227
 monitor dispatch-trace export scp:, 228
 monitor dispatch-trace start, 228
 monitor dispatch-trace stop, 228
 monitor session (1-66) destination
 interface INTERFACE, 227
 monitor session (1-66) source interface
 INTERFACE [both|rx|tx], 227
 mpls ip, 195
 mpls ipv6, 195
 mpls ldp, 130
 mtrace A.B.C.D [A.B.C.D], 181
 neighbor A.B.C.D|X.X::X.X|peer-group
 route-map WORD import|export, 117
 neighbor <A.B.C.D|X.X::X.X|WORD>
 addpath-tx-all-paths, 84
 neighbor <A.B.C.D|X.X::X.X|WORD>
 addpath-tx-bestpath-per-AS, 84
 neighbor <A.B.C.D|X.X::X.X|WORD>
 allowas-in [<(1-10)|origin>], 83
 neighbor <A.B.C.D|X.X::X.X|WORD>
 as-override, 83
 neighbor <A.B.C.D|X.X::X.X|WORD> bfd, 58
 neighbor <A.B.C.D|X.X::X.X|WORD> bfd
 check-control-plane-failure, 58
 neighbor <A.B.C.D|X.X::X.X|WORD> bfd
 profile BFDPROF, 58
 neighbor <A.B.C.D|X.X::X.X|WORD>
 disable-addpath-rx, 84
 neighbor <A.B.C.D|X.X::X.X|WORD>
 tcp-mss (1-65535), 111
 neighbor A.B.C.D, 166
 neighbor A.B.C.D activate, 77
 neighbor A.B.C.D graceful-restart, 76
 neighbor A.B.C.D
 graceful-restart-disable, 76
 neighbor A.B.C.D
 graceful-restart-helper, 76
 neighbor A.B.C.D holdtime HOLDTIME, 130
 neighbor A.B.C.D password PASSWORD, 130
 neighbor A.B.C.D route-server-client, 117
 neighbor lsr-id A.B.C.D, 199
 neighbor PEER advertisement-interval
 (0-600), 84
 neighbor PEER attribute-unchanged
 [as-path|next-hop|med], 82
 neighbor PEER capability
 extended-nexthop, 84
 neighbor PEER default-originate, 82
 neighbor PEER description ..., 82
 neighbor PEER disable-connected-check, 81
 neighbor PEER disable-link-bw-encoding-ieee,
 82
 neighbor PEER distribute-list NAME
 [in|out], 85
 neighbor PEER dont-capability-negotiate,
 87
 neighbor PEER ebgp-multihop, 82
 neighbor PEER filter-list NAME [in|out],
 85
 neighbor PEER interface IFNAME, 82
 neighbor PEER interface remote-as
 <internal|external|ASN>, 82
 neighbor PEER local-as AS-NUMBER
 [no-prepend] [replace-as], 83
 neighbor PEER maximum-prefix NUMBER
 [force], 83
 neighbor PEER maximum-prefix-out NUMBER,
 83
 neighbor PEER next-hop-self [force], 82
 neighbor PEER override-capability, 87
 neighbor PEER password PASSWORD, 83
 neighbor PEER peer-group PGNAME, 85
 neighbor PEER port PORT, 82

neighbor PEER prefix-list NAME [in|out],
85
neighbor PEER remote-as ASN, 80
neighbor PEER remote-as external, 81
neighbor PEER remote-as internal, 81
neighbor PEER route-map NAME [in|out], 85
neighbor PEER route-reflector-client, 105
neighbor PEER send-community, 83
neighbor PEER sender-as-path-loop-detection,
85
neighbor PEER shutdown [message MSG...]
[rtt (1-65535) [count (1-255)]], 81
neighbor PEER solo, 85
neighbor PEER strict-capability-match, 87
neighbor PEER timers (0-65535) (0-65535),
84
neighbor PEER timers connect (1-65535), 84
neighbor PEER timers delayopen (1-240), 85
neighbor PEER ttl-security hops NUMBER,
84
neighbor PEER update-source
<IFNAME|ADDRESS>, 82
neighbor PEER version VERSION, 82
neighbor PEER weight WEIGHT, 83
neighbor PEER-GROUP route-server-client,
117
neighbor WORD peer-group, 85
neighbor X:X::X:X route-server-client,
117
net XX.XXXX.XXX.XX, 136
network A.B.C.D/M, 44, 77
network A.B.C.D/M area (0-4294967295), 149
network A.B.C.D/M area A.B.C.D, 149
network IFNAME, 166, 172
network NETWORK, 134, 166, 172
nexthop vpn export A.B.C.D|X:X::X:X, 98
no agentx, 35
no aggregation timer (5-1800), 159
no allowed-ip [A.B.C.D/M], 208
no banner motd, 8
no class-map CNAM, 187
no cpu main [[exclusive] (1-256)], 52
no cpu weight [(1-10000)], 52-54
no cpu worker [[exclusive] (1-256)], 52-
54
no crypto pki trustpoint Tpname, 206
no enable config password PASSWORD, 4
no enable password PASSWORD, 3
no exec-timeout, 9
no ip access-list ACL4, 190
no ip flow monitor output, 42
no ip vrf forwarding [NAME], 194
no ipv6 access-list ACL6, 190
no key (1-65535), 6
no key HASH, 5
no match any, 187
no memory heap main [SIZE], 52
no memory heap stats [SIZE], 52
no memory max [SIZE], 55
no memory packet-buffer count
[(16384-1049776)], 53
no memory packet-buffer size
[(2048-65536)], 53
no ntp, 38
no ntp authentication-key (1-65535), 36
no poll sleep [(0-10000)], 53
no record netflow <ipv4|ipv6>
prefix-port, 42
no security passwords min-length, 4
no subject-alt-name LINE, 202
no summary-address X:X::X:X/M
no-advertise, 159
no summary-address X:X::X:X/M
[tag (1-4294967295)] [{metric
(0-16777215) | metric-type (1-2)}],
159
no system tune profile TPROF, 51
ntp authentication, 37
ntp authentication-key (1-65535) sha1
WORD, 36
ntp server SERVER [OPTIONS], 35
ntp-server NTP ..., 45
offset-list ACCESS-LIST (in|out), 168
offset-list ACCESS-LIST (in|out) IFNAME,
168
on-match goto N, 26
on-match next, 26
ordered-control, 130
ospf abr-type TYPE, 148
ospf rfc1583compatibility, 148
ospf router-id A.B.C.D, 148
ospf6 router-id A.B.C.D, 158
passive-interface (IFNAME|default), 134, 166
passive-interface default, 148
password, 3
peer <A.B.C.D|X:X::X:X>
[{multihop|local-address
<A.B.C.D|X:X::X:X>|interface
IFNAME|vrf NAME}], 56
peer PEER, 216
police BPS [NORMALBURST [MAXBURST]]
conform-action ACTION exceed-action
ACTION [violate-action ACTION], 188
policy-map NAME, 188
poll sleep (0-10000), 53
pre-shared-key LINE, 216
proactive-arp, 150
profile BFDPROF, 57

profile WORD, 56
 proposal IKEPOSAL, 218
 public-key LINE [base64], 208
 purge-originator, 136
 pw-id (*I-4294967295*), 199
 rd vpn export AS:NN|IP:nn, 97
 read-quanta (*I-10*), 100
 receive-interval (*10-60000*), 56
 record netflow <ipv4|ipv6> prefix-port, 42
 redistribute <bgp|connected|isis|kernel|ospf|ospf6|rip|ripng|static|table> [metric (1-4294967295) (0-4294967295) (0-255) (1-255) (1-65535)], 134
 redistribute <bgp|connected|isis|kernel|ospf|rip|ripng|static|table> [metric-type (1-2)] [metric (0-16777214)] [route-map WORD], 154
 redistribute <bgp|connected|isis|kernel|ospf|rip|ripng|static|table> [metric (0-16)] [route-map WORD], 167
 redistribute <bgp|connected|isis|kernel|ripng|static|table> [metric-type (1-2)] [metric (0-16777214)] [route-map WORD], 162
 redistribute <connected|isis|kernel|ospf|ospf6|rip|ripng|static|table> [metric (0-4294967295)] [route-map WORD], 79
 remark LINE .., 190
 rewrite tag pop <1|2>, 226
 rewrite tag push <1|2> <dot1q|dot1ad> (0-4095) [(0-4095)], 226
 route A.B.C.D/M, 167
 route NETWORK, 172
 route-map ROUTE-MAP-NAME (permit|deny) ORDER, 23
 route-map ROUTE-MAP-NAME optimization, 26
 route-map vpn import|export MAP, 98
 router bgp AS-NUMBER view NAME, 67
 router bgp ASN, 66
 router bgp ASN vrf VRFNAME, 67
 router eigrp (1-65535) [vrf NAME], 134
 router isis WORD [vrf NAME], 136
 router ospf [{(1-65535)|vrf NAME}], 148
 router ospf6 [vrf NAME], 158
 router rip, 166
 router ripng, 172
 router-id A.B.C.D, 130
 rsakeypair KEY, 202
 rt vpn import|export|both RTLIST..., 97
 security passwords min-length, 4
 service cputime-stats, 8
 service cputime-warning (*I-4294967295*), 8
 service password-encryption, 8
 service walltime-warning (*I-4294967295*), 8
 service-policy PMAP in, 188
 set as-path exclude AS-NUMBER..., 25
 set as-path prepend AS_PATH, 25
 set as-path prepend AS-PATH, 88
 set as-path prepend last-as NUM, 88
 set comm-list WORD delete, 92
 set community <none|COMMUNITY> additive, 92
 set community COMMUNITY, 25
 set distance DISTANCE, 25
 set extcommunity bandwidth <((1-25600) | cumulative | num-multipaths)>
 set extcommunity none, 95
 set extcommunity rt EXTCOMMUNITY, 95
 set extcommunity soo EXTCOMMUNITY, 95
 set ip next-hop A.B.C.D, 169
 set ip next-hop IPV4_ADDRESS, 24
 set ip next-hop peer-address, 24
 set ip next-hop unchanged, 24
 set ipv6 next-hop global IPV6_ADDRESS, 25
 set ipv6 next-hop local IPV6_ADDRESS, 25
 set ipv6 next-hop peer-address, 24
 set ipv6 next-hop static IPV6_ADDRESS-global, 24
 set large-community LARGE-COMMUNITY, 96
 set large-community LARGE-COMMUNITY additive, 96
 set large-community LARGE-COMMUNITY LARGE-COMMUNITY, 96
 set local-preference +LOCAL_PREF, 25
 set local-preference -LOCAL_PREF, 25
 set local-preference LOCAL_PREF, 25
 set metric (*0-4294967295*), 169
 set metric <[+|-](1-4294967295)|rtt|+rtt|-rtt>, 25
 set metric [+|-](0-4294967295), 154, 161
 set mode <rr|xor|active-backup|broadcast|lacp> <12|123|134>, 229
 set origin ORIGIN <egp|igp|incomplete>, 25
 set security-association lifetime second (*120-28800*), 219
 set sr-te color (*I-4294967295*), 25
 set table (*I-4294967295*), 25
 set tag TAG, 24
 set transform-set IPSECTS, 219
 set weight WEIGHT, 25
 set-overload-bit, 136
 show archive config <sftp:|system:>, 32
 show archive config differences <startup-config|running-config|sftp:|system:> <startup-config|running-config|sftp:|system:>, 32
 show archive snapshots [sftp:|system:], 32

show bfd distributed, 56
 show bfd [vrf NAME] peer
 <WORD|<A.B.C.D|X:X::X:X>
 [*{*multihop|local-address
 <A.B.C.D|X:X::X:X>|interface
 IFNAME}]> [json], 56
 show bfd [vrf NAME] peers brief [json],
 56
 show bfd [vrf NAME] peers [json], 56
 show bgp <afi> <safi> neighbors WORD
 bestpath-routes [json] [wide], 85
 show bgp as-path-access-list WORD
 [json], 87
 show bgp as-path-access-list [json], 87
 show bgp community-list [NAME detail], 90
 show bgp extcommunity-list [NAME
 detail], 95
 show bgp ipv4 vpn summary, 104
 show bgp ipv4|ipv6 regexp LINE, 104
 show bgp ipv6 vpn summary, 104
 show bgp labelpool
 <chunks|inuse|ledger|requests|summary>
 [json], 103
 show bgp large-community-list, 96
 show bgp large-community-list NAME
 detail, 96
 show bgp listeners, 98
 show bgp statistics-all, 102
 show bgp update-groups statistics, 104
 show bgp update-groups
 [advertise-queue|advertised-routes|packet-~~show~~], 104
 show bgp X:X::X:X [json], 100
 show bgp [<ipv4|ipv6>
 <unicast|vpn|labeled-unicast>], 101
 show bgp [<ipv4|ipv6> vpn [route]] rd
 <all|RD>, 104
 show bgp [afi] [safi] statistics, 102
 show bgp [afi] [safi] [all] alias WORD
 [wide|json], 91
 show bgp [afi] [safi] [all] dampening
 dampened-paths [wide|json], 102
 show bgp [afi] [safi] [all] dampening
 flap-statistics [wide|json], 102
 show bgp [afi] [safi] [all] summary
 established [json], 101
 show bgp [afi] [safi] [all] summary
 failed [json], 101
 show bgp [afi] [safi] [all] summary
 neighbor [PEER] [json], 101
 show bgp [afi] [safi] [all] summary
 remote-as <internal|external|ASN>
 [json], 102
 show bgp [afi] [safi] [all] summary
 terse [json], 102
 show bgp [afi] [safi] [all] summary
 [json], 101
 show bgp [afi] [safi] [all] version
 (1-4294967295) [wide|json], 102
 show bgp [afi] [safi] [all] [wide|json],
 101
 show bgp [afi] [safi] [neighbor [PEER]
 [routes|advertised-routes|received-routes]
 [json], 102
 show bgp [all] [wide|json [detail]], 100
 show bridge (I-65535), 226
 show clock [json], 7
 show command history, 10
 show crypto ikev2 sa [detailed] [json],
 221
 show crypto ipsec sa [detailed] [json],
 223
 show crypto key [[KEY] [json]] [ssh], 207
 show crypto pki certificate [CA], 206
 show daemons status, 8
 show debug, 98
 show debugging eigrp, 135
 show debugging isis, 139
 show debugging ospf, 157
 show debugging rip, 171
 show debugging ripng, 173
 show hardware {cpu | disk | memory}, 15
 show ip access-list interfaces, 193
 show ip access-list [NAME] [json], 193
 show ip arp [IFNAME], 224
 show ip bgp A.B.C.D [json], 100
 show ip bgp large-community-info, 96
 show ip bgp [all] [wide|json [detail]],
 100
 show ip dhcp binding
 [<DHCP4POOL|A.B.C.D>], 46
 show ip dhcp pool, 46
 show ip eigrp [vrf NAME] interface, 135
 show ip eigrp [vrf NAME] neighbor, 135
 show ip eigrp [vrf NAME] topology, 135
 show ip igmp groups, 179
 show ip igmp groups retransmissions, 179
 show ip igmp interface, 179
 show ip igmp sources, 179
 show ip igmp sources retransmissions, 179
 show ip igmp statistics, 179
 show ip igmp [vrf NAME] join [json], 179
 show ip mroute vrf all count [json], 179
 show ip mroute vrf all summary [json],
 179
 show ip mroute [vrf NAME] count [json],
 179

```

show ip mroute [vrf NAME] summary
    [json], 179
show ip mroute [vrf NAME] [A.B.C.D
    [A.B.C.D]] [fill] [json], 179
show ip msdp mesh-group, 180
show ip msdp peer, 180
show ip multicast, 179
show ip multicast count vrf all [json],
    181
show ip multicast count [vrf NAME]
    [json], 181
show ip nat statistics, 185
show ip nat translations, 186
show ip ospf graceful-restart helper
    [detail] [json], 156
show ip ospf interface [INTERFACE]
    [json], 156
show ip ospf neighbor detail [json], 156
show ip ospf neighbor INTERFACE detail
    [json], 156
show ip ospf neighbor INTERFACE [json],
    156
show ip ospf neighbor [json], 156
show ip ospf route [json], 156
show ip ospf [json], 156
show ip ospf [vrf <NAME|all>] database
    (asbr-summary|external|network|router|summary)21
    adv-router ADV-ROUTER [json], 156
show ip ospf [vrf <NAME|all>] database
    (asbr-summary|external|network|router|summary)21
    LINK-STATE-ID adv-router ADV-ROUTER
    [json], 156
show ip ospf [vrf <NAME|all>] database
    (asbr-summary|external|network|router|summary)21
    LINK-STATE-ID self-originate [json],
    156
show ip ospf [vrf <NAME|all>] database
    (asbr-summary|external|network|router|summary)21
    LINK-STATE-ID [json], 156
show ip ospf [vrf <NAME|all>] database
    (asbr-summary|external|network|router|summary)21
    self-originate [json], 156
show ip ospf [vrf <NAME|all>] database
    (asbr-summary|external|network|router|summary)21
    [json], 156
show ip ospf [vrf <NAME|all>] database
    max-age [json], 156
show ip ospf [vrf <NAME|all>] database
    self-originate [json], 156
show ip ospf [vrf <NAME|all>] database
    [json], 156
show ip pim assert, 180
show ip pim assert-internal, 180
show ip pim assert-metric, 180
show ip pim assert-winner-metric, 180
show ip pim bsm-database, 181
show ip pim bsr, 181
show ip pim bsrp-info, 181
show ip pim group-type, 180
show ip pim interface, 180
show ip pim join, 180
show ip pim local-membership, 180
show ip pim mlag summary, 181
show ip pim mlag summary [json], 180
show ip pim mlag [vrf NAME|all]
    interface [detail|WORD] [json], 180
show ip pim neighbor, 180
show ip pim nexthop, 180
show ip pim nexthop-lookup, 180
show ip pim rp-info, 180
show ip pim rpf, 180
show ip pim secondary, 180
show ip pim state, 181
show ip pim upstream-join-desired, 181
show ip pim upstream-rpf, 181
show ip pim [vrf NAME] mlag upstream
    [A.B.C.D [A.B.C.D]] [json], 181
show ip pim [vrf NAME] upstream
    [A.B.C.D [A.B.C.D]] [json], 181
show ip prefix-list detail NAME [json],
    21
show ip prefix-list detail [json], 21
show ip prefix-list NAME A.B.C.D/M, 21
show ip prefix-list NAME A.B.C.D/M
    first-match, 21
show ip prefix-list NAME A.B.C.D/M
    longer, 21
show ip prefix-list NAME seq NUM [json],
    21
show ip prefix-list NAME [json], 21
show ip prefix-list summary NAME [json],
    21
show ip prefix-list summary [json], 21
show ip prefix-list [json], 21
show ip rip, 171
show ip rip status, 171
show ip ripng, 173
show ip ssh client known-host
    <A.B.C.D|X:X::X:X|HOST>, 6
show ip ssh pubkey-chain [verbose]
    [USER], 6
show ipv6 access-list [NAME] [json], 193
show ipv6 nd ra-interfaces [vrf
    <VRFNAME|all>], 39
show ipv6 ospf6 graceful-restart helper
    [detail] [json], 163
show ipv6 ospf6 summary-address
    [detail] [json], 160

```

```

show ipv6 ospf6 zebra [json], 163
show ipv6 ospf6 [vrf <NAME|all>]
  database adv-router A.B.C.D
  linkstate-id A.B.C.D [json], 163
show ipv6 ospf6 [vrf <NAME|all>]
  database self-originated [json],
  163
show ipv6 ospf6 [vrf <NAME|all>]
  database [<detail|dump|internal>]
  [json], 162
show ipv6 ospf6 [vrf <NAME|all>]
  interface traffic [json], 163
show ipv6 ospf6 [vrf <NAME|all>]
  interface [IFNAME] prefix
  [detail|<X:X::X:X|X:X::X:X/M>
  [<match|detail>]] [json], 163
show ipv6 ospf6 [vrf <NAME|all>]
  interface [json], 163
show ipv6 ospf6 [vrf <NAME|all>]
  neighbor [json], 163
show ipv6 ospf6 [vrf <NAME|all>]
  redistribute [json], 163
show ipv6 ospf6 [vrf <NAME|all>] route
  X:X::X:X/M match [detail] [json], 163
show ipv6 ospf6 [vrf <NAME|all>] route
  [<intra-area|inter-area|external-1|external-2|external-3|external-4|external-5>]
  [json], 163
show ipv6 ospf6 [vrf <NAME|all>] spf
  tree [json], 163
show ipv6 ospf6 [vrf <NAME|all>] [json],
  162
show ipv6 route ospf6, 163
show isis database [detail] [LSPID], 138
show isis hostname, 138
show isis interface [detail] [IFNAME],
  138
show isis neighbor [detail] [SYSTEMID],
  138
show isis route [level-1|level-2]
  [prefix-sid|backup], 138
show isis summary, 138
show isis topology [level-1|level-2], 138
show license, 48
show log all [follow], 28
show log frr [follow], 29
show log ipsec [follow], 29
show log kernel [follow], 29
show log mender [follow], 28
show log ntpd [follow], 28
show log snmpd [follow], 28
show log soolog [follow], 28
show log ssh [follow], 28
show log vpp [follow], 29
show login blocked-ips, 5
show login failures, 4
show memory control-plane, 16
show memory control-plane details, 17
show mpls ldp discovery [detail], 131
show mpls ldp ipv4 discovery [detail],
  131
show mpls ldp ipv4 interface, 131
show mpls ldp ipv4|ipv6 binding, 131
show mpls ldp ipv6 discovery [detail],
  131
show mpls ldp ipv6 interface, 131
show mpls ldp neighbor [A.B.C.D], 131
show mpls ldp neighbor [A.B.C.D]
  capabilities, 131
show mpls ldp neighbor [A.B.C.D] detail,
  131
show ntp sources stats, 38
show ntp sources [json], 37
show policy-map [NAME], 189
show processes, 10
show processes detailed process-id (0-
  1000000), 12
show processes memory, 13
show route-map [WORD] [json], 23
show system service status SERVICE, 34
show system service status SERVICE [summary]
  [r|w|t|e|x]], 18
show users, 5
show version, 10
show vrf, 195
show wireguard [(1-1024) PEER] stats
  [json], 211
show wireguard [(1-1024) PEER] [json],
  209
show [ip] bgp <ipv4|ipv6>
  community-list WORD, 103
show [ip] bgp <ipv4|ipv6>
  community-list WORD exact-match,
  103
show [ip] bgp <ipv4|ipv6>
  large-community, 103
show [ip] bgp <ipv4|ipv6>
  large-community LARGE-COMMUNITY,
  103
show [ip] bgp <ipv4|ipv6>
  large-community LARGE-COMMUNITY
  exact-match, 103
show [ip] bgp <ipv4|ipv6>
  large-community LARGE-COMMUNITY
  json, 103
show [ip] bgp <ipv4|ipv6>
  large-community-list WORD, 104
show [ip] bgp <ipv4|ipv6>
  large-community-list WORD

```

exact-match, 104
 show [ip] bgp <ipv4|ipv6>
 large-community-list WORD json, 104
 show [ip] bgp <ipv4|ipv6> [all]
 community COMMUNITY exact-match
 [wide|json], 103
 show [ip] bgp <ipv4|ipv6> [all]
 community COMMUNITY [wide|json],
 103
 show [ip] bgp <ipv4|ipv6> [all]
 community [wide|json], 103
 show [ip] bgp ipv4 vpn, 104
 show [ip] bgp ipv6 vpn, 104
 show [ip] bgp peer-group [json], 86
 show [ip] bgp regexp LINE, 101
 show [ip] bgp view NAME, 67
 show [ip] bgp [afi] [safi] [all]
 cidr-only [wide|json], 102
 show [ip] bgp [afi] [safi]
 [all] neighbors A.B.C.D
 [advertised-routes|received-routes|filtered-routes]
 [json|wide], 102
 show [ip] bgp [all] summary [wide]
 [json], 101
 snmp-server user USER auth <md5|sha>
 PASSWORD [priv des56 PRIV], 35
 source A.B.C.D, 42
 source-ip <A.B.C.D|X:X::X:X>, 198
 spf-interval [level-1 | level-2] (1-120),
 137
 subject-alt-name LINE, 202
 subject-name LINE..., 202
 summary-address X:X::X:X/M no-advertise,
 159
 summary-address X:X::X:X/M [tag
 (1-4294967295)] [{metric
 (0-16777215) | metric-type (1-2)}],
 159
 system service enable soomon, 34
 system service restart SERVICE, 34
 system tune apply default, 55
 system tune apply PROFILE, 55
 system tune profile TPROF, 51
 system update enable, 29
 system update inventory-poll-interval (5-
 2147483647), 29
 system update offline commit, 30
 system update offline install ARTIFACT,
 30
 system update offline list, 30
 system update server-url WORD, 29
 system update update-poll-interval (5-
 2147483647), 29
 table-map ROUTE-MAP-NAME, 80
 tcp syn-flood limit (1-4294967295), 34
 terminal colorize, 9
 terminal length (0-0-4294967295), 9
 timers basic UPDATE TIMEOUT GARBAGE, 170
 timers throttle spf (0-600000)
 (0-600000) (0-600000), 149, 158
 transmit-interval (10-60000), 56
 transport udp (1-65535), 42
 tunnel destination <A.B.C.D|X:X::X:X>,
 196
 tunnel mode gre, 196
 tunnel mode gre multipoint, 196
 tunnel mode ipip, 196
 tunnel mode ipip multipoint, 196
 tunnel mode ipsec, 196
 tunnel protection ipsec profile
 IPSECPROFILE, 196
 tunnel source <A.B.C.D|X:X::X:X>, 196
 tunnel vrf VRF, 196
 update-delay MAX-DELAY, 80
 update-delay MAX-DELAY ESTABLISH-WAIT, 80
 user password, 4
 username USER, 5
 version VERSION, 167
 vrf (VRF_NAME), 194
 vrf VRF, 208
 wireguard mode <normal|routing>, 209
 wireguard peer PEER, 208
 wireguard port (1000-65535), 208
 wireguard private-key X25519KEY, 208
 wireguard source A.B.C.D, 208
 write erase [A.B.C.D/M A.B.C.D], 9
 write file, 9
 write terminal, 9
 write-multiplier (1-100), 150, 159
 write-quanta (1-64), 100
 configure [terminal]
 configuration command, 9
 continue
 configuration command, 26
 continue N
 configuration command, 26
 control-plane
 configuration command, 53
 copy <sftp:|system:> <startup-config|pki>
 configuration command, 31
 copy <startup-config|running-config|pki>
 <sftp:|system:>
 configuration command, 31
 cpu main [exclusive] (1-256)
 configuration command, 52
 cpu weight (1-10000)
 configuration command, 52-54
 cpu worker [exclusive] (1-256)...

- configuration command, 52
 - cpu [exclusive] (1-256)...
 - configuration command, 53, 54
 - crypto ikev2 dpd (*1-3600*)
 - configuration command, 216
 - crypto ikev2 keyring IKEKEYRING
 - configuration command, 216
 - crypto ikev2 proposal IKEPOSAL
 - configuration command, 216
 - crypto ipsec profile IPSECPROFILE
 - configuration command, 219
 - crypto ipsec transform-set IPSECTS esp {hmac
 - HMAC_ALG |cipher CIPHER_ALG}
 configuration command, 218
 - crypto ipsec transform-set IPSECTS ah hmac
 - HMAC_ALG
 configuration command, 218
 - crypto key generate rawraw label LABEL
 - bytes (*32-1024*)
 configuration command, 201
 - crypto key generate rsa label NAME modulus
 - (*2048|4096*)
 configuration command, 201
 - crypto key generate ssh modulus (*2048|4096*)
 - configuration command, 201
 - crypto key generate x25519 label LABEL
 - configuration command, 201
 - crypto key zeroize RSAKEY
 - configuration command, 206
 - crypto pki authenticate TP
 - configuration command, 201
 - crypto pki enroll TP
 - configuration command, 202
 - crypto pki import TP certificate
 - configuration command, 203
 - crypto pki trustpoint NAME
 - configuration command, 201
- D**
- data-plane
 - configuration command, 51
 - debug bfd network
 - configuration command, 63
 - debug bfd peer
 - configuration command, 64
 - debug bfd zebra
 - configuration command, 64
 - debug bgp bestpath <A.B.C.D/M|X:X::X:X/M>
 - configuration command, 98
 - debug bgp bfd
 - configuration command, 98
 - debug bgp keepalives
 - configuration command, 98
 - debug bgp neighbor-events
 - configuration command, 98
 - debug bgp nht
 - configuration command, 98
 - debug bgp update-groups
 - configuration command, 99
 - debug bgp updates
 - configuration command, 98
 - debug bgp zebra
 - configuration command, 99
 - debug bond event
 - configuration command, 230
 - debug bridge event
 - configuration command, 228
 - debug dplane fib
 - configuration command, 27
 - debug dplane ipsec
 - configuration command, 27
 - debug eigrp packets
 - configuration command, 135
 - debug eigrp transmit
 - configuration command, 135
 - debug igmp
 - configuration command, 181
 - debug ipsec event
 - configuration command, 221
 - debug ipsec vici detail
 - configuration command, 221
 - debug ipsec vici json
 - configuration command, 221
 - debug isis adj-packets
 - configuration command, 138
 - debug isis checksum-errors
 - configuration command, 138
 - debug isis events
 - configuration command, 138
 - debug isis local-updates
 - configuration command, 138
 - debug isis packet-dump
 - configuration command, 139
 - debug isis protocol-errors
 - configuration command, 139
 - debug isis route-events
 - configuration command, 139
 - debug isis snp-packets
 - configuration command, 139
 - debug isis spf-events
 - configuration command, 139
 - debug isis spf-statistics
 - configuration command, 139
 - debug isis spf-triggers
 - configuration command, 139
 - debug isis update-packets
 - configuration command, 139
 - debug mpls ldp KIND

- configuration command, 132
- debug mroute
 - configuration command, 181
- debug mtrace
 - configuration command, 181
- debug nat44 event
 - configuration command, 185
- debug ospf bfd
 - configuration command, 156
- debug ospf event
 - configuration command, 157
- debug ospf ism
 - configuration command, 156
- debug ospf ism (*status|events|timers*)
 - configuration command, 156
- debug ospf lsa
 - configuration command, 157
- debug ospf lsa (*generate|flooding|refresh*)
 - configuration command, 157
- debug ospf nsm
 - configuration command, 156
- debug ospf nsm (*status|events|timers*)
 - configuration command, 157
- debug ospf nssa
 - configuration command, 157
- debug ospf packet (*hello|dd|ls-request|ls-update|ls-configuration*)
 - (*send|recv*) [*detail*]
 - configuration command, 156
- debug ospf zebra
 - configuration command, 157
- debug ospf zebra (*interface|redistribute*)
 - configuration command, 157
- debug ospf6 abr
 - configuration command, 164
- debug ospf6 asbr
 - configuration command, 164
- debug ospf6 border-routers
 - configuration command, 164
- debug ospf6 flooding
 - configuration command, 164
- debug ospf6 graceful-restart
 - configuration command, 164
- debug ospf6 interface
 - configuration command, 164
- debug ospf6 lsa
 - configuration command, 164
- debug ospf6 lsa aggregation
 - configuration command, 164
- debug ospf6 message
 - configuration command, 164
- debug ospf6 neighbor
 - configuration command, 164
- debug ospf6 nssa
 - configuration command, 164
- debug ospf6 route
 - configuration command, 164
- debug ospf6 spf
 - configuration command, 164
- debug ospf6 zebra
 - configuration command, 164
- debug pim bsm
 - configuration command, 182
- debug pim events
 - configuration command, 182
- debug pim nht
 - configuration command, 182
- debug pim packet-dump
 - configuration command, 182
- debug pim packets
 - configuration command, 182
- debug pim trace
 - configuration command, 182
- debug pim zebra
 - configuration command, 182
- debug prefix-list NAME match
 - <A.B.C.D/M|X:X::X:X/M>
 - [*address-mode*]
 - configuration command, 21
- debug qos event
 - configuration command, 189
- debug rip events
 - configuration command, 171
- debug rip packet
 - configuration command, 171
- debug rip zebra
 - configuration command, 171
- debug ripng events
 - configuration command, 173
- debug ripng packet
 - configuration command, 173
- debug ripng zebra
 - configuration command, 173
- debug service dhcp4
 - configuration command, 27
- debug service mender
 - configuration command, 26
- debug service ntpd
 - configuration command, 26
- debug service snmp
 - configuration command, 26
- debug span event
 - configuration command, 228
- debug tunnel event
 - configuration command, 197
- debug vlan event
 - configuration command, 228
- debug vpls event
 - configuration command, 200

debug vxlan event
 configuration command, 199
 default-information originate
 configuration command, 154, 167
 default-information originate always
 configuration command, 154
 default-information originate always metric
 (0-16777214)
 configuration command, 154
 default-information originate always metric
 (0-16777214) metric-type (1|2)
 configuration command, 155
 default-information originate always metric
 (0-16777214) metric-type (1|2)
 route-map WORD
 configuration command, 155
 default-information originate metric (0-16777214)
 configuration command, 154
 default-information originate metric
 (0-16777214) metric-type (1|2)
 configuration command, 154
 default-information originate metric
 (0-16777214) metric-type (1|2)
 route-map WORD
 configuration command, 154
 default-information originate
 [*{always|metric*
 (0-16777214)|metric-type
 (1-2)|route-map WORD}]
 configuration command, 162
 default-metric (0-16777214)
 configuration command, 155
 default-metric (1-16)
 configuration command, 168
 default-router A.B.C.D ...
 configuration command, 45
 delete <system:|sftp:>
 configuration command, 33
 description LINE ...
 configuration command, 208
 destination A.B.C.D, 42
 configuration command, 42
 detect-multiplier (2-255)
 configuration command, 56
 disadvantages
 Link-state routing protocol, 140
 discovery hello holdtime HOLDTIME
 configuration command, 130
 discovery hello interval INTERVAL
 configuration command, 130
 discovery transport-address A.B.C.D |
 A::B::C:D
 configuration command, 130
 distance (1-255)
 configuration command, 155, 168
 distance (1-255) A.B.C.D/M
 configuration command, 68, 168
 distance (1-255) A.B.C.D/M ACCESS-LIST
 configuration command, 168
 distance (1-255) A.B.C.D/M WORD
 configuration command, 68
 distance bgp (1-255) (1-255) (1-255)
 configuration command, 68
 distance ospf (intra-area|inter-area|external)
 (1-255)
 configuration command, 155
 Distance-vector routing protocol
 OSPF, 140
 distribute-list NAME out
 <kernel|connected|static|rip|isis|bgp|table>
 configuration command, 155
 distribute-list [prefix] LIST <in|out>
 IFNAME
 configuration command, 168, 173
 dns-server A.B.C.D ...
 configuration command, 44
 domain-name NAME
 configuration command, 45
 domain-password [clear | md5] <password>
 configuration command, 136
 domainname DOMAINNAME
 configuration command, 7
 DUAL, 134
 dual-stack transport-connection prefer ipv4
 configuration command, 130
 dump bgp all PATH [INTERVAL]
 configuration command, 99
 dump bgp all-et PATH [INTERVAL]
 configuration command, 99
 dump bgp routes-mrt PATH
 configuration command, 99
 dump bgp routes-mrt PATH INTERVAL
 configuration command, 99
 dump bgp updates PATH [INTERVAL]
 configuration command, 99
 dump bgp updates-et PATH [INTERVAL]
 configuration command, 99

E

echo receive-interval <disabled|(10-60000)>
 configuration command, 56
 echo transmit-interval (10-60000)
 configuration command, 57
 enable config password PASSWORD
 configuration command, 4
 enable password PASSWORD
 configuration command, 3

encapsulation default
 configuration command, 225

encapsulation dot1ad (1-4094) dot1q (1-4094)
 configuration command, 225

encapsulation dot1q (1-4094) [exact]
 [second-dot1q (1-4094)]
 configuration command, 225

encryption ALGORITHM
 configuration command, 216

endpoint A.B.C.D port (1000-65535)
 configuration command, 209

enrollment terminal pem
 configuration command, 202

exec-timeout MINUTE [SECOND]
 configuration command, 9

Exit Policy, 22

F

find COMMAND...
 configuration command, 18

flow exporter, 42
 configuration command, 42

flow monitor
 configuration command, 42

flush_timer TIME
 configuration command, 172

G

graceful-restart helper enable [A.B.C.D]
 configuration command, 155, 162

graceful-restart helper planned-only
 configuration command, 155, 162

graceful-restart helper strict-lsa-checking
 configuration command, 155, 162

graceful-restart helper
 supported-grace-time
 configuration command, 155

graceful-restart helper
 supported-grace-time (10-1800)
 configuration command, 162

graceful-restart prepare ip ospf
 configuration command, 155

graceful-restart prepare ipv6 ospf
 configuration command, 162

graceful-restart [grace-period (1-1800)]
 configuration command, 155, 162

group GROUP
 configuration command, 216

H

Hello protocol
 OSPF, 140

hostname dynamic
 configuration command, 136

hostname HOSTNAME
 configuration command, 7

I

identity address <A.B.C.D|X:X::X:X>, 216
 configuration command, 216

identity email MAIL
 configuration command, 216

identity fqdn FQDN
 configuration command, 216

identity local address <A.B.C.D|X:X::X:X>
 configuration command, 217

identity local email MAIL
 configuration command, 217

identity local fqdn FQDN
 configuration command, 217

import vrf VRFNAME
 configuration command, 98

import|export vpn
 configuration command, 98

included-address A.B.C.D A.B.C.D
 configuration command, 44

ingress-replication A.B.C.D
 configuration command, 198

integrity ALGORITHM
 configuration command, 216

interface bundle-ether (1-65535)
 configuration command, 229

interface IFACE
 configuration command, 130

interface IFNAME.(0-4095)
 configuration command, 225

interface mpls-tunnel
 configuration command, 199

interface nve (0-100000000)
 configuration command, 198

interface tunnel [vrf VRF] (0-1023)
 configuration command, 196

interface wireguard (0-1023)
 configuration command, 208

ip access-group ACL4 in
 configuration command, 193

ip access-group ACL4 in out
 configuration command, 193

ip access-group ACL4 out
 configuration command, 193

ip access-list ACL4
 configuration command, 189

ip access-list resequence ACL4
 (1-2147483647) (1-2147483647)
 configuration command, 192

ip address dhcp
 configuration command, 46

ip dhcp client hostname HOSTNAME

- configuration command, 44
- ip dhcp client request dns-nameserver
 - configuration command, 44
- ip dhcp client request router
 - configuration command, 44
- ip dhcp pool DHCP4POOL
 - configuration command, 44
- ip dhcp server
 - configuration command, 46
- ip flow monitor output
 - configuration command, 42
- ip host NAME A.B.C.D
 - configuration command, 7
- ip igmp
 - configuration command, 177
- ip igmp generate-query-once [version (2-3)]
 - configuration command, 176
- ip igmp join A.B.C.D [A.B.C.D]
 - configuration command, 177
- ip igmp last-member-query-count (I-255)
 - configuration command, 177
- ip igmp last-member-query-interval (I-65535)
 - configuration command, 177
- ip igmp query-interval (I-65535)
 - configuration command, 177
- ip igmp query-max-response-time (I-65535)
 - configuration command, 177
- ip igmp version (2-3)
 - configuration command, 177
- ip igmp watermark-warn (I-65535)
 - configuration command, 176
- ip mroute A.B.C.D/M A.B.C.D (I-255)
 - configuration command, 178
- ip mroute A.B.C.D/M INTERFACE (I-255)
 - configuration command, 178
- ip mroute INTERFACE A.B.C.D [A.B.C.D]
 - configuration command, 178
- ip msdp mesh-group WORD member A.B.C.D
 - configuration command, 179
- ip msdp mesh-group WORD source A.B.C.D
 - configuration command, 179
- ip msdp peer A.B.C.D source A.B.C.D
 - configuration command, 179
- ip msdp timers (1-65535) (1-65535) [(1-65535)]
 - configuration command, 178
- ip multicast boundary oil WORD
 - configuration command, 177
- ip multicast rpf-lookup-mode WORD
 - configuration command, 176
- ip name-server A.B.C.D
 - configuration command, 7
- ip nat forwarding
 - configuration command, 185
- ip nat inside
 - configuration command, 185
- ip nat inside source static <tcp|udp> A.B.C.D (1-65535) A.B.C.D (I-65535)
 - configuration command, 184
- ip nat inside source static A.B.C.D A.B.C.D
 - configuration command, 183
- ip nat outside
 - configuration command, 185
- ip nat pool PNAT44 A.B.C.D [A.B.C.D]
 - configuration command, 185
- ip ospf area (A.B.C.D|(0-4294967295))
 - configuration command, 154
- ip ospf area AREA [ADDR]
 - configuration command, 153
- ip ospf authentication message-digest
 - configuration command, 153
- ip ospf authentication-key AUTH_KEY
 - configuration command, 153
- ip ospf bfd
 - configuration command, 58
- ip ospf bfd profile BFDPROF
 - configuration command, 58
- ip ospf cost (I-65535)
 - configuration command, 153
- ip ospf dead-interval (I-65535)
 - configuration command, 153
- ip ospf dead-interval minimal hello-multiplier (2-20)
 - configuration command, 153
- ip ospf hello-interval (I-65535)
 - configuration command, 153
- ip ospf message-digest-key KEYID md5 KEY
 - configuration command, 153
- ip ospf passive [A.B.C.D]
 - configuration command, 154
- ip ospf priority (0-255)
 - configuration command, 154
- ip ospf retransmit-interval (I-65535)
 - configuration command, 154
- ip ospf transmit-delay (1-65535) [A.B.C.D]
 - configuration command, 154
- ip pim
 - configuration command, 177
- ip pim active-active
 - configuration command, 177
- ip pim bfd [profile BFDPROF]
 - configuration command, 59
- ip pim bsm
 - configuration command, 177
- ip pim drpriority (I-4294967295)
 - configuration command, 177
- ip pim ecmp
 - configuration command, 175

ip pim ecmp rebalance
 configuration command, 175
 ip pim hello (1-65535) (I-65535)
 configuration command, 177
 ip pim join-prune-interval (I-65535)
 configuration command, 175
 ip pim keep-alive-timer (I-65535)
 configuration command, 176
 ip pim packets (I-255)
 configuration command, 176
 ip pim register-accept-list PLIST
 configuration command, 175
 ip pim register-suppress-time (I-65535)
 configuration command, 176
 ip pim rp A.B.C.D A.B.C.D/M
 configuration command, 175
 ip pim send-v6-secondary
 configuration command, 176
 ip pim spt-switchover infinity-and-beyond
 configuration command, 175
 ip pim ssm prefix-list WORD
 configuration command, 176
 ip pim unicast-bsm
 configuration command, 177
 ip pim use-source A.B.C.D
 configuration command, 177
 ip prefix-list NAME (permit|deny) PREFIX
 [le LEN] [ge LEN]
 configuration command, 20
 ip prefix-list NAME description DESC
 configuration command, 21
 ip prefix-list NAME seq NUMBER
 (permit|deny) PREFIX [le LEN] [ge
 LEN]
 configuration command, 20
 ip rip authentication key-chain KEY-CHAIN
 configuration command, 170
 ip rip authentication mode md5
 configuration command, 170
 ip rip authentication mode text
 configuration command, 170
 ip rip authentication string STRING
 configuration command, 170
 ip rip receive version VERSION
 configuration command, 167
 ip rip send version VERSION
 configuration command, 167
 ip route NETWORK GATEWAY table TABLENO
 nexthop-vrf VRFNAME DISTANCE vrf
 VRFNAME
 configuration command, 174
 ip split-horizon
 configuration command, 167
 ip ssh client
 configuration command, 6
 ip ssh pubkey-chain
 configuration command, 5
 ip verify unicast source reachable-via [rx
 | any]
 configuration command, 34
 ip vrf forwarding NAME
 configuration command, 194
 ipv6 access-list ACL6
 configuration command, 189
 ipv6 access-list resequence ACL6
 (1-2147483647) (I-2147483647)
 configuration command, 192
 ipv6 enable
 configuration command, 39
 ipv6 nd adv-interval-option
 configuration command, 40
 ipv6 nd dnssl domain-name-suffix [lifetime]
 configuration command, 41
 ipv6 nd home-agent-config-flag
 configuration command, 40
 ipv6 nd home-agent-lifetime [(0-65520)]
 configuration command, 40
 ipv6 nd home-agent-preference [(0-65535)]
 configuration command, 40
 ipv6 nd managed-config-flag
 configuration command, 40
 ipv6 nd mtu [(1-65535)]
 configuration command, 40
 ipv6 nd other-config-flag
 configuration command, 40
 ipv6 nd prefix ipv6prefix [valid-lifetime]
 [preferred-lifetime] [off-link]
 [no-autoconfig] [router-address]
 configuration command, 39
 ipv6 nd ra-fast-retrans
 configuration command, 39
 ipv6 nd ra-hop-limit [(0-255)]
 configuration command, 40
 ipv6 nd ra-interval [(1-1800)]
 configuration command, 39
 ipv6 nd ra-interval [msec (70-1800000)]
 configuration command, 39
 ipv6 nd ra-lifetime [(0-9000)]
 configuration command, 40
 ipv6 nd ra-retrans-interval
 [(0-4294967295)]
 configuration command, 40
 ipv6 nd rdns ipv6address [lifetime]
 configuration command, 41
 ipv6 nd reachable-time [(1-3600000)]
 configuration command, 40
 ipv6 nd router-preference
 [high|medium|low]

- configuration command, 40
 - ipv6 nd suppress-ra
 - configuration command, 39
 - ipv6 ospf6 area <A.B.C.D| (0-4294967295)>
 - configuration command, 161
 - ipv6 ospf6 bfd [profile BFDPROF]
 - configuration command, 59
 - ipv6 ospf6 cost COST
 - configuration command, 161
 - ipv6 ospf6 dead-interval DEADINTERVAL
 - configuration command, 161
 - ipv6 ospf6 hello-interval HELLOINTERVAL
 - configuration command, 161
 - ipv6 ospf6 network (*broadcast|point-to-point*)
 - configuration command, 161
 - ipv6 ospf6 priority PRIORITY
 - configuration command, 161
 - ipv6 ospf6 retransmit-interval RETRANSMITINTERVAL
 - configuration command, 161
 - ipv6 ospf6 transmit-delay TRANSMITDELAY
 - configuration command, 161
 - ipv6 route NETWORK from SRCPREFIX GATEWAY
 - table TABLENO nexthop-vrf VRFNAME
 - DISTANCE vrf VRFNAME
 - configuration command, 174
 - ipv6 traffic-group ACL6 in
 - configuration command, 193
 - ipv6 traffic-group ACL6 in out
 - configuration command, 193
 - ipv6 traffic-group ACL6 out
 - configuration command, 193
 - is-type [level-1 | level-1-2 | level-2-only]
 - configuration command, 137
 - isis bfd
 - configuration command, 58
 - isis bfd profile BFDPROF
 - configuration command, 58
 - isis circuit-type [level-1 | level-1-2 | level-2]
 - configuration command, 137
 - isis csnp-interval (1-600) [level-1 | level-2]
 - configuration command, 137
 - isis hello padding
 - configuration command, 137
 - isis hello-interval (1-600) [level-1 | level-2]
 - configuration command, 137
 - isis hello-multiplier (2-100) [level-1 | level-2]
 - configuration command, 137
 - isis metric [(0-255) | (0-16777215)]
 - [level-1 | level-2]
 - configuration command, 137
 - isis network point-to-point
 - configuration command, 137
 - isis passive
 - configuration command, 138
 - isis password [clear | md5] <password>
 - configuration command, 138
 - isis priority (0-127) [level-1 | level-2]
 - configuration command, 138
 - isis psnp-interval (1-120) [level-1 | level-2]
 - configuration command, 138
 - isis three-way-handshake
 - configuration command, 138
- ## K
- key LINE ..
 - configuration command, 5
 - keyring local IKEKEYRING
 - configuration command, 218
 - known-host <A.B.C.D|X:X:X:X|HOST>
 - configuration command, 6
- ## L
- l2vpn NAME type vpls
 - configuration command, 199
 - label vpn export (0..1048575)|auto
 - configuration command, 98
 - label WORD
 - configuration command, 57
 - lease <(0-365) (0-23) (0-59)|infinite>
 - configuration command, 45
 - license check
 - configuration command, 47
 - license generate license-request [terminal]
 - configuration command, 47
 - license import license terminal
 - configuration command, 47
 - lifetime <120-86400>
 - configuration command, 218
 - line vty
 - configuration command, 8
 - Link State Advertisement, 140
 - Link State Announcement, 140
 - Link State Database, 140
 - Link-state routing protocol
 - advantages, 140
 - disadvantages, 140
 - OSPF, 140
 - list
 - configuration command, 9
 - log commands

configuration command, 28
 log export removable-storage
 configuration command, 7
 log export ssh HOST USER PATH
 configuration command, 7
 log facility [FACILITY]
 configuration command, 28
 log file [LEVEL]
 configuration command, 27
 log monitor [LEVEL]
 configuration command, 28
 log record-priority
 configuration command, 28
 log rotate max-file-life (*I-1000*)
 configuration command, 27
 log rotate max-file-size SIZE
 configuration command, 27
 log rotate max-files (*I-1000*)
 configuration command, 27
 log rotate max-retention (*I-1000*)
 configuration command, 27
 log rotate max-use <SIZE|PERCENTAGE>
 configuration command, 27
 log syslog HOST loki [skip-host-verify]
 [port (100-65535)]
 configuration command, 27
 log syslog [A.B.C.D|HOST] tcp [tls
 [skip-host-verify]] [port
 (100-65535)]
 configuration command, 27
 log syslog [LEVEL]
 configuration command, 27
 log timestamp precision [(0-6)]
 configuration command, 28
 log-adjacency-changes
 configuration command, 136
 log-adjacency-changes [detail]
 configuration command, 148
 login block-for TIME attempts ATTEMPT
 within PERIOD
 configuration command, 5
 login unblock <A.B.C.D|X:X::X:X|all>
 configuration command, 5
 LSA
 OSPF, 141
 LSA flooding, 140
 lsp-gen-interval [level-1 | level-2] (*I-120*)
 configuration command, 137
 lsp-mtu (*I28-4352*)
 configuration command, 136
 lsp-refresh-interval [level-1 | level-2]
 (*I-65235*)
 configuration command, 137

M

management-plane
 configuration command, 54
 match access-list ACL
 configuration command, 187
 match address local A.B.C.D
 configuration command, 217
 match alias WORD
 configuration command, 91
 match any
 configuration command, 187
 match as-path AS_PATH
 configuration command, 23
 match as-path WORD
 configuration command, 88
 match certificate
 configuration command, 218
 match community COMMUNITY_LIST
 configuration command, 24
 match community WORD exact-match
 [exact-match]
 configuration command, 91
 match destination-address A.B.C.D/M
 configuration command, 187
 match destination-address X:X::X:X/M
 configuration command, 187
 match dscp (*0-63*)
 configuration command, 187
 match extcommunity WORD
 configuration command, 95
 match identity remote address
 <A.B.C.D|X:X::X:X>
 configuration command, 217
 match identity remote email EMAIL
 configuration command, 218
 match identity remote fqdn FQDN
 configuration command, 217
 match interface WORD
 configuration command, 169
 match ip address ACCESS_LIST
 configuration command, 23
 match ip address prefix-len 0-32
 configuration command, 23
 match ip address prefix-list PREFIX_LIST
 configuration command, 23
 match ip address prefix-list WORD
 configuration command, 169
 match ip address WORD
 configuration command, 169
 match ip next-hop address IPV4_ADDR
 configuration command, 23
 match ip next-hop prefix-list WORD
 configuration command, 169
 match ip next-hop WORD

- configuration command, 169
 - match ipv6 address ACCESS_LIST
 - configuration command, 23
 - match ipv6 address prefix-len 0-128
 - configuration command, 23
 - match ipv6 address prefix-list PREFIX_LIST
 - configuration command, 23
 - match ipv6 next-hop IPV6_ADDR
 - configuration command, 23
 - match large-community LINE [exact-match]
 - configuration command, 96
 - match local-preference METRIC
 - configuration command, 24
 - match metric (0-4294967295)
 - configuration command, 169
 - match metric METRIC
 - configuration command, 24
 - match peer A.B.C.D|X:X:X:X
 - configuration command, 117
 - match peer INTERFACE_NAME
 - configuration command, 24
 - match peer IPV4_ADDR
 - configuration command, 24
 - match peer IPV6_ADDR
 - configuration command, 24
 - match protocol (0-63)
 - configuration command, 187
 - match source-address A.B.C.D/M
 - configuration command, 187
 - match source-address X:X:X:X/M
 - configuration command, 187
 - match source-instance NUMBER
 - configuration command, 24
 - match source-protocol PROTOCOL_NAME
 - configuration command, 24
 - match tag TAG
 - configuration command, 24
 - Matching Conditions, 22
 - Matching Policy, 22
 - max-lsp-lifetime [level-1 | level-2] (360-65535)
 - configuration command, 137
 - max-metric router-lsa administrative
 - configuration command, 149
 - max-metric router-lsa
 - [on-startup|on-shutdown] (5-86400)
 - configuration command, 149
 - maximum-paths (1-128)
 - configuration command, 68
 - maximum-paths (1-64)
 - configuration command, 150, 158
 - maximum-paths ibgp (1-128)
 - [equal-cluster-length]
 - configuration command, 68
 - member pseudowire PW
 - configuration command, 199
 - member vni (1-16777214)
 - configuration command, 198
 - member vni (1-16777214) associate-vrf
 - configuration command, 198
 - memory heap main SIZE
 - configuration command, 52
 - memory heap stats SIZE
 - configuration command, 52
 - memory max SIZE
 - configuration command, 52, 54, 55
 - memory packet-buffer count (16384-1049776)
 - configuration command, 53
 - memory packet-buffer size (2048-65536)
 - configuration command, 53
 - metric-style [narrow | transition | wide]
 - configuration command, 136
 - mode transport
 - configuration command, 218
 - mode tunnel
 - configuration command, 218
 - monitor capture export scp:
 - configuration command, 227
 - monitor capture start
 - configuration command, 227
 - monitor capture stop
 - configuration command, 227
 - monitor dispatch-trace export scp:
 - configuration command, 228
 - monitor dispatch-trace start
 - configuration command, 228
 - monitor dispatch-trace stop
 - configuration command, 228
 - monitor session (1-66) destination
 - interface INTERFACE
 - configuration command, 227
 - monitor session (1-66) source interface
 - INTERFACE [both|rx|tx]
 - configuration command, 227
 - mpls ip
 - configuration command, 195
 - mpls ipv6
 - configuration command, 195
 - mpls ldp
 - configuration command, 130
 - mtrace A.B.C.D [A.B.C.D]
 - configuration command, 181
- ## N
- neighbor A.B.C.D|X.X:X.X|peer-group
 - route-map WORD import|export
 - configuration command, 117

neighbor <A.B.C.D|X:X::X:X|WORD>
 addpath-tx-all-paths
 configuration command, 84
neighbor <A.B.C.D|X:X::X:X|WORD>
 addpath-tx-bestpath-per-AS
 configuration command, 84
neighbor <A.B.C.D|X:X::X:X|WORD> allowas-in
 [<(1-10)|origin>]
 configuration command, 83
neighbor <A.B.C.D|X:X::X:X|WORD>
 as-override
 configuration command, 83
neighbor <A.B.C.D|X:X::X:X|WORD> bfd
 configuration command, 58
neighbor <A.B.C.D|X:X::X:X|WORD> bfd
 check-control-plane-failure
 configuration command, 58
neighbor <A.B.C.D|X:X::X:X|WORD> bfd
 profile BFDPROF
 configuration command, 58
neighbor <A.B.C.D|X:X::X:X|WORD>
 disable-addpath-rx
 configuration command, 84
neighbor <A.B.C.D|X:X::X:X|WORD> tcp-mss
 (1-65535)
 configuration command, 111
neighbor A.B.C.D
 configuration command, 166
neighbor A.B.C.D activate
 configuration command, 77
neighbor A.B.C.D graceful-restart
 configuration command, 76
neighbor A.B.C.D graceful-restart-disable
 configuration command, 76
neighbor A.B.C.D graceful-restart-helper
 configuration command, 76
neighbor A.B.C.D holdtime HOLDTIME
 configuration command, 130
neighbor A.B.C.D password PASSWORD
 configuration command, 130
neighbor A.B.C.D route-server-client
 configuration command, 117
neighbor lsr-id A.B.C.D
 configuration command, 199
neighbor PEER advertisement-interval (0-600)
 configuration command, 84
neighbor PEER attribute-unchanged
 [{as-path|next-hop|med}]
 configuration command, 82
neighbor PEER capability extended-nexthop
 configuration command, 84
neighbor PEER default-originate
 configuration command, 82
neighbor PEER description ...
 configuration command, 82
neighbor PEER disable-connected-check
 configuration command, 81
neighbor PEER disable-link-bw-encoding-ieee
 configuration command, 82
neighbor PEER distribute-list NAME [in|out]
 configuration command, 85
neighbor PEER dont-capability-negotiate
 configuration command, 87
neighbor PEER ebgp-multihop
 configuration command, 82
neighbor PEER filter-list NAME [in|out]
 configuration command, 85
neighbor PEER interface IFNAME
 configuration command, 82
neighbor PEER interface remote-as
 <internal|external|ASN>
 configuration command, 82
neighbor PEER local-as AS-NUMBER
 [no-prepend] [replace-as]
 configuration command, 83
neighbor PEER maximum-prefix NUMBER [force]
 configuration command, 83
neighbor PEER maximum-prefix-out NUMBER
 configuration command, 83
neighbor PEER next-hop-self [force]
 configuration command, 82
neighbor PEER override-capability
 configuration command, 87
neighbor PEER password PASSWORD
 configuration command, 83
neighbor PEER peer-group PGNAME
 configuration command, 85
neighbor PEER port PORT
 configuration command, 82
neighbor PEER prefix-list NAME [in|out]
 configuration command, 85
neighbor PEER remote-as ASN
 configuration command, 80
neighbor PEER remote-as external
 configuration command, 81
neighbor PEER remote-as internal
 configuration command, 81
neighbor PEER route-map NAME [in|out]
 configuration command, 85
neighbor PEER route-reflector-client
 configuration command, 105
neighbor PEER send-community
 configuration command, 83
neighbor PEER sender-as-path-loop-detection
 configuration command, 85
neighbor PEER shutdown [message MSG...]
 [rtt (1-65535) [count (1-255)]]
 configuration command, 81

neighbor PEER solo
configuration command, 85

neighbor PEER strict-capability-match
configuration command, 87

neighbor PEER timers (0-65535) (0-65535)
configuration command, 84

neighbor PEER timers connect (1-65535)
configuration command, 84

neighbor PEER timers delayopen (1-240)
configuration command, 85

neighbor PEER ttl-security hops NUMBER
configuration command, 84

neighbor PEER update-source
<IFNAME|ADDRESS>
configuration command, 82

neighbor PEER version VERSION
configuration command, 82

neighbor PEER weight WEIGHT
configuration command, 83

neighbor PEER-GROUP route-server-client
configuration command, 117

neighbor WORD peer-group
configuration command, 85

neighbor X:X::X:X route-server-client
configuration command, 117

net XX.XXXX.XXX.XX
configuration command, 136

network A.B.C.D/M
configuration command, 44, 77

network A.B.C.D/M area (0-4294967295)
configuration command, 149

network A.B.C.D/M area A.B.C.D
configuration command, 149

network IFNAME
configuration command, 166, 172

network NETWORK
configuration command, 134, 166, 172

next hop vpn export A.B.C.D|X:X::X:X
configuration command, 98

no agentx
configuration command, 35

no aggregation timer (5-1800)
configuration command, 159

no allowed-ip [A.B.C.D/M]
configuration command, 208

no banner motd
configuration command, 8

no class-map CNAM
configuration command, 187

no cpu main [[exclusive] (1-256)]
configuration command, 52

no cpu weight [(1-10000)]
configuration command, 52-54

no cpu worker [[exclusive] (1-256)]
configuration command, 52-54

no crypto pki trustpoint TPNAME
configuration command, 206

no enable config password PASSWORD
configuration command, 4

no enable password PASSWORD
configuration command, 3

no exec-timeout
configuration command, 9

no ip access-list ACL4
configuration command, 190

no ip flow monitor output
configuration command, 42

no ip vrf forwarding [NAME]
configuration command, 194

no ipv6 access-list ACL6
configuration command, 190

no key (1-65535)
configuration command, 6

no key HASH
configuration command, 5

no match any
configuration command, 187

no memory heap main [SIZE]
configuration command, 52

no memory heap stats [SIZE]
configuration command, 52

no memory max [SIZE]
configuration command, 55

no memory packet-buffer count
[(16384-1049776)]
configuration command, 53

no memory packet-buffer size [(2048-65536)]
configuration command, 53

no ntp
configuration command, 38

no ntp authentication-key (1-65535)
configuration command, 36

no poll sleep [(0-10000)]
configuration command, 53

no record netflow <ipv4|ipv6> prefix-port
configuration command, 42

no security passwords min-length
configuration command, 4

no subject-alt-name LINE
configuration command, 202

no summary-address X:X::X:X/M no-advertise
configuration command, 159

no summary-address X:X::X:X/M [tag
(1-4294967295)] [{metric
(0-1677215) | metric-type (1-2)}]
configuration command, 159

no system tune profile TPROF
configuration command, 51

ntp authentication
 configuration command, 37

ntp authentication-key (1-65535) sha1 WORD
 configuration command, 36

ntp server SERVER [OPTIONS]
 configuration command, 35

ntp-server NTP ...
 configuration command, 45

O

offset-list ACCESS-LIST (*in|out*)
 configuration command, 168

offset-list ACCESS-LIST (*in|out*) IFNAME
 configuration command, 168

on-match goto N
 configuration command, 26

on-match next
 configuration command, 26

ordered-control
 configuration command, 130

OSPF
 Area, 141
 Distance-vector routing protocol, 140
 Hello protocol, 140
 Link-state routing protocol, 140
 LSA, 141

ospf abr-type TYPE
 configuration command, 148

ospf rfc1583compatibility
 configuration command, 148

ospf router-id A.B.C.D
 configuration command, 148

ospf6 router-id A.B.C.D
 configuration command, 158

P

passive-interface (*IFNAME|default*)
 configuration command, 134, 166

passive-interface default
 configuration command, 148

password
 configuration command, 3

peer <A.B.C.D|X:X::X:X>
 [{multihop|local-address
 <A.B.C.D|X:X::X:X>|interface
 IFNAME|vrf NAME}]
 configuration command, 56

peer PEER
 configuration command, 216

police BPS [NORMALBURST [MAXBURST]]
 conform-action ACTION exceed-action
 ACTION [violate-action ACTION]
 configuration command, 188

policy-map NAME

configuration command, 188

poll sleep (*0-10000*)
 configuration command, 53

pre-shared-key LINE, 216
 configuration command, 216

proactive-arp
 configuration command, 150

profile BFDPROF
 configuration command, 57

profile WORD
 configuration command, 56

proposal IKEPOSAL
 configuration command, 218

public-key LINE [base64]
 configuration command, 208

purge-originator
 configuration command, 136

pw-id (*1-4294967295*)
 configuration command, 199

R

rd vpn export AS:NN|IP:nn
 configuration command, 97

read-quanta (*1-10*)
 configuration command, 100

receive-interval (*10-60000*)
 configuration command, 56

record netflow <ipv4|ipv6> prefix-port
 configuration command, 42

redistribute <bgp|connected|isis|kernel|ospf|rip|static|table|table-
 [metric (1-4294967295)
 (0-4294967295) (0-255) (1-255)
 (1-65535)]
 configuration command, 134

redistribute <bgp|connected|isis|kernel|ospf|rip|static|table|table-
 [metric-type (1-2)] [metric
 (0-16777214)] [route-map WORD]
 configuration command, 154

redistribute <bgp|connected|isis|kernel|ospf|sharp|static|table|table-
 [metric (0-16)] [route-map WORD]
 configuration command, 167

redistribute <bgp|connected|isis|kernel|ripng|static|table|table-
 [metric-type (1-2)] [metric
 (0-16777214)] [route-map WORD]
 configuration command, 162

redistribute <connected|isis|kernel|ospf|ospf6|rip|ripng|static|table|table-
 [metric (0-4294967295)] [route-map
 WORD]
 configuration command, 79

remark LINE ..
 configuration command, 190

rewrite tag pop <1|2>
 configuration command, 226

- rewrite tag push <1|2> <dot1q|dot1ad>
(0-4095) [(0-4095)]
configuration command, 226
- RFC
- RFC 1195, 135
 - RFC 1583, 148
 - RFC 1771, 64, 114
 - RFC 1930, 64
 - RFC 1997, 88
 - RFC 1998, 88
 - RFC 2080, 172
 - RFC 2131, 43
 - RFC 2283, 66
 - RFC 2328, 140, 148
 - RFC 2439, 70
 - RFC 2462, 41
 - RFC 2740, 158
 - RFC 2842, 66
 - RFC 2858, 64
 - RFC 3031, 129
 - RFC 3107, 64
 - RFC 3137, 149
 - RFC 3345, 73
 - RFC 3509, 148, 151
 - RFC 3765, 89
 - RFC 4191, 41
 - RFC 4271, 64
 - RFC 4364, 64, 97
 - RFC 4447, 129
 - RFC 4659, 64, 97
 - RFC 4861, 41
 - RFC 5036, 129
 - RFC 5303, 138
 - RFC 5308, 135
 - RFC 5561, 129
 - RFC 5880, 55
 - RFC 5881, 55
 - RFC 5883, 55-57
 - RFC 5919, 129
 - RFC 6232, 136
 - RFC 6275, 41
 - RFC 6667, 129
 - RFC 6720, 129
 - RFC 7552, 129, 130
 - RFC 7611, 88
 - RFC 7938, 124
 - RFC 7999, 89
 - RFC 8092, 95
 - RFC 8106, 41
 - RFC 8195, 95
 - RFC 8277, 64
 - RFC 8326, 88, 100
- route A.B.C.D/M
configuration command, 167
- route NETWORK
configuration command, 172
- route-map ROUTE-MAP-NAME (permit|deny)
ORDER
configuration command, 23
- route-map ROUTE-MAP-NAME optimization
configuration command, 26
- route-map vpn import|export MAP
configuration command, 98
- router bgp AS-NUMBER view NAME
configuration command, 67
- router bgp ASN
configuration command, 66
- router bgp ASN vrf VRFNAME
configuration command, 67
- router eigrp (1-65535) [vrf NAME]
configuration command, 134
- router isis WORD [vrf NAME]
configuration command, 136
- router ospf [{(1-65535)|vrf NAME}]
configuration command, 148
- router ospf6 [vrf NAME]
configuration command, 158
- router rip
configuration command, 166
- router ripng
configuration command, 172
- router-id A.B.C.D
configuration command, 130
- rsakeypair KEY
configuration command, 202
- rt vpn import|export|both RTLIST...
configuration command, 97
- ## S
- security passwords min-length
configuration command, 4
- service cputime-stats
configuration command, 8
- service cputime-warning (1-4294967295)
configuration command, 8
- service password-encryption
configuration command, 8
- service walltime-warning (1-4294967295)
configuration command, 8
- service-policy PMAP in
configuration command, 188
- Set Actions, 22
- set as-path exclude AS-NUMBER...
configuration command, 25
- set as-path prepend AS_PATH
configuration command, 25
- set as-path prepend AS-PATH
configuration command, 88

```

set as-path prepend last-as NUM
  configuration command, 88
set comm-list WORD delete
  configuration command, 92
set community <none|COMMUNITY> additive
  configuration command, 92
set community COMMUNITY
  configuration command, 25
set distance DISTANCE
  configuration command, 25
set extcommunity bandwidth <(1-25600)
  | cumulative | num-multipaths>
  [non-transitive]
  configuration command, 95
set extcommunity none
  configuration command, 95
set extcommunity rt EXTCOMMUNITY
  configuration command, 95
set extcommunity soo EXTCOMMUNITY
  configuration command, 95
set ikev2 profile IKEPROFILE
  configuration command, 219
set ip next-hop A.B.C.D
  configuration command, 169
set ip next-hop IPV4_ADDRESS
  configuration command, 24
set ip next-hop peer-address
  configuration command, 24
set ip next-hop unchanged
  configuration command, 24
set ipv6 next-hop global IPV6_ADDRESS
  configuration command, 25
set ipv6 next-hop local IPV6_ADDRESS
  configuration command, 25
set ipv6 next-hop peer-address
  configuration command, 24
set ipv6 next-hop prefer-global
  configuration command, 24
set large-community LARGE-COMMUNITY
  configuration command, 96
set large-community LARGE-COMMUNITY
  additive
  configuration command, 96
set large-community LARGE-COMMUNITY
  LARGE-COMMUNITY
  configuration command, 96
set local-preference +LOCAL_PREF
  configuration command, 25
set local-preference -LOCAL_PREF
  configuration command, 25
set local-preference LOCAL_PREF
  configuration command, 25
set metric (0-4294967295)
  configuration command, 169
set metric <[+|-](1-4294967295)|rtt|+rtt|-rtt>
  configuration command, 25
set metric [+|-](0-4294967295)
  configuration command, 154, 161
set mode <rr|xor|active-backup|broadcast|lacp>
  <12|123|134>
  configuration command, 229
set origin ORIGIN <egp|igp|incomplete>
  configuration command, 25
set security-association lifetime second
  (120-28800)
  configuration command, 219
set sr-te color (1-4294967295)
  configuration command, 25
set table (1-4294967295)
  configuration command, 25
set tag TAG
  configuration command, 24
set transform-set IPSECTS
  configuration command, 219
set weight WEIGHT
  configuration command, 25
set-overload-bit
  configuration command, 136
show archive config <sftp|system:>
  configuration command, 32
show archive config differences
  <startup-config|running-config|sftp|system:>
  <startup-config|running-config|sftp|system:>
  configuration command, 32
show archive snapshots [sftp|system:]
  configuration command, 32
show bfd distributed
  configuration command, 56
show bfd [vrf NAME] peer
  <WORD|<A.B.C.D|X:X::X:X>
  [{multihop|local-address
  <A.B.C.D|X:X::X:X>|interface
  IFNAME}]> [json]
  configuration command, 56
show bfd [vrf NAME] peers brief [json]
  configuration command, 56
show bfd [vrf NAME] peers [json]
  configuration command, 56
show bgp <afi> <safi> neighbors WORD
  bestpath-routes [json] [wide]
  configuration command, 85
show bgp as-path-access-list WORD [json]
  configuration command, 87
show bgp as-path-access-list [json]
  configuration command, 87
show bgp community-list [NAME detail]
  configuration command, 90
show bgp extcommunity-list [NAME detail]

```

configuration command, 95
 show bgp ipv4 vpn summary
 configuration command, 104
 show bgp ipv4|ipv6 regexp LINE
 configuration command, 104
 show bgp ipv6 vpn summary
 configuration command, 104
 show bgp labelpool <chunks|inuse|ledger|requests|summary> [wide|json]
 configuration command, 103
 show bgp large-community-list
 configuration command, 96
 show bgp large-community-list NAME detail
 configuration command, 96
 show bgp listeners
 configuration command, 98
 show bgp statistics-all
 configuration command, 102
 show bgp update-groups statistics
 configuration command, 104
 show bgp update-groups
 [advertise-queue|advertised-routes|packets|queue] and history
 configuration command, 104
 show bgp X:X::X:X [json]
 configuration command, 100
 show bgp [<ipv4|ipv6>
 <unicast|vpn|labeled-unicast>]
 configuration command, 101
 show bgp [<ipv4|ipv6> vpn [route]] rd
 <all|RD>
 configuration command, 104
 show bgp [afi] [safi] statistics
 configuration command, 102
 show bgp [afi] [safi] [all] alias WORD
 [wide|json]
 configuration command, 91
 show bgp [afi] [safi] [all] dampening
 dampened-paths [wide|json]
 configuration command, 102
 show bgp [afi] [safi] [all] dampening
 flap-statistics [wide|json]
 configuration command, 102
 show bgp [afi] [safi] [all] summary
 established [json]
 configuration command, 101
 show bgp [afi] [safi] [all] summary failed
 [json]
 configuration command, 101
 show bgp [afi] [safi] [all] summary
 neighbor [PEER] [json]
 configuration command, 101
 show bgp [afi] [safi] [all] summary
 remote-as <internal|external|ASN>
 [json]

configuration command, 102
 show bgp [afi] [safi] [all] summary terse
 [json]
 configuration command, 102
 show bgp [afi] [safi] [all] summary [json]
 configuration command, 101
 show bgp [afi] [safi] [all] version
 (configuration ID: 4294967295) [wide|json]
 configuration command, 102
 show bgp [afi] [safi] [all] [wide|json]
 configuration command, 101
 show bgp [afi] [safi] [neighbor [PEER]
 [routes|advertised-routes|received-routes]
 [json]
 configuration command, 102
 show bgp [all] [wide|json [detail]]
 configuration command, 100
 show bridge (I-65535)
 configuration command, 226
 show clock [json]
 configuration command, 7
 show configuration history
 configuration command, 10
 show crypto ikev2 sa [detailed] [json]
 configuration command, 221
 show crypto ipsec sa [detailed] [json]
 configuration command, 223
 show crypto key [[KEY] [json]] [ssh]
 configuration command, 207
 show crypto pki certificate [CA]
 configuration command, 206
 show daemons status
 configuration command, 8
 show debug
 configuration command, 98
 show debugging eigrp
 configuration command, 135
 show debugging isis
 configuration command, 139
 show debugging ospf
 configuration command, 157
 show debugging rip
 configuration command, 171
 show debugging ripng
 configuration command, 173
 show hardware {cpu | disk | memory}
 configuration command, 15
 show ip access-list interfaces
 configuration command, 193
 show ip access-list [NAME] [json]
 configuration command, 193
 show ip arp [IFNAME]
 configuration command, 224
 show ip bgp A.B.C.D [json]

```

    configuration command, 100
show ip bgp large-community-info
    configuration command, 96
show ip bgp [all] [wide|json [detail]]
    configuration command, 100
show ip dhcp binding [<DHCP4POOL|A.B.C.D>]
    configuration command, 46
show ip dhcp pool
    configuration command, 46
show ip eigrp [vrf NAME] interface
    configuration command, 135
show ip eigrp [vrf NAME] neighbor
    configuration command, 135
show ip eigrp [vrf NAME] topology
    configuration command, 135
show ip igmp groups
    configuration command, 179
show ip igmp groups retransmissions
    configuration command, 179
show ip igmp interface
    configuration command, 179
show ip igmp sources
    configuration command, 179
show ip igmp sources retransmissions
    configuration command, 179
show ip igmp statistics
    configuration command, 179
show ip igmp [vrf NAME] join [json]
    configuration command, 179
show ip mroute vrf all count [json]
    configuration command, 179
show ip mroute vrf all summary [json]
    configuration command, 179
show ip mroute [vrf NAME] count [json]
    configuration command, 179
show ip mroute [vrf NAME] summary [json]
    configuration command, 179
show ip mroute [vrf NAME] [A.B.C.D
    [A.B.C.D]] [fill] [json]
    configuration command, 179
show ip msdp mesh-group
    configuration command, 180
show ip msdp peer
    configuration command, 180
show ip multicast
    configuration command, 179
show ip multicast count vrf all [json]
    configuration command, 181
show ip multicast count [vrf NAME] [json]
    configuration command, 181
show ip nat statistics
    configuration command, 185
show ip nat translations
    configuration command, 186
show ip ospf graceful-restart helper
    [detail] [json]
    configuration command, 156
show ip ospf interface [INTERFACE] [json]
    configuration command, 156
show ip ospf neighbor detail [json]
    configuration command, 156
show ip ospf neighbor INTERFACE detail
    [json]
    configuration command, 156
show ip ospf neighbor INTERFACE [json]
    configuration command, 156
show ip ospf neighbor [json]
    configuration command, 156
show ip ospf route [json]
    configuration command, 156
show ip ospf [json]
    configuration command, 156
show ip ospf [vrf <NAME|all>] database
    (asbr-summary|external|network|router|summary)
    adv-router ADV-ROUTER [json]
    configuration command, 156
show ip ospf [vrf <NAME|all>] database
    (asbr-summary|external|network|router|summary)
    LINK-STATE-ID adv-router ADV-ROUTER
    [json]
    configuration command, 156
show ip ospf [vrf <NAME|all>] database
    (asbr-summary|external|network|router|summary)
    LINK-STATE-ID self-originate [json]
    configuration command, 156
show ip ospf [vrf <NAME|all>] database
    (asbr-summary|external|network|router|summary)
    LINK-STATE-ID [json]
    configuration command, 156
show ip ospf [vrf <NAME|all>] database
    (asbr-summary|external|network|router|summary)
    self-originate [json]
    configuration command, 156
show ip ospf [vrf <NAME|all>] database
    (asbr-summary|external|network|router|summary)
    [json]
    configuration command, 156
show ip ospf [vrf <NAME|all>] database
    max-age [json]
    configuration command, 156
show ip ospf [vrf <NAME|all>] database
    self-originate [json]
    configuration command, 156
show ip ospf [vrf <NAME|all>] database
    [json]
    configuration command, 156
show ip pim assert
    configuration command, 180

```


show ip pim assert-internal
 configuration command, 180
 show ip pim assert-metric
 configuration command, 180
 show ip pim assert-winner-metric
 configuration command, 180
 show ip pim bsm-database
 configuration command, 181
 show ip pim bsr
 configuration command, 181
 show ip pim bsrp-info
 configuration command, 181
 show ip pim group-type
 configuration command, 180
 show ip pim interface
 configuration command, 180
 show ip pim join
 configuration command, 180
 show ip pim local-membership
 configuration command, 180
 show ip pim mlag summary
 configuration command, 181
 show ip pim mlag summary [json]
 configuration command, 180
 show ip pim mlag [vrf NAME|all] interface
 [detail|WORD] [json]
 configuration command, 180
 show ip pim neighbor
 configuration command, 180
 show ip pim nexthop
 configuration command, 180
 show ip pim nexthop-lookup
 configuration command, 180
 show ip pim rp-info
 configuration command, 180
 show ip pim rpf
 configuration command, 180
 show ip pim secondary
 configuration command, 180
 show ip pim state
 configuration command, 181
 show ip pim upstream-join-desired
 configuration command, 181
 show ip pim upstream-rpf
 configuration command, 181
 show ip pim [vrf NAME] mlag upstream
 [A.B.C.D [A.B.C.D]] [json]
 configuration command, 181
 show ip pim [vrf NAME] upstream [A.B.C.D
 [A.B.C.D]] [json]
 configuration command, 181
 show ip prefix-list detail NAME [json]
 configuration command, 21
 show ip prefix-list detail [json]
 configuration command, 21
 show ip prefix-list NAME A.B.C.D/M
 configuration command, 21
 show ip prefix-list NAME A.B.C.D/M
 first-match
 configuration command, 21
 show ip prefix-list NAME A.B.C.D/M longer
 configuration command, 21
 show ip prefix-list NAME seq NUM [json]
 configuration command, 21
 show ip prefix-list NAME [json]
 configuration command, 21
 show ip prefix-list summary NAME [json]
 configuration command, 21
 show ip prefix-list summary [json]
 configuration command, 21
 show ip prefix-list [json]
 configuration command, 21
 show ip rip
 configuration command, 171
 show ip rip status
 configuration command, 171
 show ip ripng
 configuration command, 173
 show ip ssh client known-host
 <A.B.C.D|X:X::X:X|HOST>
 configuration command, 6
 show ip ssh pubkey-chain [verbose] [USER]
 configuration command, 6
 show ipv6 access-list [NAME] [json]
 configuration command, 193
 show ipv6 nd ra-interfaces [vrf
 <VRFNAME|all>]
 configuration command, 39
 show ipv6 ospf6 graceful-restart helper
 [detail] [json]
 configuration command, 163
 show ipv6 ospf6 summary-address [detail]
 [json]
 configuration command, 160
 show ipv6 ospf6 zebra [json]
 configuration command, 163
 show ipv6 ospf6 [vrf <NAME|all>] database
 adv-router A.B.C.D linkstate-id
 A.B.C.D [json]
 configuration command, 163
 show ipv6 ospf6 [vrf <NAME|all>] database
 self-originated [json]
 configuration command, 163
 show ipv6 ospf6 [vrf <NAME|all>] database
 [<detail|dump|internal>] [json]
 configuration command, 162
 show ipv6 ospf6 [vrf <NAME|all>] interface
 traffic [json]

```

configuration command, 163
show ipv6 ospf6 [vrf <NAME|all>]
  interface [IFNAME] prefix
  [detail|<X:X::X:X|X:X::X:X/M>
  [<match|detail>]] [json]
  configuration command, 163
show ipv6 ospf6 [vrf <NAME|all>] interface
  [json]
  configuration command, 163
show ipv6 ospf6 [vrf <NAME|all>] neighbor
  [json]
  configuration command, 163
show ipv6 ospf6 [vrf <NAME|all>] route
  X:X::X:X/M match [detail] [json]
  configuration command, 163
show ipv6 ospf6 [vrf <NAME|all>] route
  [<intra-area|inter-area|external-1|external-2|X:X::X:X|X:X::X:X/M|detail|summary>]
  [json]
  configuration command, 163
show ipv6 ospf6 [vrf <NAME|all>] spf tree
  [json]
  configuration command, 163
show ipv6 ospf6 [vrf <NAME|all>] [json]
  configuration command, 162
show ipv6 route ospf6
  configuration command, 163
show isis database [detail] [LSPID]
  configuration command, 138
show isis hostname
  configuration command, 138
show isis interface [detail] [IFNAME]
  configuration command, 138
show isis neighbor [detail] [SYSTEMID]
  configuration command, 138
show isis route [level-1|level-2]
  [prefix-sid|backup]
  configuration command, 138
show isis summary
  configuration command, 138
show isis topology [level-1|level-2]
  configuration command, 138
show license
  configuration command, 48
show log all [follow]
  configuration command, 28
show log frr [follow]
  configuration command, 29
show log ipsec [follow]
  configuration command, 29
show log kernel [follow]
  configuration command, 29
show log mender [follow]
  configuration command, 28
show log ntpd [follow]
  configuration command, 28
show log snmpd [follow]
  configuration command, 28
show log soolog [follow]
  configuration command, 28
show log ssh [follow]
  configuration command, 28
show log vpp [follow]
  configuration command, 29
show login blocked-ips
  configuration command, 5
show login failures
  configuration command, 4
show memory control-plane
  configuration command, 16
show memory control-plane details
  configuration command, 16
show mpls ldp discovery [detail]
  configuration command, 131
show mpls ldp ipv4 discovery [detail]
  configuration command, 131
show mpls ldp ipv4 interface
  configuration command, 131
show mpls ldp ipv4|ipv6 binding
  configuration command, 131
show mpls ldp ipv6 discovery [detail]
  configuration command, 131
show mpls ldp ipv6 interface
  configuration command, 131
show mpls ldp neighbor [A.B.C.D]
  configuration command, 131
show mpls ldp neighbor [A.B.C.D]
  capabilities
  configuration command, 131
show mpls ldp neighbor [A.B.C.D] detail
  configuration command, 131
show ntp sources stats
  configuration command, 38
show ntp sources [json]
  configuration command, 37
show policy-map [NAME]
  configuration command, 189
show processes
  configuration command, 10
show processes detailed process-id (0-
  1000000)
  configuration command, 12
show processes memory
  configuration command, 13
show route-map [WORD] [json]
  configuration command, 23

```

```

show system service status SERVICE
    configuration command, 34
show thread cpu control-plane [details
    [r|w|t|e|x]]
    configuration command, 18
show users
    configuration command, 5
show version
    configuration command, 10
show vrf
    configuration command, 195
show wireguard [(1-1024) PEER] stats [json]
    configuration command, 211
show wireguard [(1-1024) PEER] [json]
    configuration command, 209
show [ip] bgp <ipv4|ipv6> community-list
    WORD
    configuration command, 103
show [ip] bgp <ipv4|ipv6> community-list
    WORD exact-match
    configuration command, 103
show [ip] bgp <ipv4|ipv6> large-community
    configuration command, 103
show [ip] bgp <ipv4|ipv6> large-community
    LARGE-COMMUNITY
    configuration command, 103
show [ip] bgp <ipv4|ipv6> large-community
    LARGE-COMMUNITY exact-match
    configuration command, 103
show [ip] bgp <ipv4|ipv6> large-community
    LARGE-COMMUNITY json
    configuration command, 103
show [ip] bgp <ipv4|ipv6>
    large-community-list WORD
    configuration command, 104
show [ip] bgp <ipv4|ipv6>
    large-community-list WORD
    exact-match
    configuration command, 104
show [ip] bgp <ipv4|ipv6>
    large-community-list WORD json
    configuration command, 104
show [ip] bgp <ipv4|ipv6> [all] community
    COMMUNITY exact-match [wide|json]
    configuration command, 103
show [ip] bgp <ipv4|ipv6> [all] community
    COMMUNITY [wide|json]
    configuration command, 103
show [ip] bgp <ipv4|ipv6> [all] community
    [wide|json]
    configuration command, 103
show [ip] bgp ipv4 vpn
    configuration command, 104
show [ip] bgp ipv6 vpn
    configuration command, 104
show [ip] bgp peer-group [json]
    configuration command, 86
show [ip] bgp regexp LINE
    configuration command, 101
show [ip] bgp view NAME
    configuration command, 67
show [ip] bgp [afi] [safi] [all] cidr-only
    [wide|json]
    configuration command, 102
show [ip] bgp [afi] [safi]
    [all] neighbors A.B.C.D
    [advertised-routes|received-routes|filtered-routes]
    [json|wide]
    configuration command, 102
show [ip] bgp [all] summary [wide] [json]
    configuration command, 101
snmp-server user USER auth <md5|sha>
    PASSWORD [priv des56 PRIV]
    configuration command, 35
source A.B.C.D, 42
    configuration command, 42
source-ip <A.B.C.D|X:X::X:X>
    configuration command, 198
spf-interval [level-1 | level-2] (1-120)
    configuration command, 137
subject-alt-name LINE
    configuration command, 202
subject-name LINE...
    configuration command, 202
summary-address X:X::X:X/M no-advertise
    configuration command, 159
summary-address X:X::X:X/M [tag
    (1-4294967295)] [{metric
    (0-16777215) | metric-type (1-2)}]
    configuration command, 159
system service enable soomon
    configuration command, 34
system service restart SERVICE
    configuration command, 34
system tune apply default
    configuration command, 55
system tune apply PROFILE
    configuration command, 55
system tune profile TPROF
    configuration command, 51
system update enable
    configuration command, 29
system update inventory-poll-interval (5-
    2147483647)
    configuration command, 29
system update offline commit
    configuration command, 30
system update offline install ARTIFACT

```

configuration command, 30
system update offline list
configuration command, 30
system update server-url WORD
configuration command, 29
system update update-poll-interval
2147483647)
configuration command, 29

T

table-map ROUTE-MAP-NAME
configuration command, 80
tcp syn-flood limit (1-4294967295)
configuration command, 34
terminal colorize
configuration command, 9
terminal length (0-0-4294967295), 9
configuration command, 9
timers basic UPDATE TIMEOUT GARBAGE
configuration command, 170
timers throttle spf (0-600000) (0-600000) (0-
600000)
configuration command, 149, 158
transmit-interval (10-60000)
configuration command, 56
transport udp (1-65535), 42
configuration command, 42
tunnel destination <A.B.C.D|X:X::X:X>
configuration command, 196
tunnel mode gre
configuration command, 196
tunnel mode gre multipoint
configuration command, 196
tunnel mode ipip
configuration command, 196
tunnel mode ipip multipoint
configuration command, 196
tunnel mode ipsec
configuration command, 196
tunnel protection ipsec profile
IPSECPROFILE
configuration command, 196
tunnel source <A.B.C.D|X:X::X:X>
configuration command, 196
tunnel vrf VRF
configuration command, 196

U

update-delay MAX-DELAY
configuration command, 80
update-delay MAX-DELAY ESTABLISH-WAIT
configuration command, 80
user password
configuration command, 4

username USER
configuration command, 5

V

version VERSION
(5- configuration command, 167
vrf (VRF_NAME)
configuration command, 194
vrf VRF
configuration command, 208

W

wireguard mode <normal|routing>
configuration command, 209
wireguard peer PEER
configuration command, 208
wireguard port (1000-65535)
configuration command, 208
wireguard private-key X25519KEY
configuration command, 208
wireguard source A.B.C.D
configuration command, 208
write erase [A.B.C.D/M A.B.C.D]
configuration command, 9
write file
configuration command, 9
write terminal
configuration command, 9
write-multiplier (1-100)
configuration command, 150, 159
write-quanta (1-64)
configuration command, 100